
Thank you for purchasing the EVA DRESSING TABLE & STOOL. Please read the instructions carefully to ensure safe operation of the product.

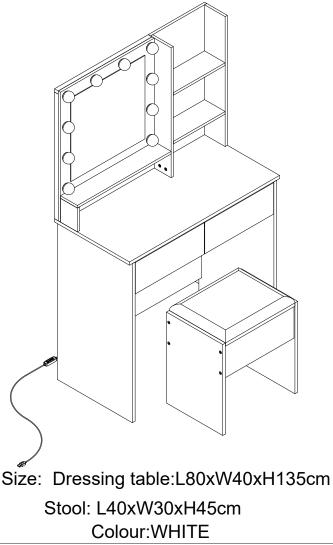



**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION**: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

#### **Tools Required**

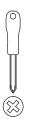

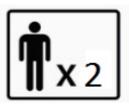



#### IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

#### INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.

When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.

Check the pack and make sure you have all the parts listed.

Ensure that this product is fully assembled as illustrated before use.

Check all screws or bolts are tightened and inspect regularly

This product should only be used on firm, level ground.

Keep small parts out of reach of children.

Make sure the legs remain in contact with the ground.

Tools not included.

#### WARNINGS

DO NOT use power tools to construct this product.

DO NOT use this product if parts are missing, damaged or worn.

DO NOT stand on the product.

DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are used to prevent such items damaging your dresser top

If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier We recommend the use of the wall strap provided for safety reasons. If in doubt please consult a qualified tradesperson.


Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.


#### CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.


To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

When cleaning glass panels or mirrors use a damp cloth with washing up liquid or soft soap if necessary; Do not use washing powders or any other substances containing abrasives, as these may scratch the glass

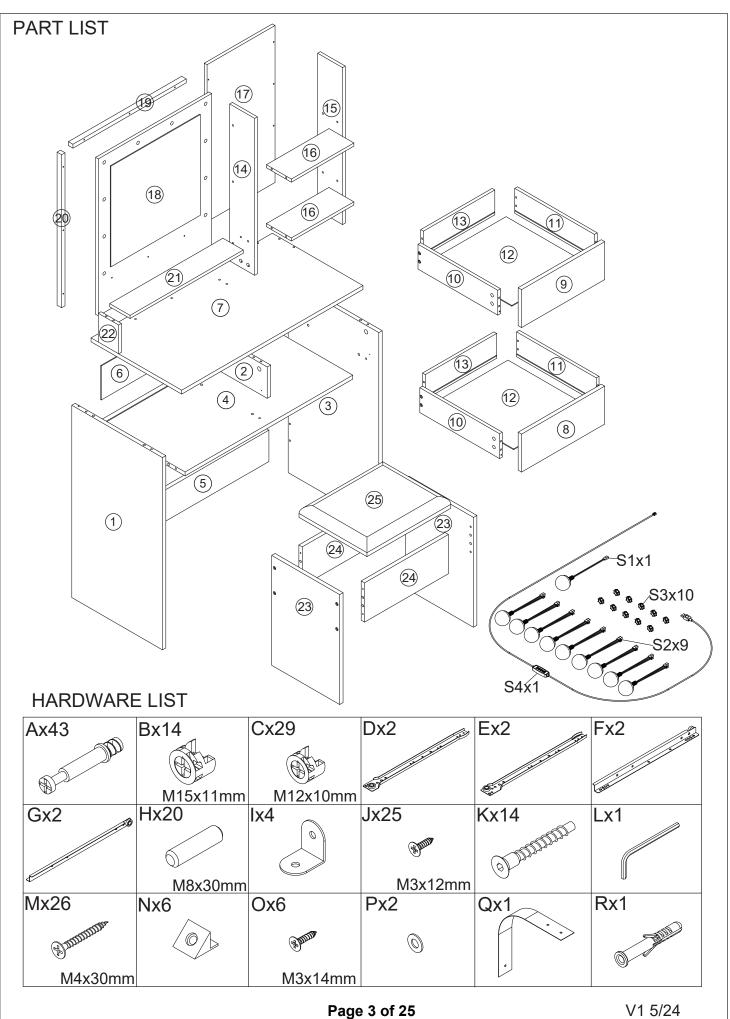


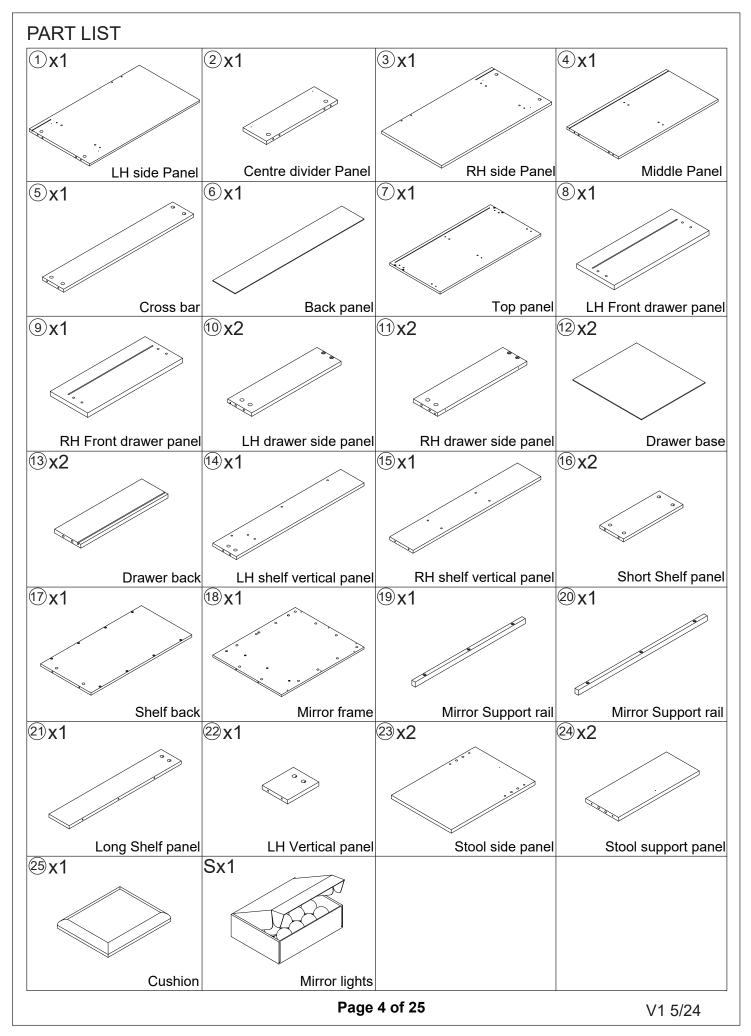


# Instructons For Fastening CAM-BOLT AND CAM-LOCK

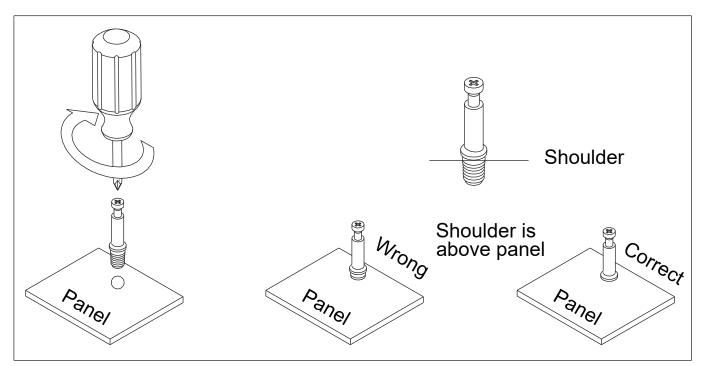


Attach the Cam-bolt to the specific pre-drilled holes on the panel. Use a Phillips Screwdriver to tghten Cam-bolt vertcally untl shoulder is flushed (on the same level) with panel. Do not over-tghten or under-tghten.

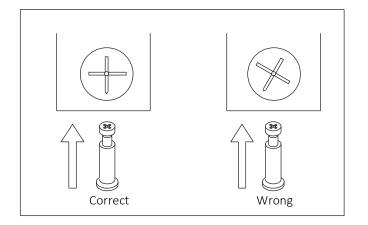



Align the arrow of the Cam-lock to the Cam-bolt head and insert the Cam-lock.

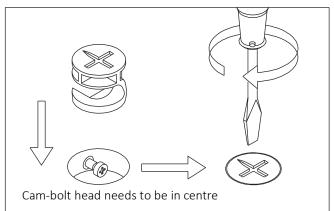



Use a Flat Screwdriver or Phillips Screwdriver to turn the Cam-lock clockwise one half a turn so it locks onto the head of the Cam-lock. Turn only until it is snug. Over-tightening could damage Cam-lock or/and Cambolt.

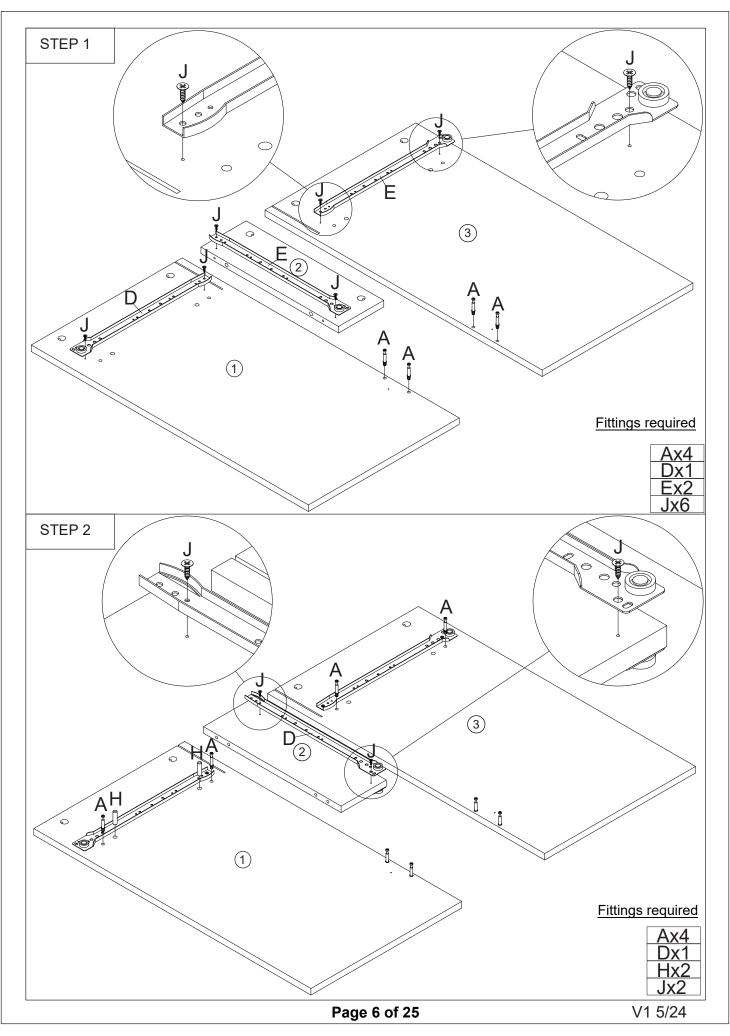


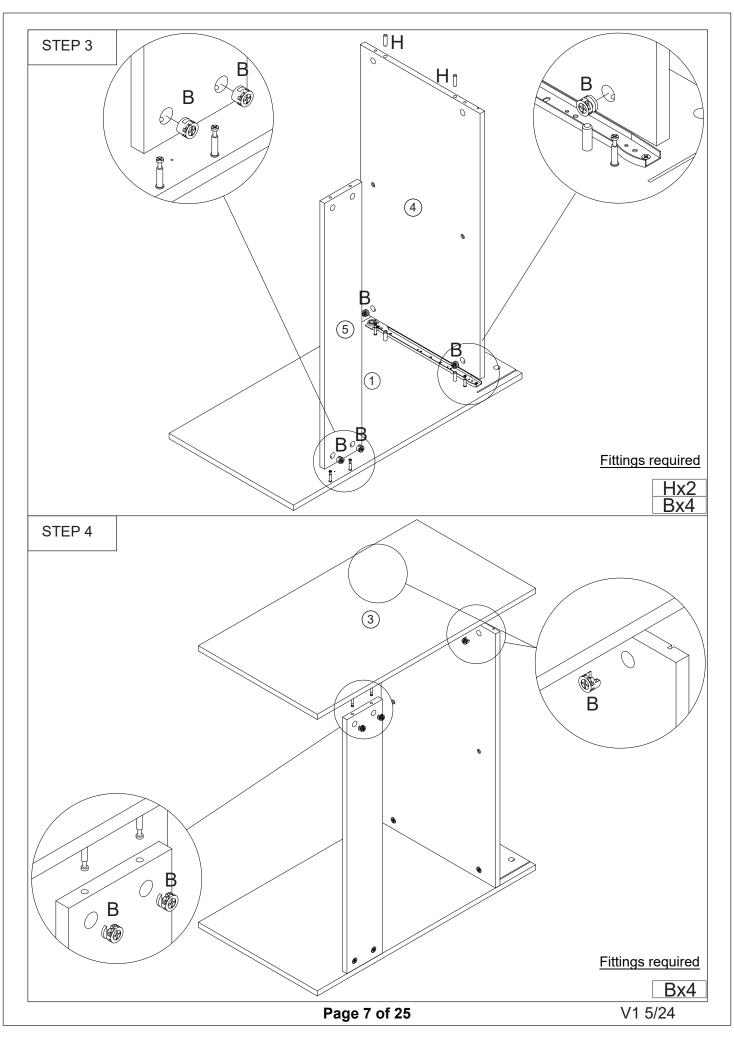


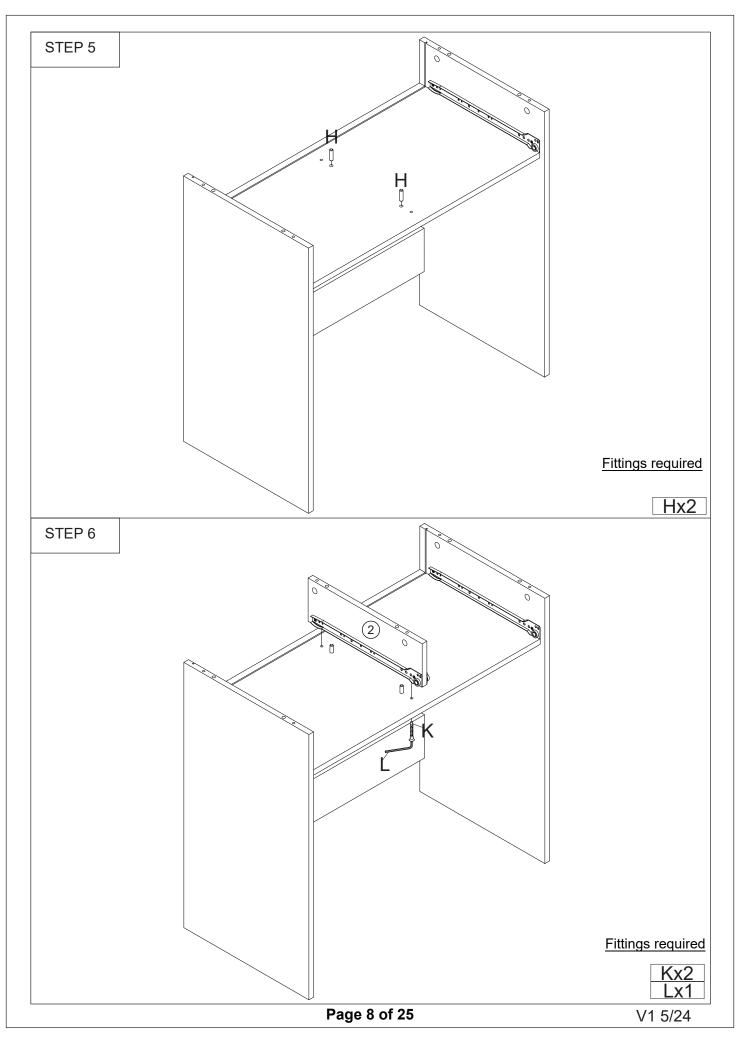


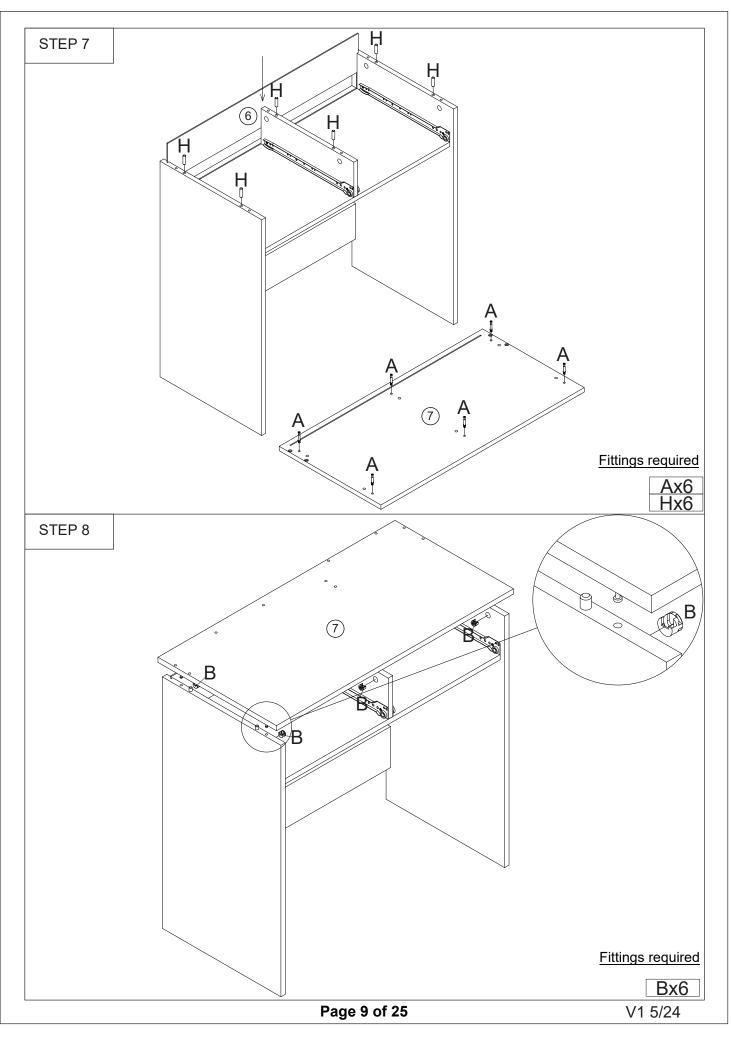


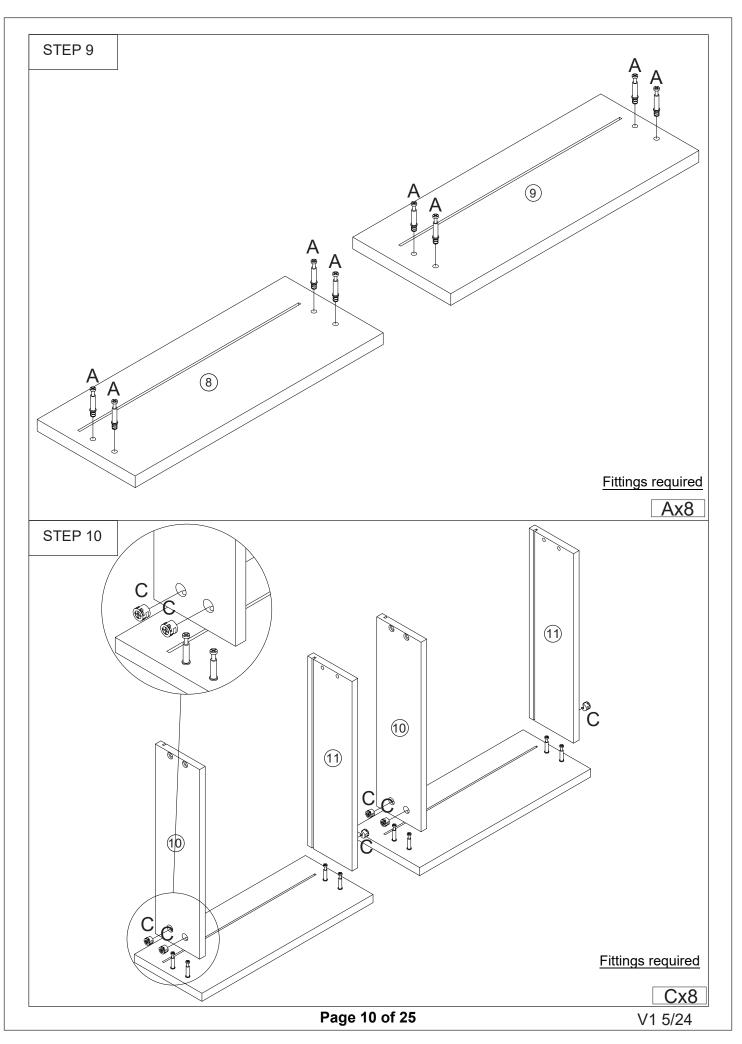


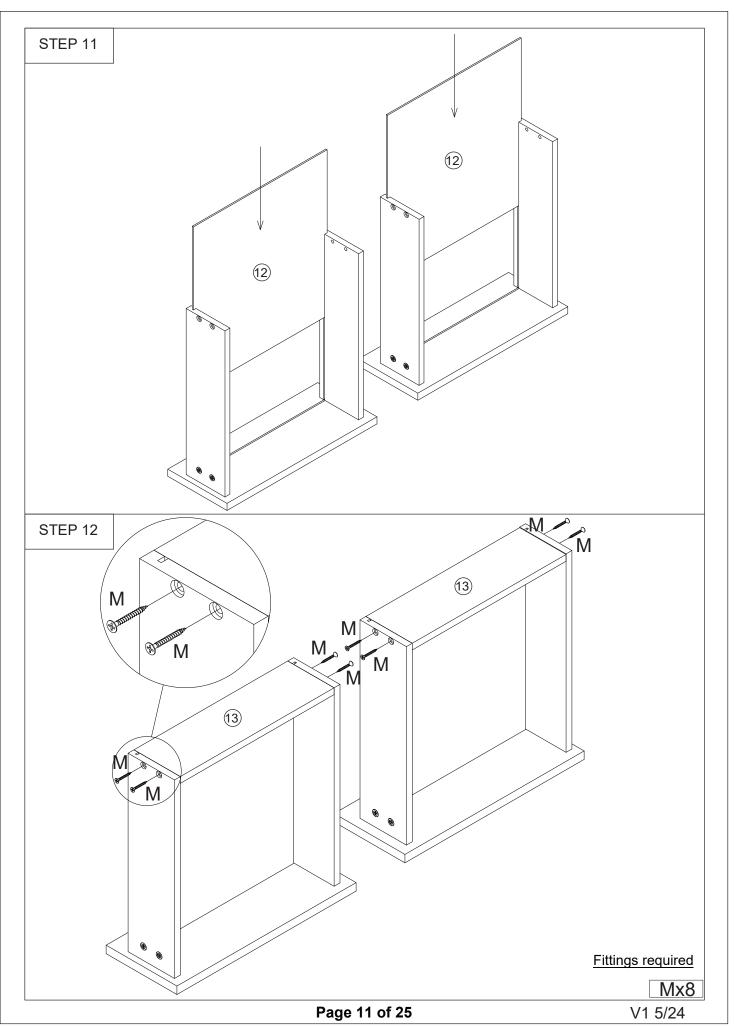


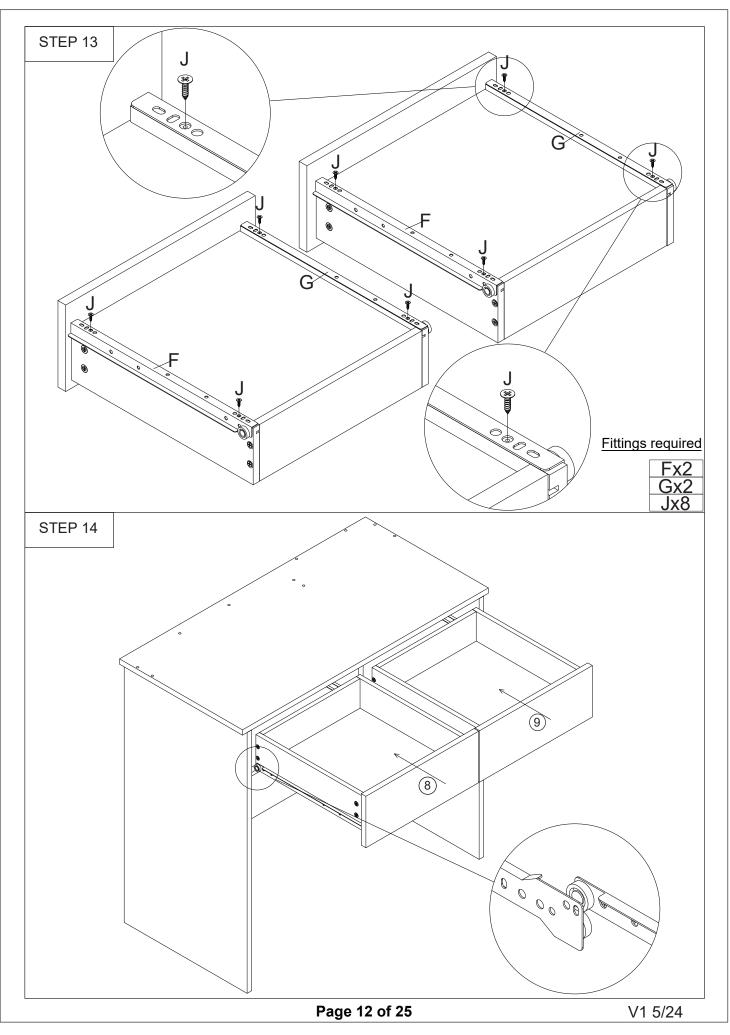


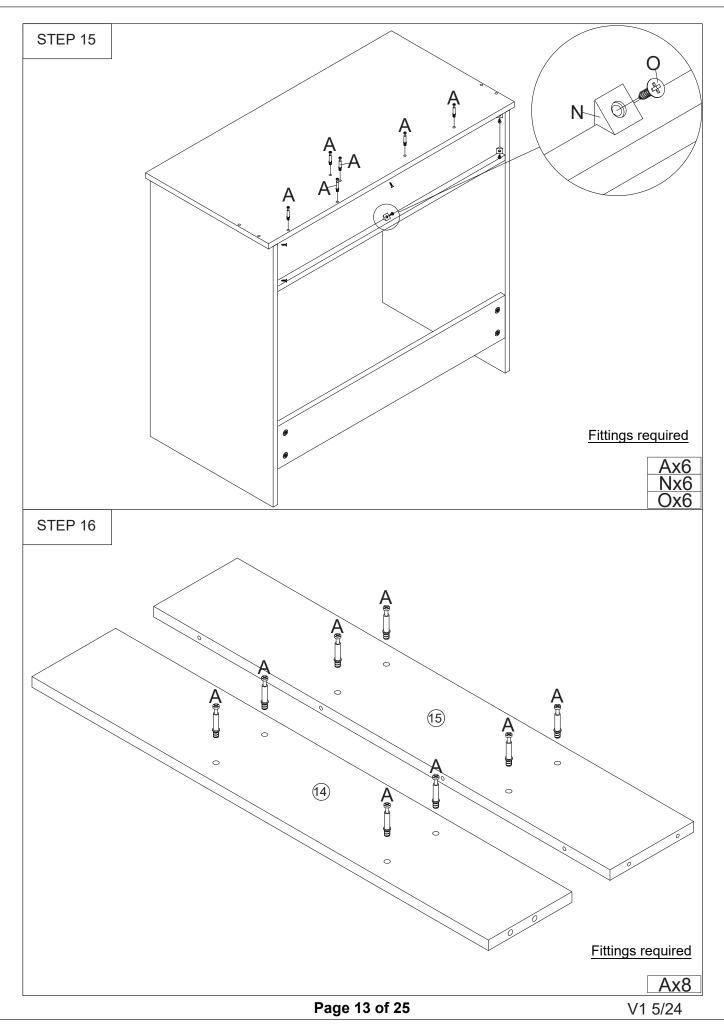


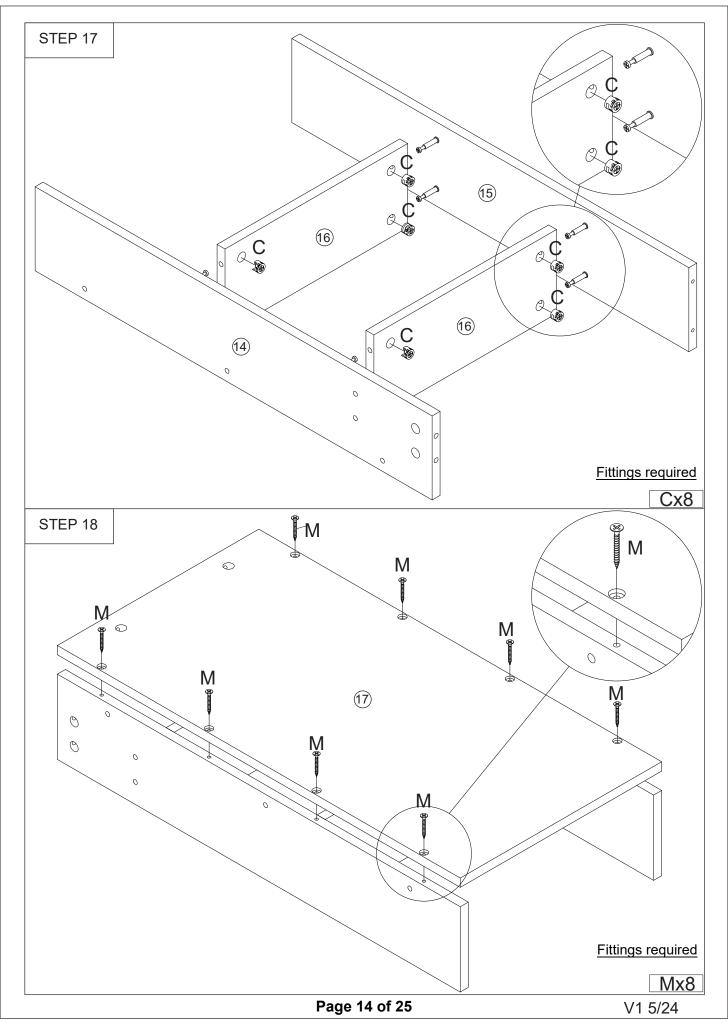


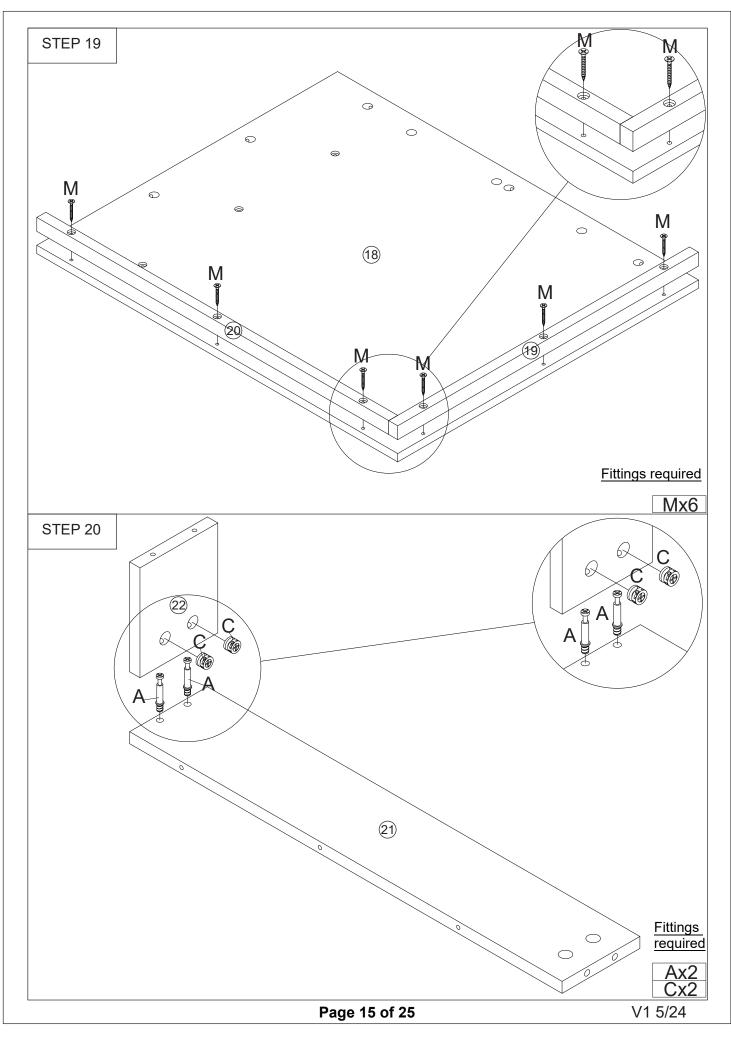


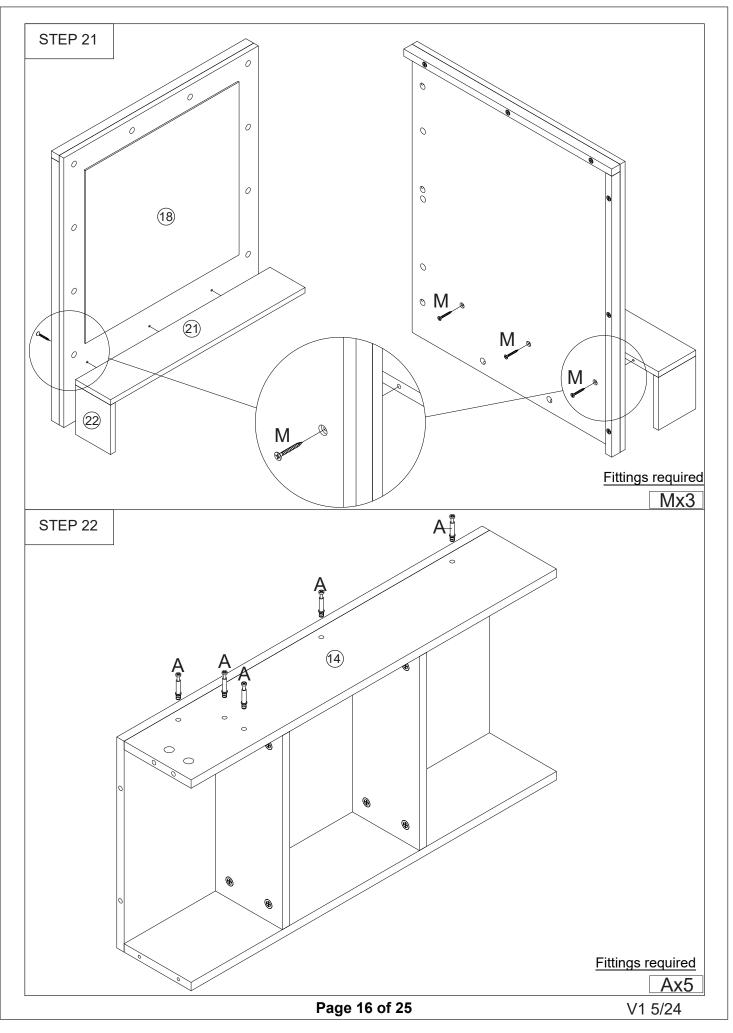

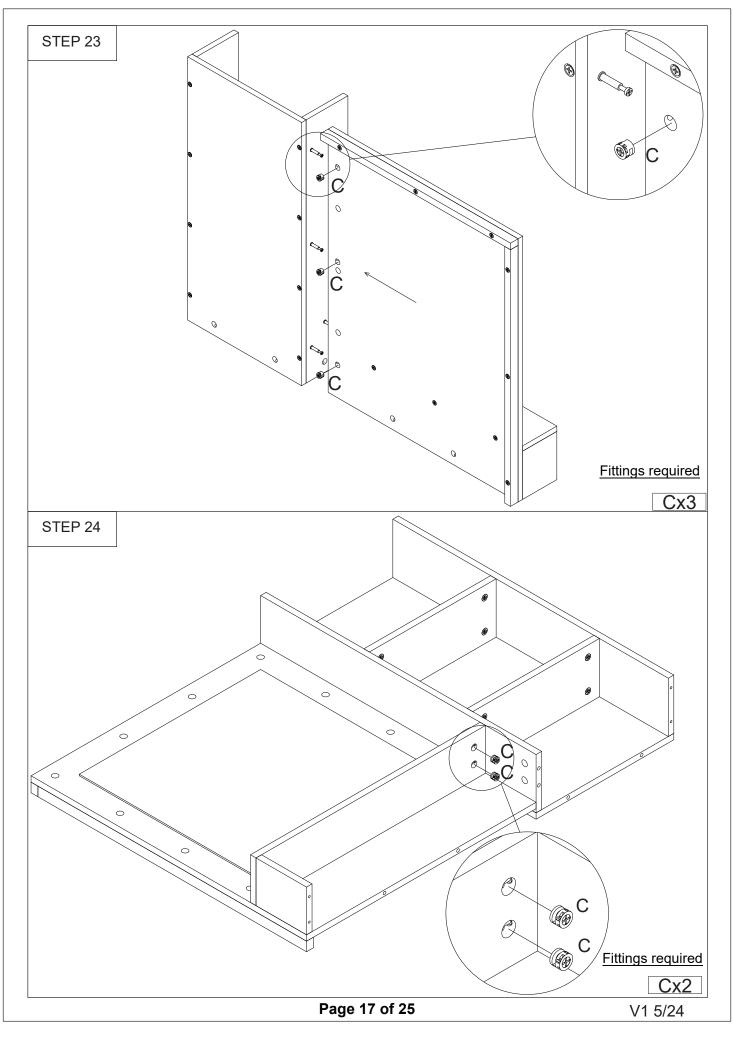

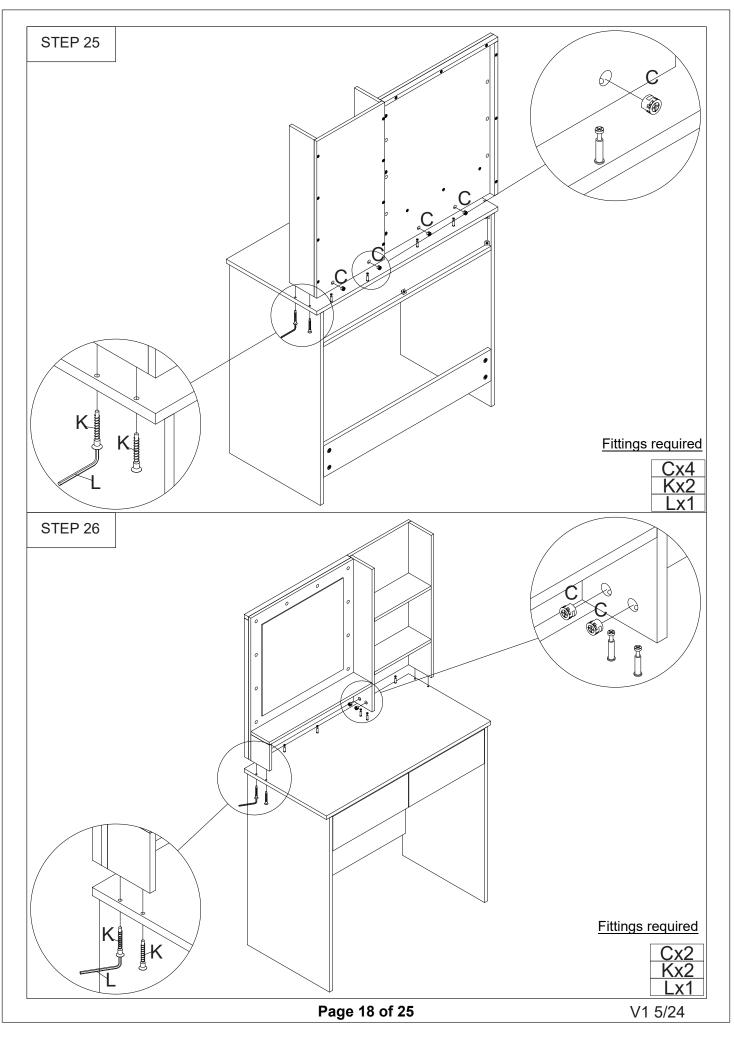

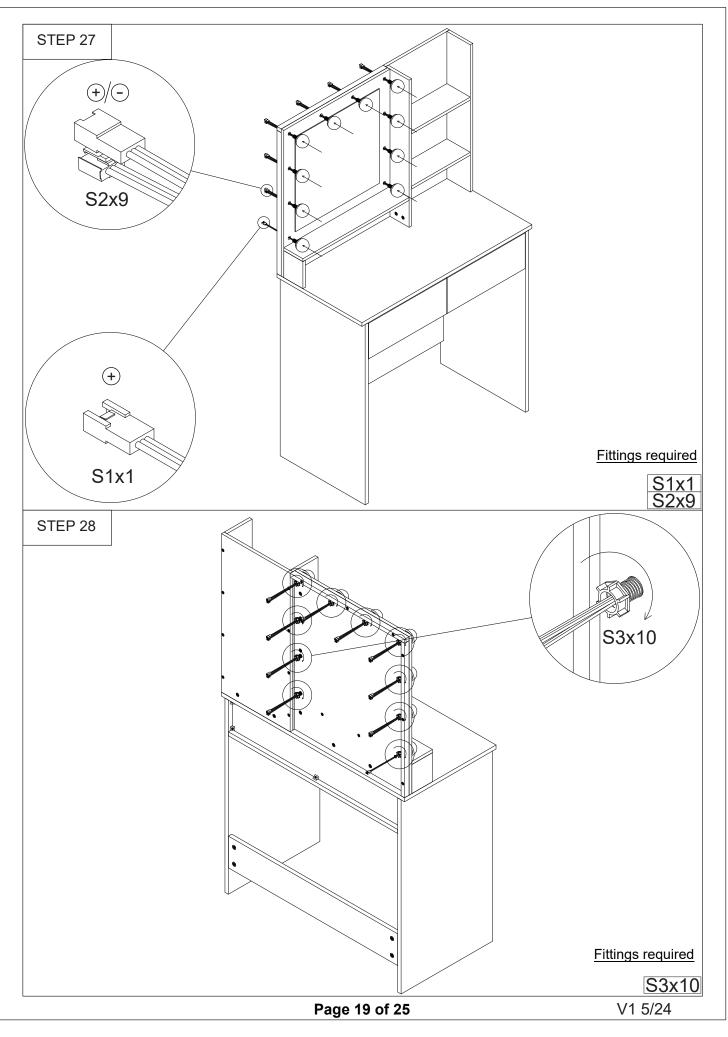

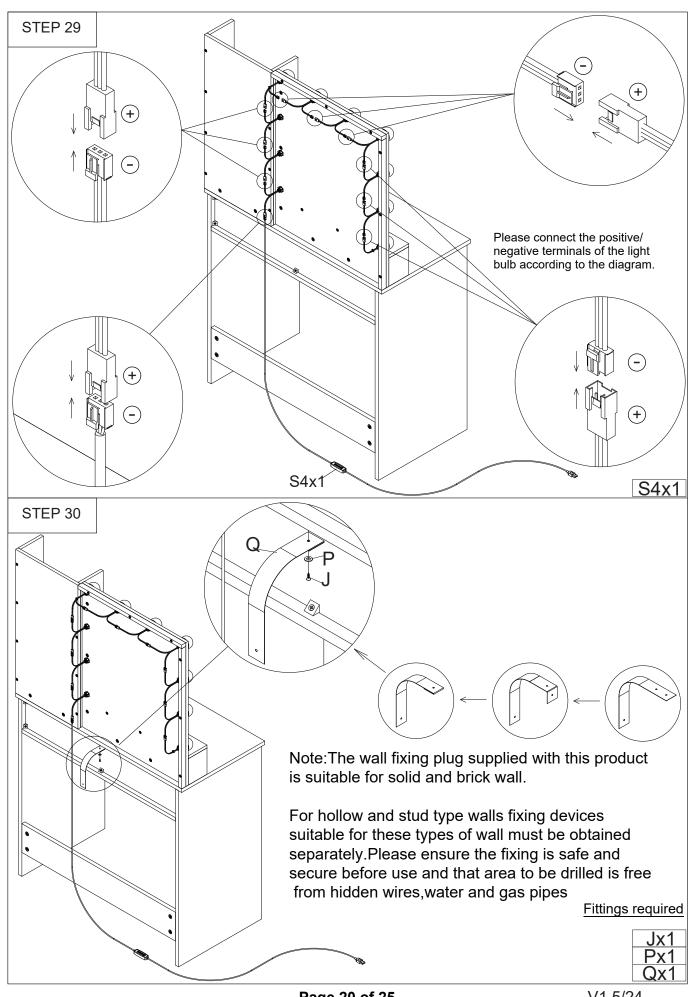

Page 20 of 25

V1 5/24

