
NEVADA VANITY DRESSING TABLE SET ASSEMBLY INSTRUCTIONS WHITE GLOSS

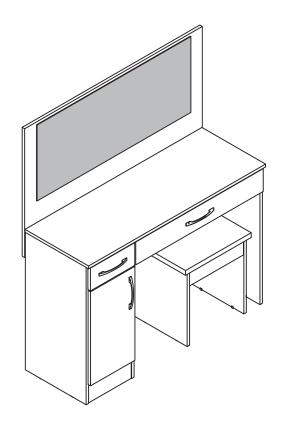





* You should assemble this product with two people






IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

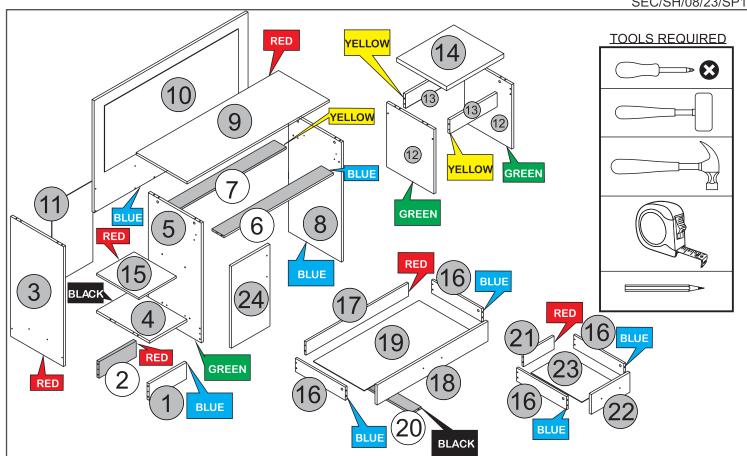


PARTS LIST


Please Note:


The below parts have all been stamped with the part number/color to help identify them during assembly.

Part Numer	Part Code	Part Description	Quantity	Carton
1	S100-107-020-SP1-01	Front Baseboard - BLUE	1	1/2
2	S100-107-020-SP1-02	Back Baseboard - RED	1	1/2
3	S100-107-020-SP1-03	Left Side Panel- RED	1	1/2
4	S100-107-020-SP1-04	Base Panel - BLACK	1	1/2
5	S100-107-020-SP1-05	Left Divison Panel - GREEN	1	1/2
6	S100-107-020-SP1-06	Front Crossbar - BLUE	1	1/2
7	S100-107-020-SP1-07	Back Crossbar - YELLOW	1	1/2
8	S100-107-020-SP1-08	Right Side Panel - BLUE	1	1/2
9	S100-107-020-SP1-09	Top Panel - RED	1	1/2
10	S100-107-020-SP1-10	Mirror Panel - BLUE	1	2/2
11	S100-107-020-SP1-11	Back Panel	1	1/2
12	S100-107-020-SP1-12	Stool Side Panel - GREEN	2	1/2
13	S100-107-020-SP1-13	Stool Crosspiece - YELLOW	2	1/2
14	S100-107-020-SP1-14	Stool Seat	1	1/2
15	S100-107-020-SP1-15	Shelf - RED	1	1/2
16	S100-107-020-SP1-16	Drawer Side - BLUE	4	1/2
17	S100-107-020-SP1-17	Large Drawer Back Panel - RED	1	1/2
18	S100-107-020-SP1-18	Large Drawer Front	1	1/2
19	S100-107-020-SP1-19	Large Drawer Bottom	1	1/2
20	S100-107-020-SP1-20	Drawer Bottom Support Bar - BLACK	1	1/2
21	S100-107-020-SP1-21	Small Drawer Back Panel - RED	1	1/2
22	S100-107-020-SP1-22	Small Drawer Front	1	1/2
23	S100-107-020-SP1-23	Small Drawer Bottom	1	1/2
24	S100-107-020-SP1-24	Door	1	1/2

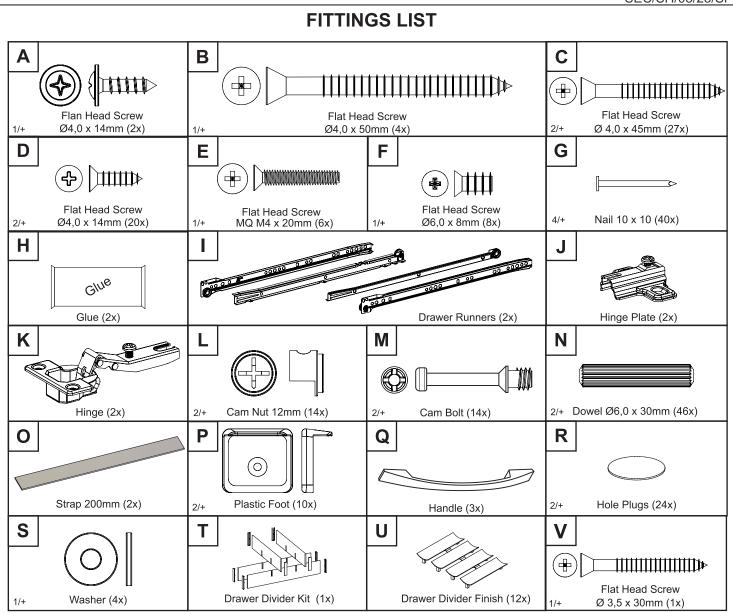


TIPS FOR FITTINGS CAM-LOCKS

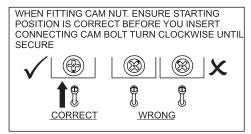

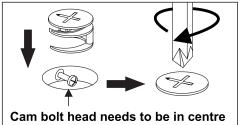

CAMBOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example beside)





3 - LEFT SIDE PANEL (RED) x1

HARDWARE REQUIRED












TOOLS REQUIRED



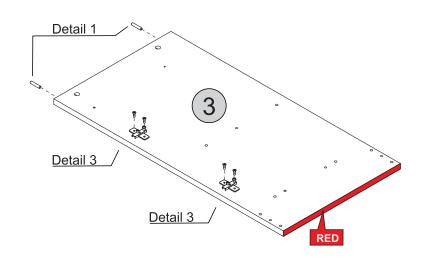

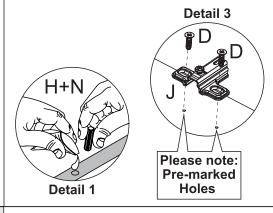

STEP 2

PARTS REQUIRED

3 - LEFT SIDE PANEL (RED) x1


HARDWARE REQUIRED


F Ø6,0 x 8mm 02


G ⊨ 02









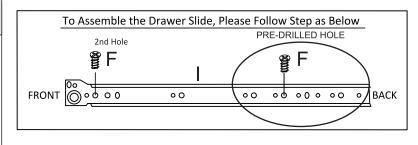

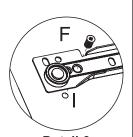

Detail 6

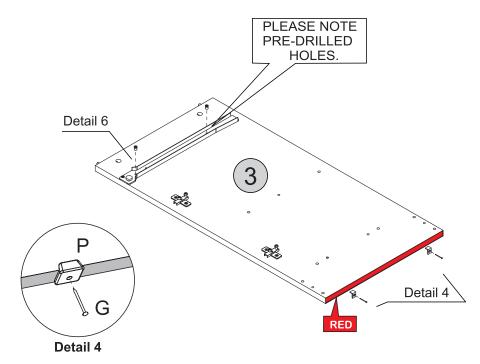

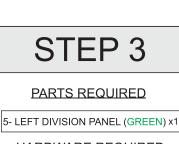

HARDWARE REQUIRED

⊕ | | | | F 02 Ø6,0 x 8mm


Η 01


Right 01


Ν 02 Ø6,0 x 30mm

TOOLS REQUIRED






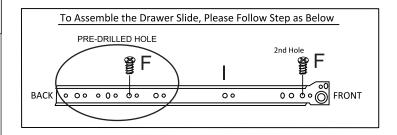

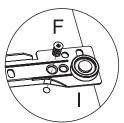

Detail 6

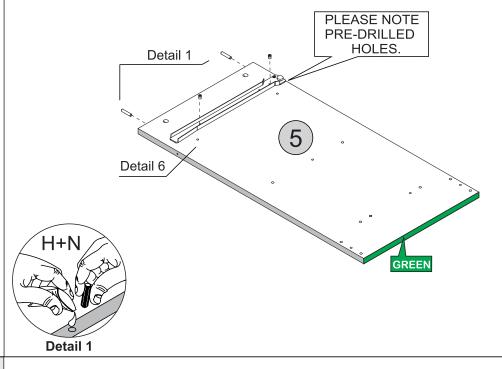

STEP 4

PARTS REQUIRED

5- LEFT DIVISION PANEL (GREEN) x1


HARDWARE REQUIRED


Ø6,0 x 8mm F 02


G 02


01

Ρ 02 ⊚∥







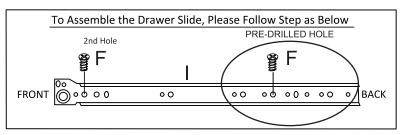






Detail 6

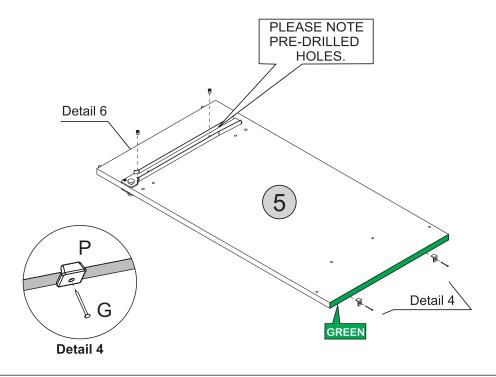

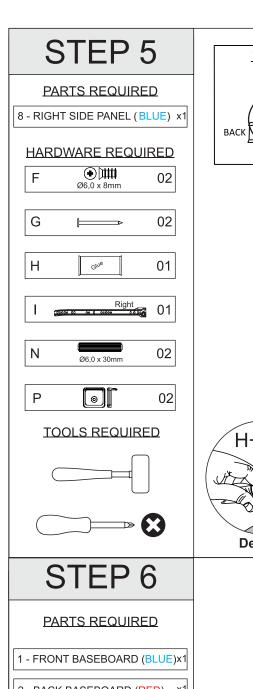

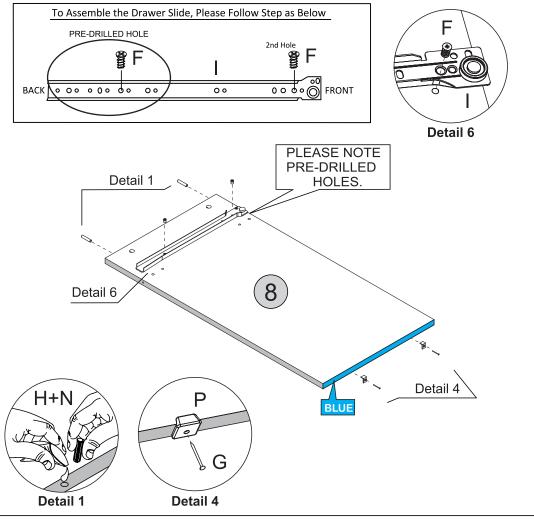

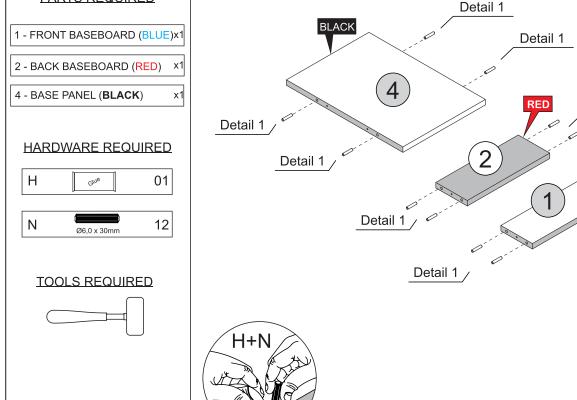

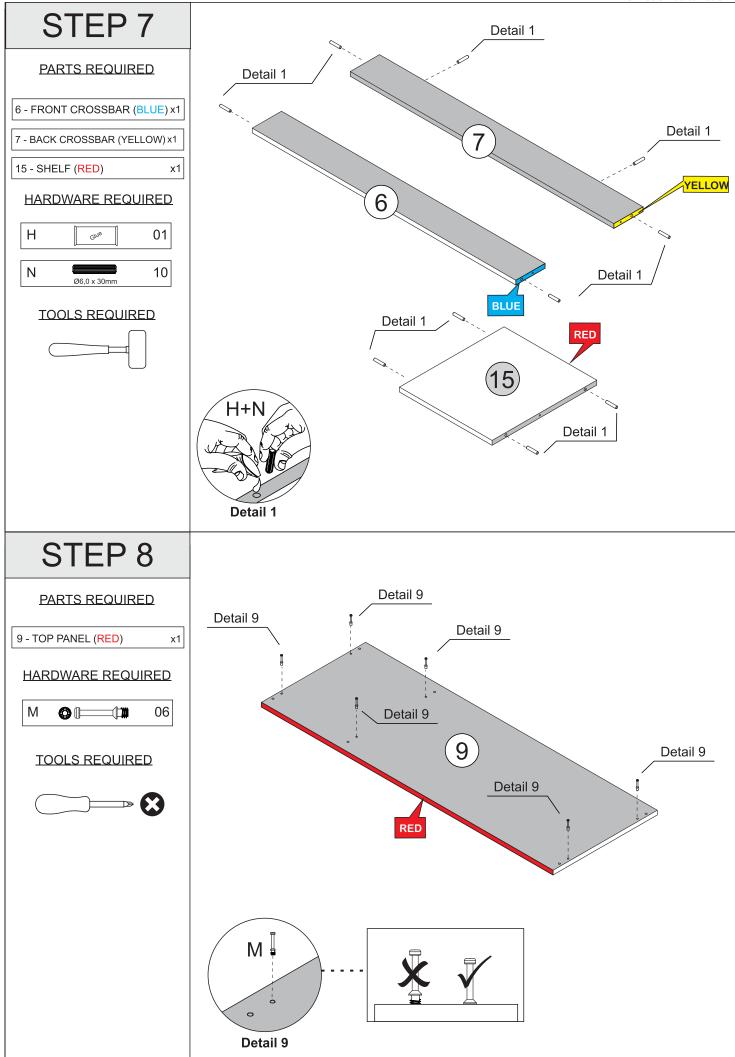

PARTS REQUIRED


HARDWARE REQUIRED

TOOLS REQUIRED


5 - LEFT DIVISION PANEL(GREEN)x1

6 - FRONT CROSSBAR (BLUE) x1

C ⊕ ₩ 04 Ø4,0 x 45mm 04





7 - BACK CROSSBAR (YELLOW) x1
8 - RIGHT SIDE PANEL (BLUE) x1

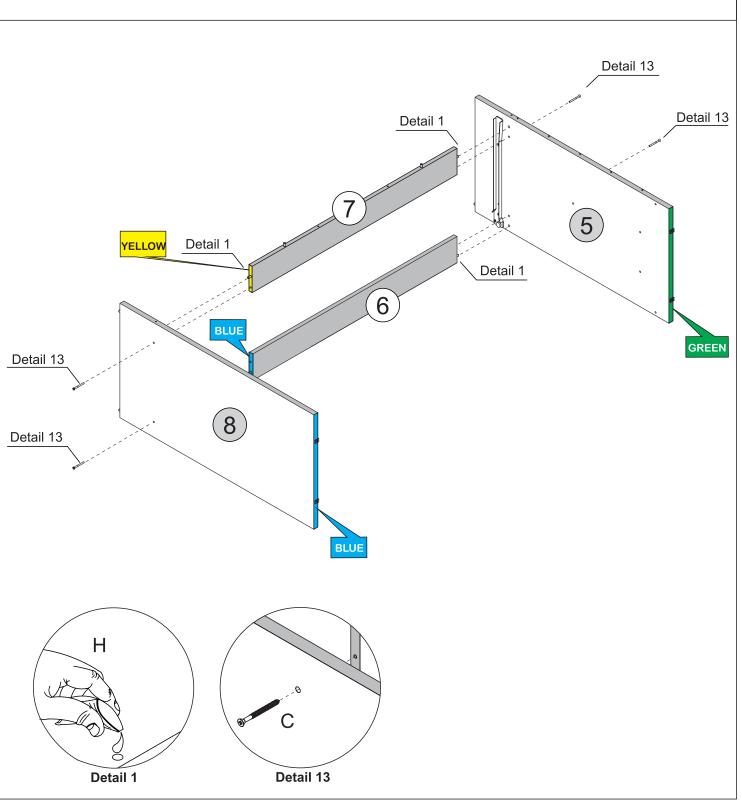



PARTS REQUIRED


HARDWARE REQUIRED








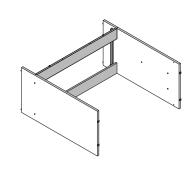

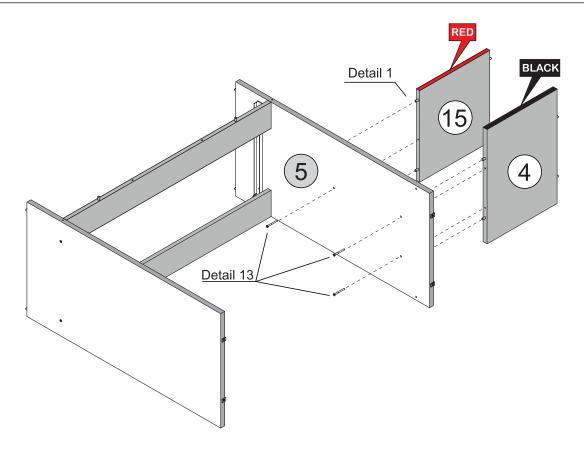

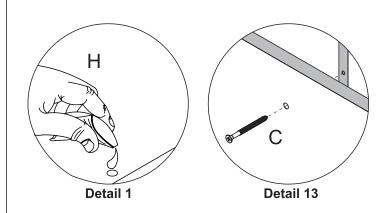


PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED





2 - BACK BASEBOARD (RED) ×1





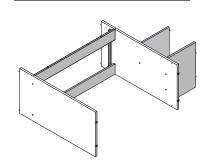

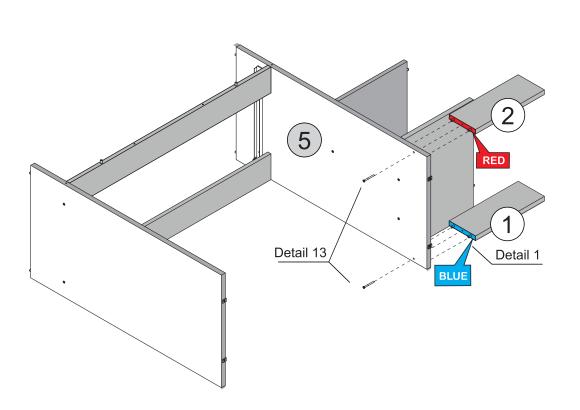


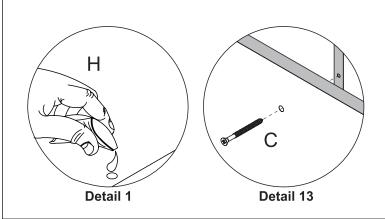



PARTS REQUIRED


HARDWARE REQUIRED








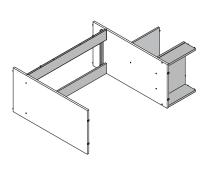

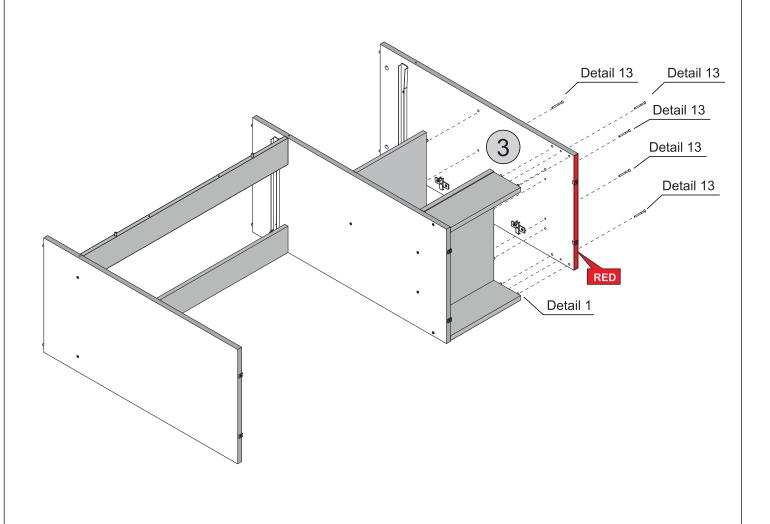


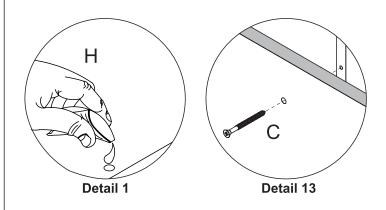


PARTS REQUIRED


HARDWARE REQUIRED








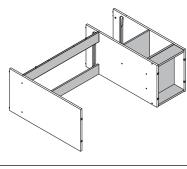

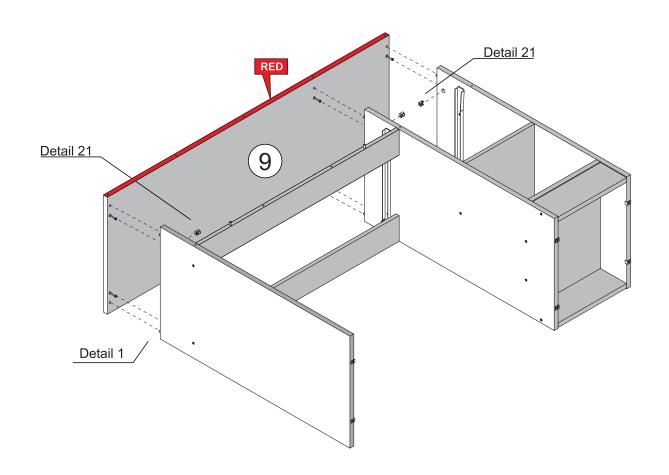


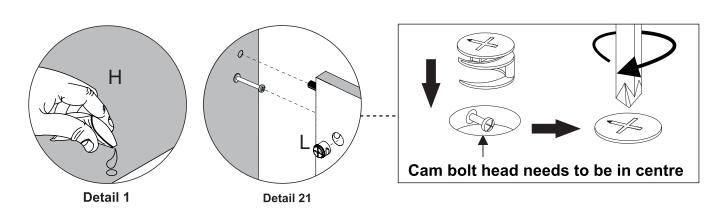



PARTS REQUIRED


HARDWARE REQUIRED










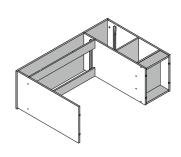

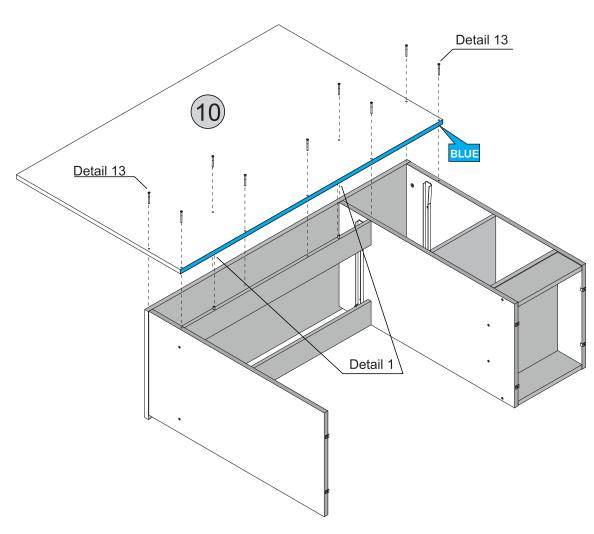

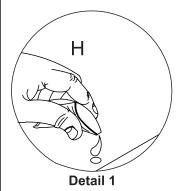

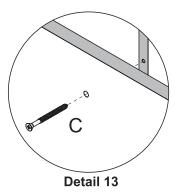

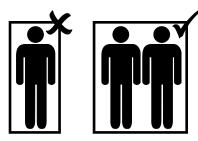


* You should assemble this product with two peolple

PARTS REQUIRED


HARDWARE REQUIRED


TOOLS REQUIRED


11 - BACK PANEL x1

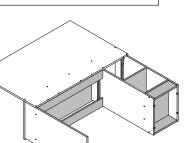

G 10 12




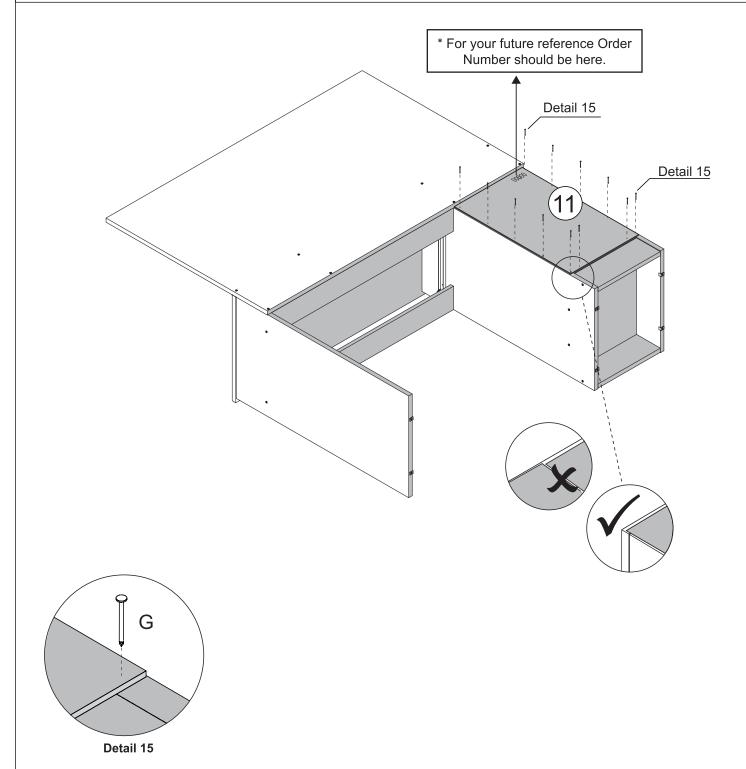

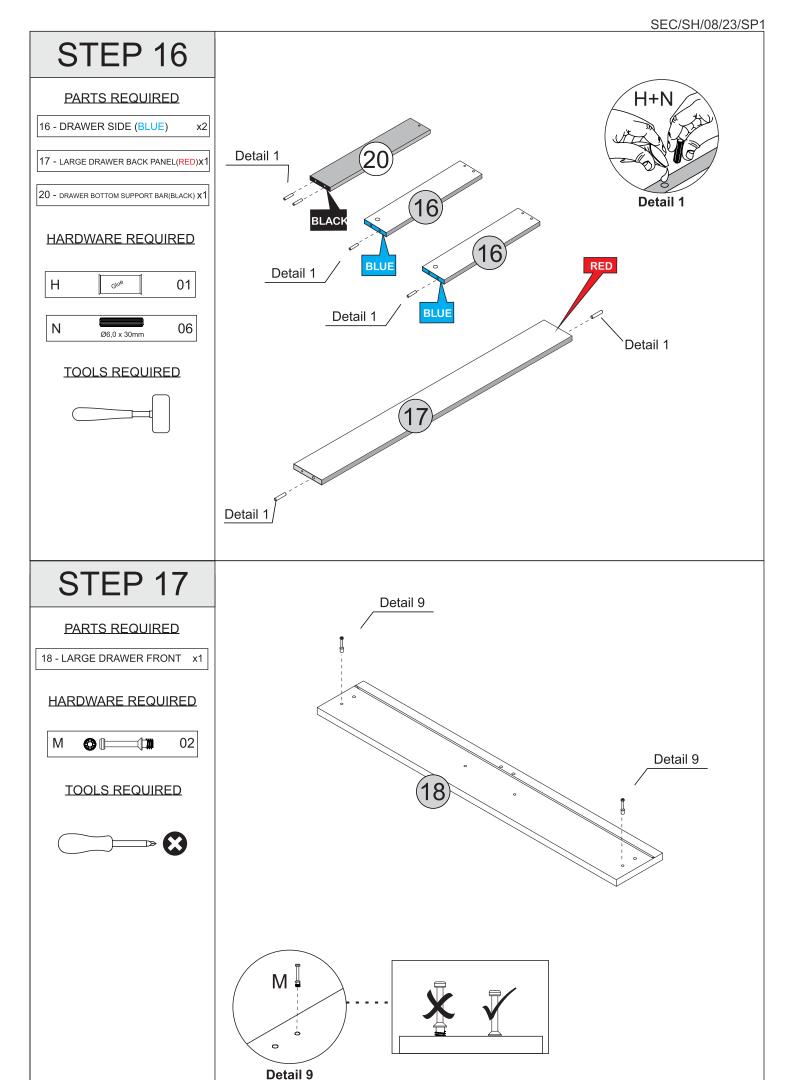


Detail 20

Detail 20

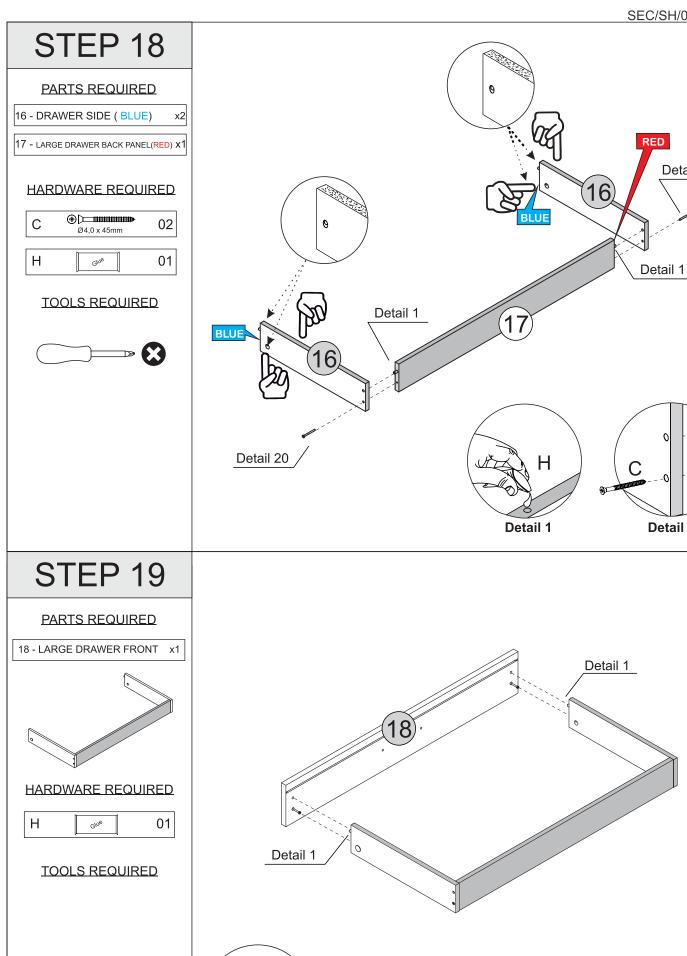


Detail 1







HARDWARE REQUIRED



TOOLS REQUIRED



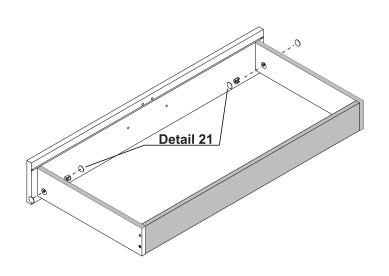


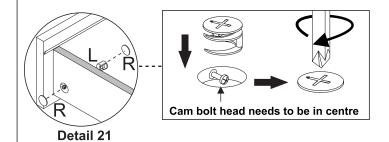

STEP 21

PARTS REQUIRED


19 - LARGE DRAWER BOTTOM x1




HARDWARE REQUIRED




TOOLS REQUIRED

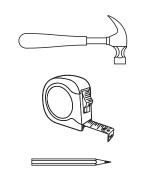

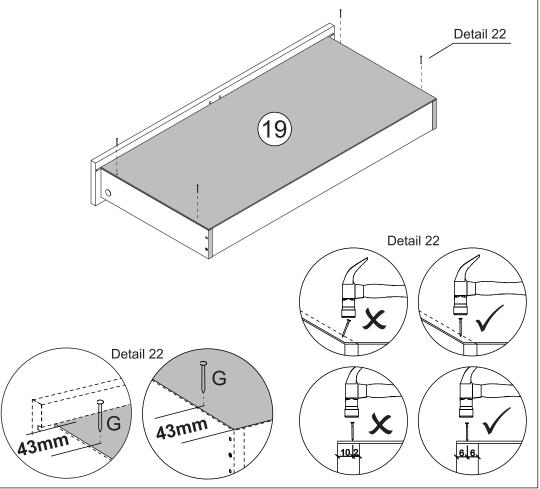




20 - DRAWER BOTTOM SUPPORT BAR (BLACK) X1




HARDWARE REQUIRED




TOOLS REQUIRED



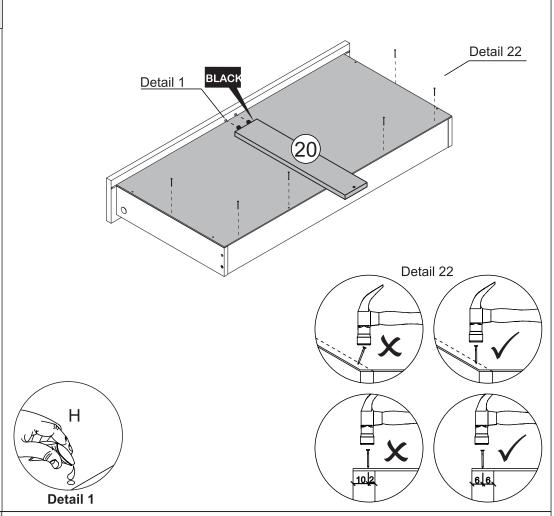

STEP 23

PARTS REQUIRED



HARDWARE REQUIRED













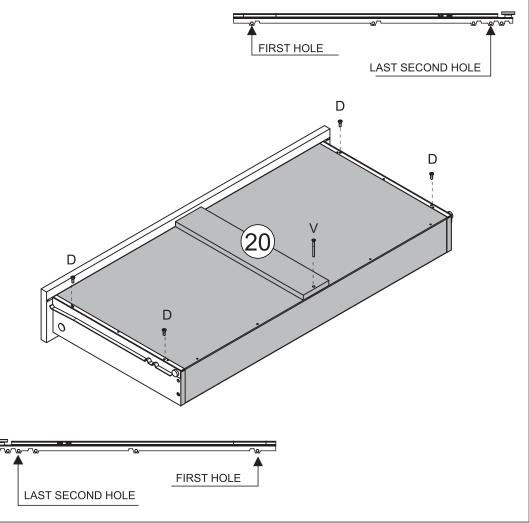

PARTS REQUIRED





HARDWARE REQUIRED





TOOLS REQUIRED




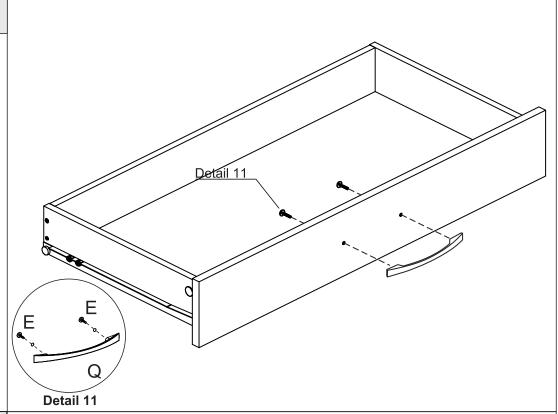



STEP 25

PARTS REQUIRED

HARDWARE REQUIRED




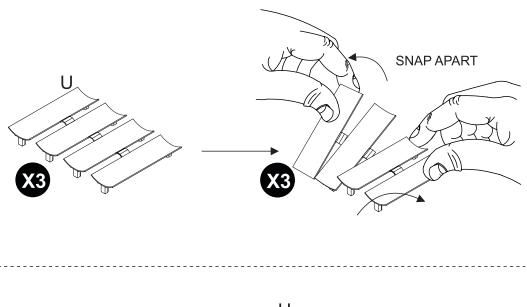

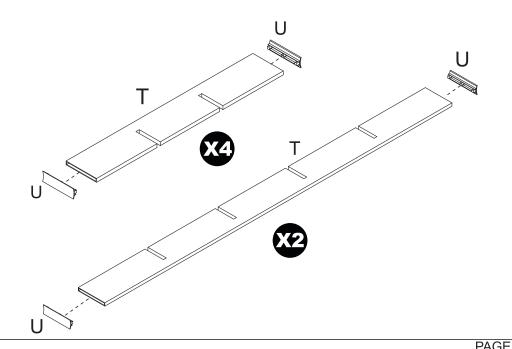


PARTS REQUIRED

HARDWARE REQUIRED

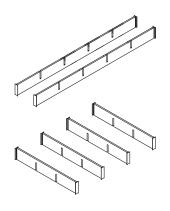

TOOLS REQUIRED

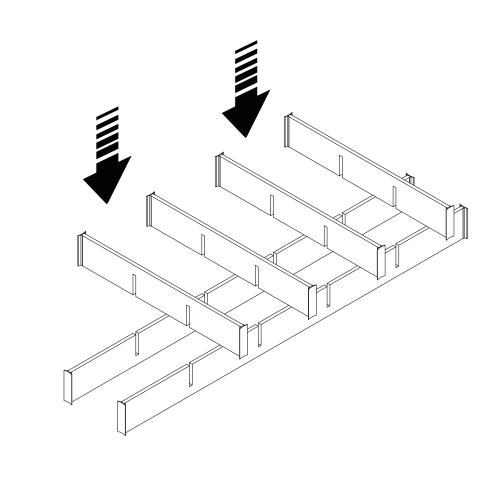


STEP 27


PARTS REQUIRED




HARDWARE REQUIRED




TOOLS REQUIRED

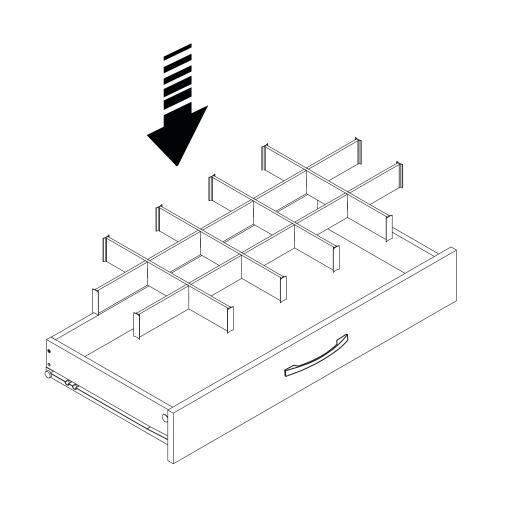

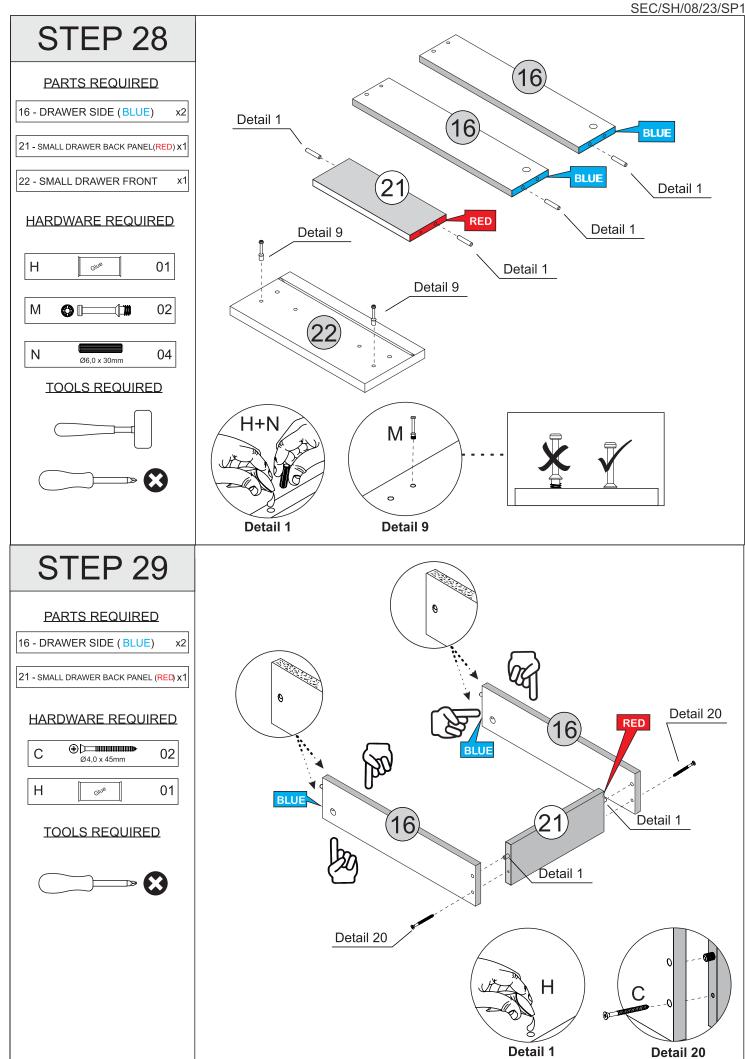




22 - SMALL DRAWER FRONT x1



HARDWARE REQUIRED




TOOLS REQUIRED

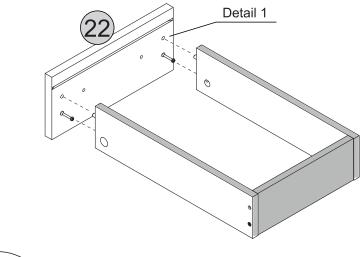



STEP 31


PARTS REQUIRED

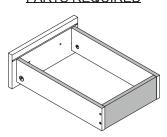



HARDWARE REQUIRED



R 04




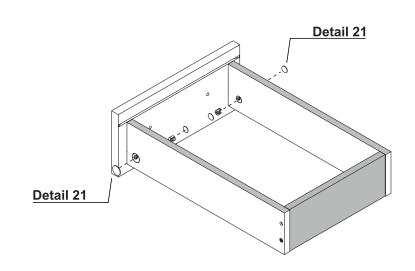

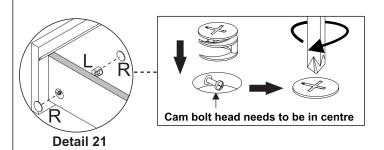


PARTS REQUIRED

23 - SMALL DRAWER BOTTOM x1




HARDWARE REQUIRED




TOOLS REQUIRED



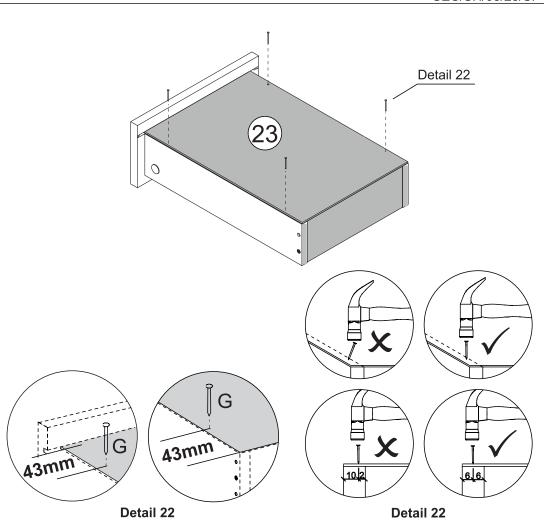


STEP 33


PARTS REQUIRED

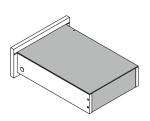


HARDWARE REQUIRED






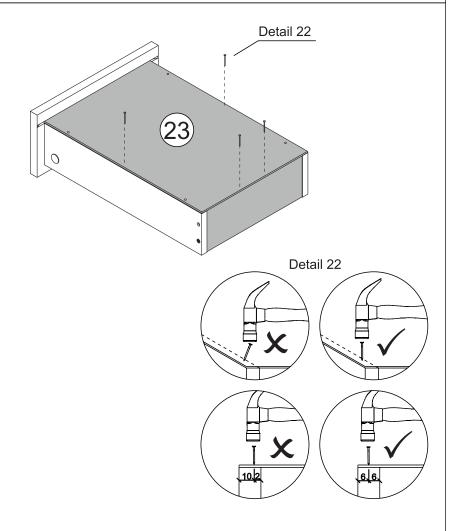







HARDWARE REQUIRED

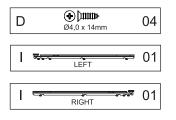


TOOLS REQUIRED





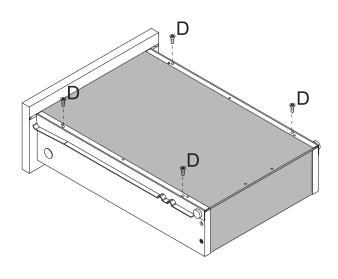




STEP 35


PARTS REQUIRED


24 - DOOR x1

HARDWARE REQUIRED






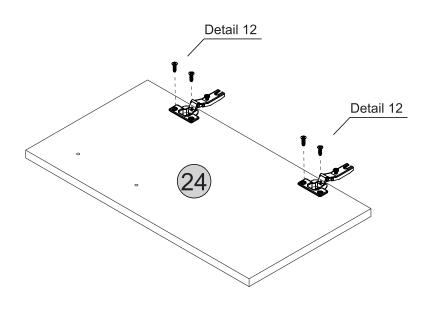

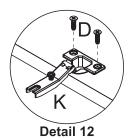




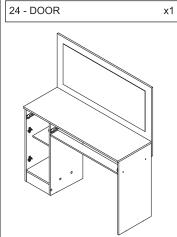


HARDWARE REQUIRED



TOOLS REQUIRED



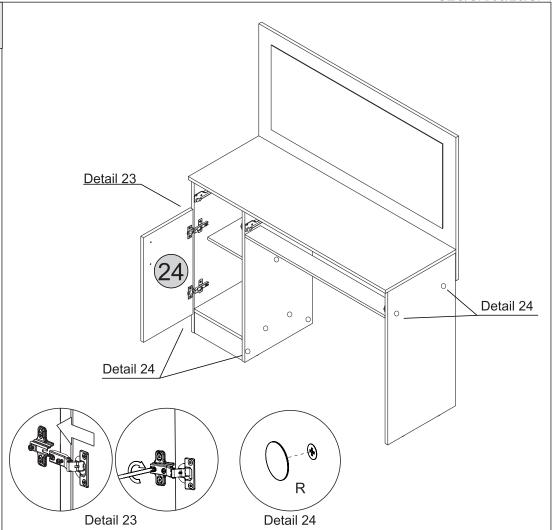

STEP 37

PARTS REQUIRED

12 - STOOL SIDE PANEL (GREEN) x2

HARDWARE REQUIRED


G ⊫ 04


Н


N (26.0 x 30mm) 04


01


P 04





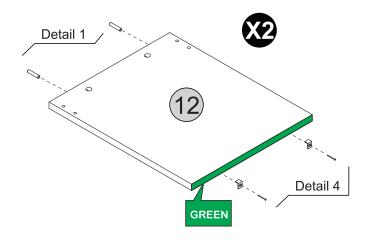


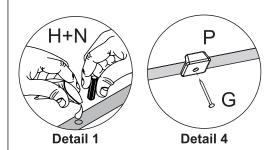

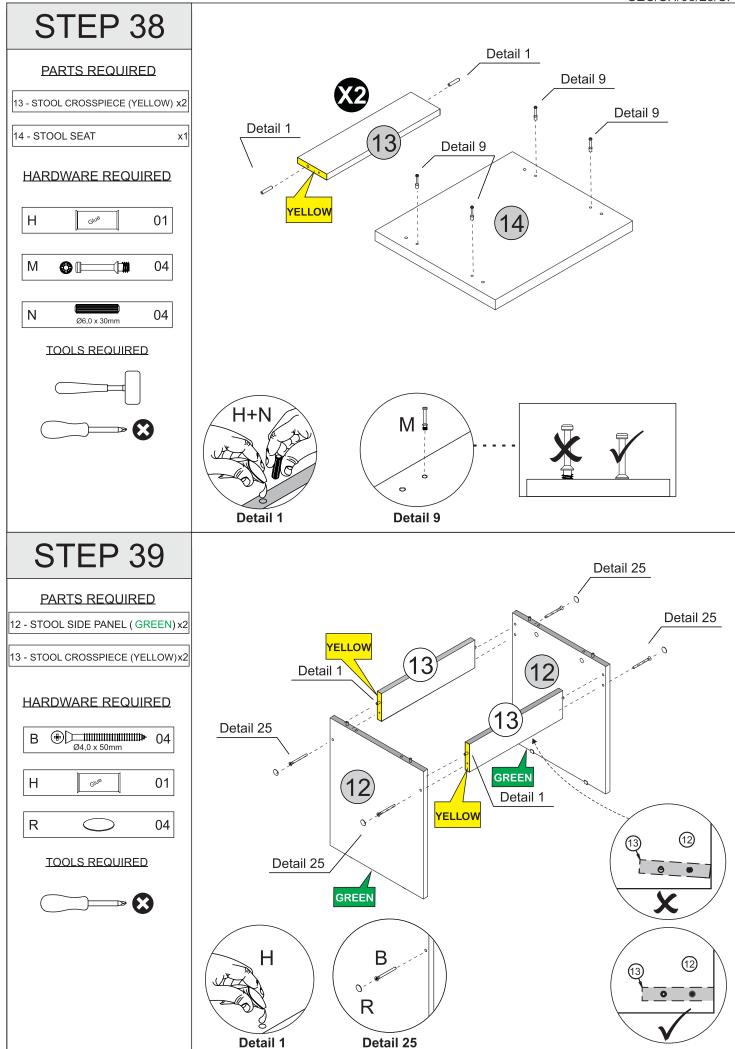






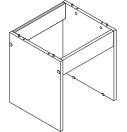



HARDWARE REQUIRED






TOOLS REQUIRED




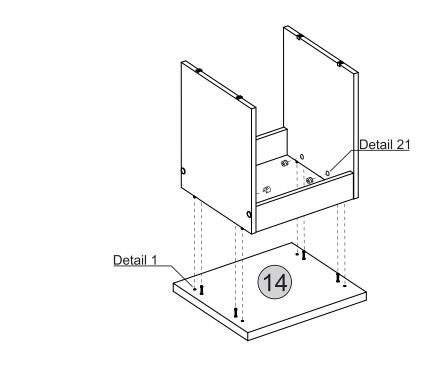

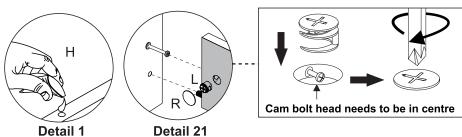


STEP 41


PARTS REQUIRED

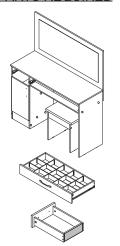



HARDWARE REQUIRED







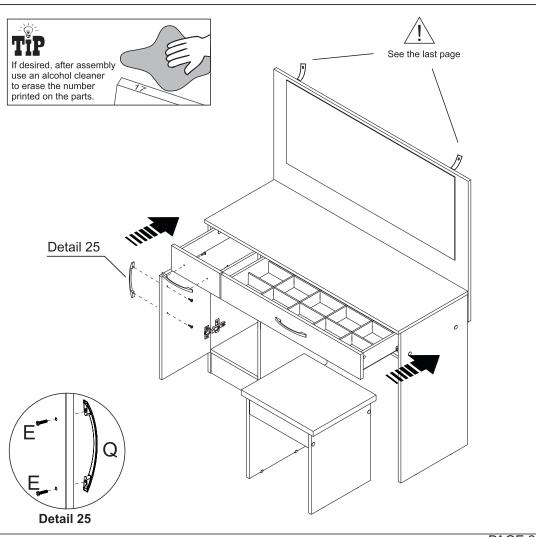

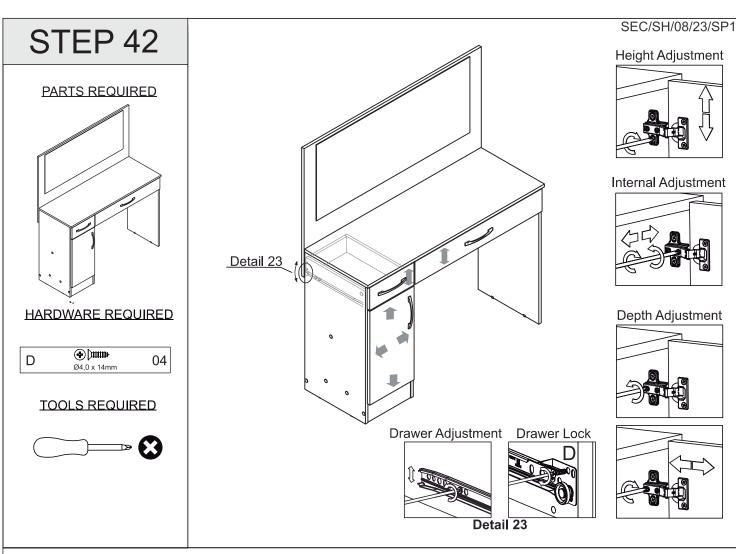

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

