


**MODEL NAME :**  
**BELLINGHAM 3 DRAWER CHEST**


**1.0hr**

APPROXIMATE ASSEMBLY TIME

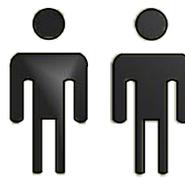


2 PEOPLE FOR ASSEMBLY

FLOOR AREA  
1.1M X 1.2M

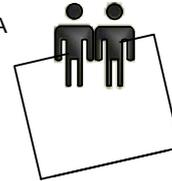


REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS

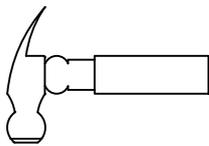


HAMMER



FLAT HEAD SCREWDRIVER




POZI SCREWDRIVER

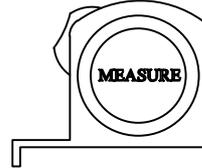

MEASURING TAPE

ASSEMBLED DIMENSIONS

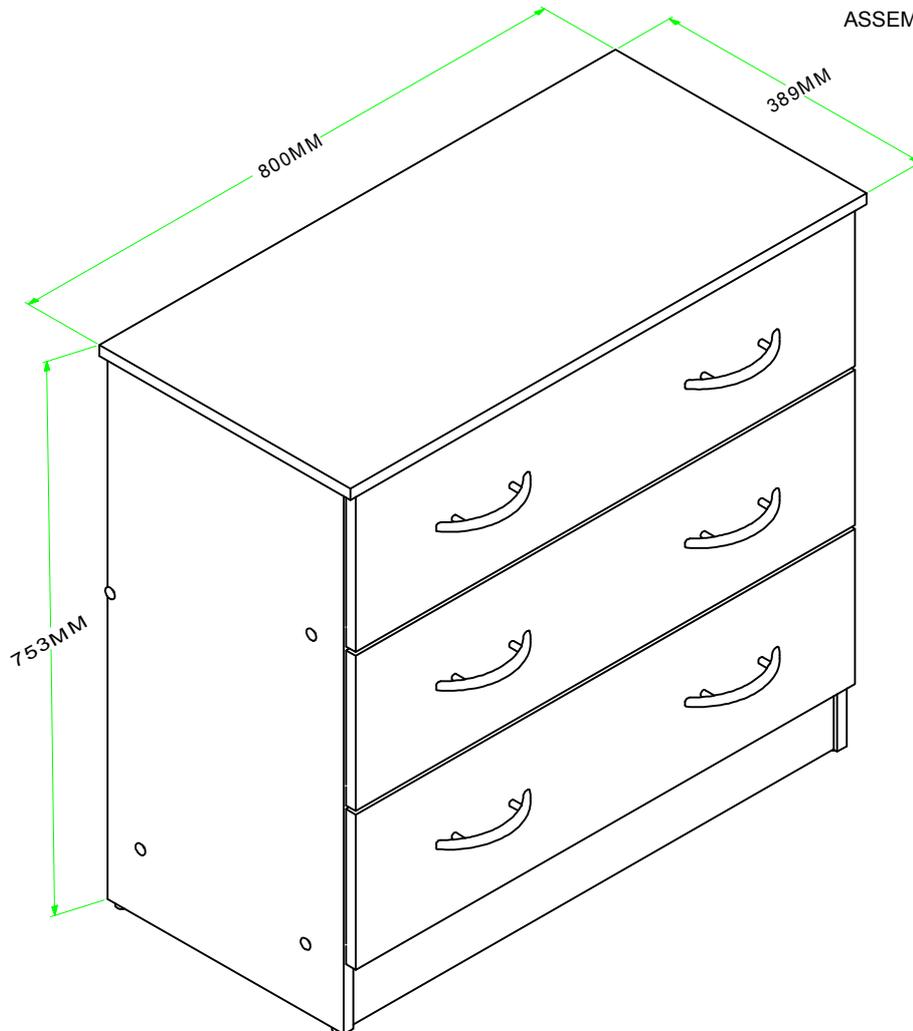


**FOR DOMESTIC USE ONLY**

NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO 25 KGS.


**MODEL NAME:**

**BELLINGHAM 3 DRAWER CHEST**

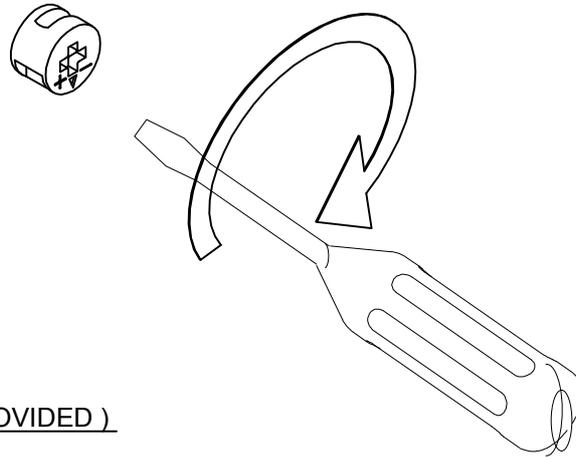


( SCREWDRIVER NOT PROVIDED )


USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

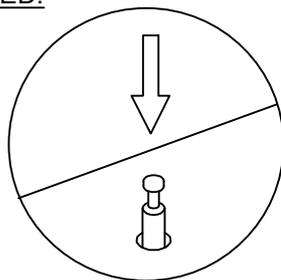

**STEP 1 - PUSH CAM BOLT INTO INSERT**

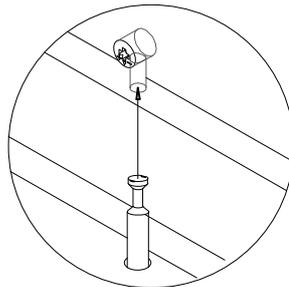

**STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. ( MAKE SURE THE ARROW OF CAM LOCK IS POINTING TOWARD THE HOLE ON EDGE OF PANEL. )**

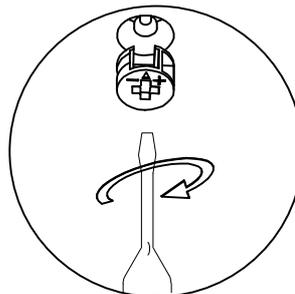


**STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.**

MODEL NAME:







**BELLINGHAM 3 DRAWER CHEST**

NO	PART LIST	QTY	NO	PART LIST	QTY
(1)	RIGHT SIDE PANEL	1	(8)	BACK PANEL	2
(2)	BOTTOM PANEL	1	(9)	DRAWER BACK PANEL	3
(3)	FRONT CROSS SUPPORT	1	(10)	DRAWER LEFT SIDE PANEL	3
(4)	BACK CROSS SUPPORT	1	(11)	DRAWER RIGHT SIDE PANEL	3
(5)	CROSSBAR	1	(12)	DRAWER FRONT	3
(6)	LEFT SIDE PANEL	1	(13)	DRAWER BOTTOM PANEL	3
(7)	TOP PANEL	1	(14)	DRAWER SUPPORT	3

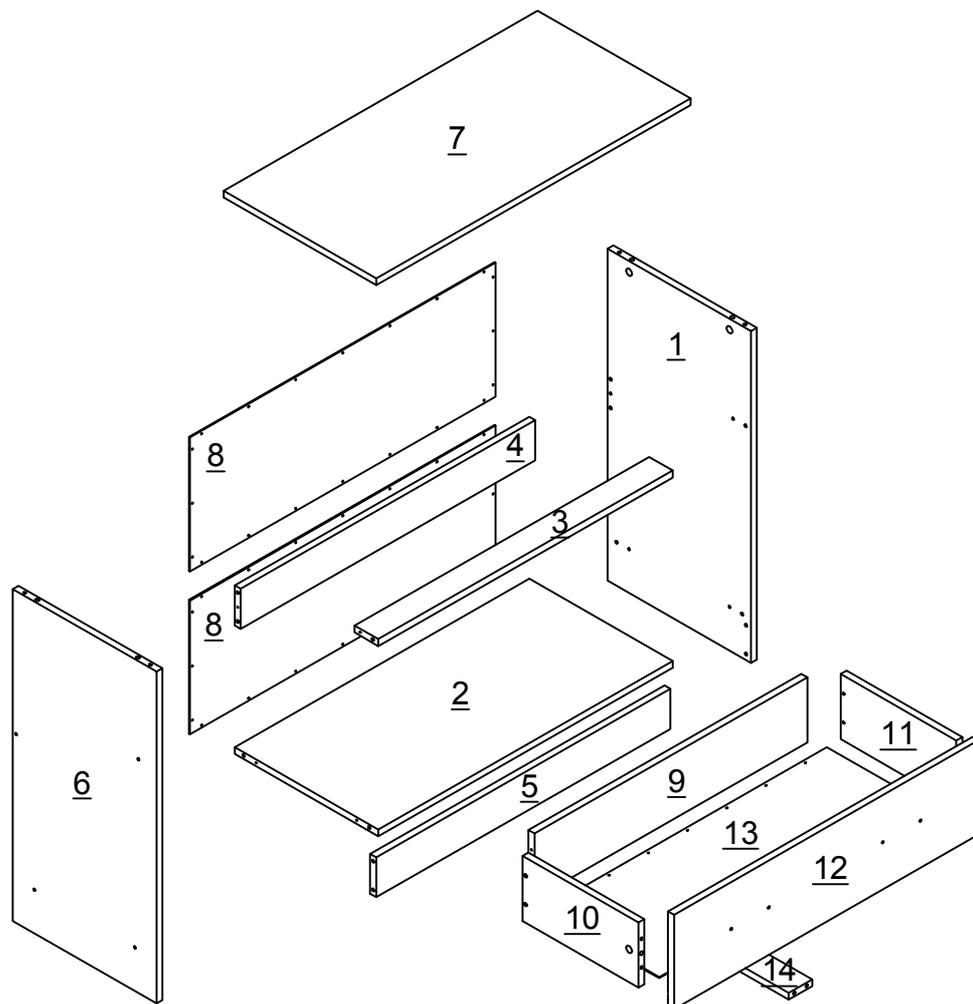**PARTS LIST**

MODEL NAME:


**BELLINGHAM 3 DRAWER CHEST****HARDWARE LIST**

A		DOWEL 6 X 30MM	36 PCS
B		SCREW M3.5 X 12MM	38 PCS
C		DRAWER RUNNER ( LEFT )	3 PCS
D		DRAWER RUNNER ( RIGHT )	3 PCS
E		DRAWER RUNNER TRACK ( LEFT )	3 PCS
F		DRAWER RUNNER TRACK ( RIGHT )	3 PCS
G		PLASTIC FOOT	4 PCS
H		CAM BOLT + LOCK	10 SETS
I		TACK	47 PCS
J		SCREW M4 X 50MM	8 PCS
K		SCREW M4 X 38MM	12 PCS
L		HANDLE	6 PCS
M		HANDLE SCREW M4 X 25MM	12 PCS
N		PLASTIC SCREW COVER	8 PCS
O		SCREW M3.5 X 16MM	18 PCS
P		SCREW M4 X 30MM	6 PCS
Q		ANTI - TIP STRAP	2 PCS
R		SCREW M4 X 16MM	2 PCS


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

**STEP 1**

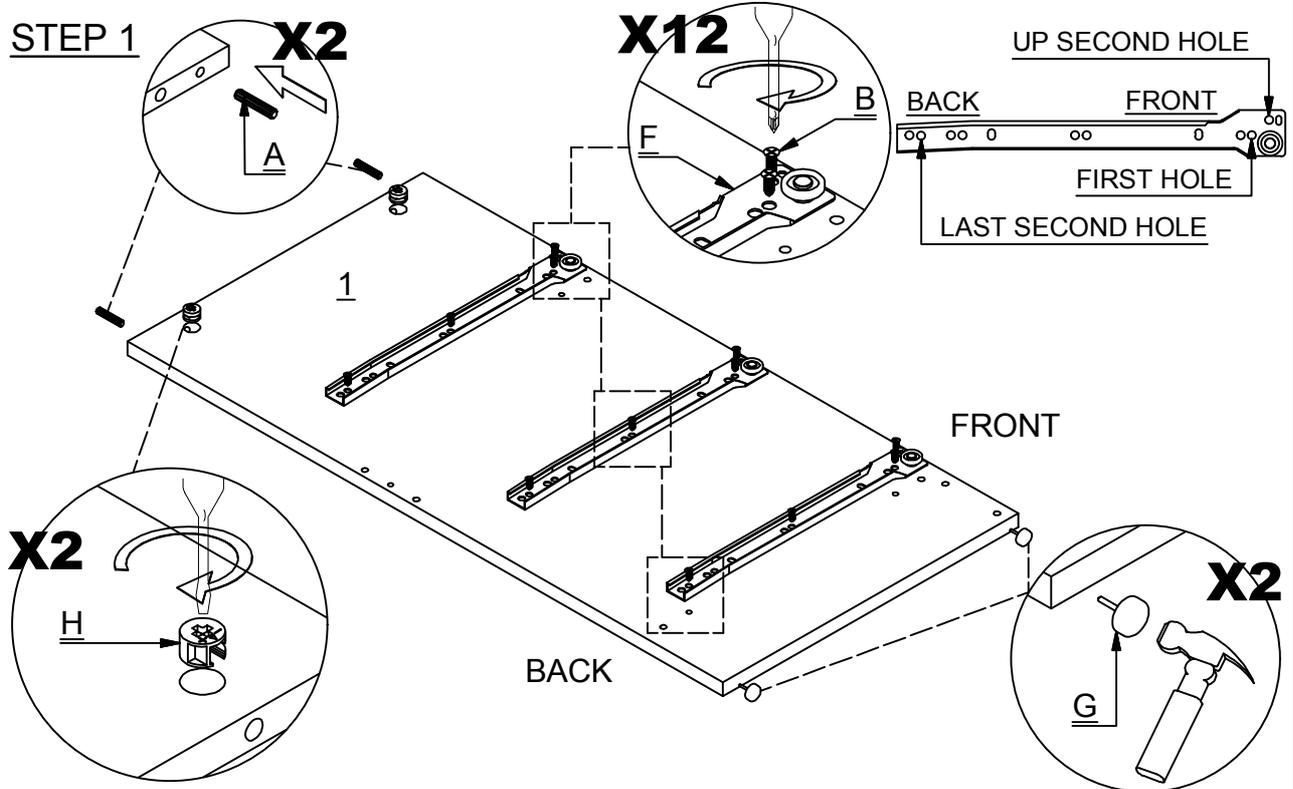


**STEP 2**

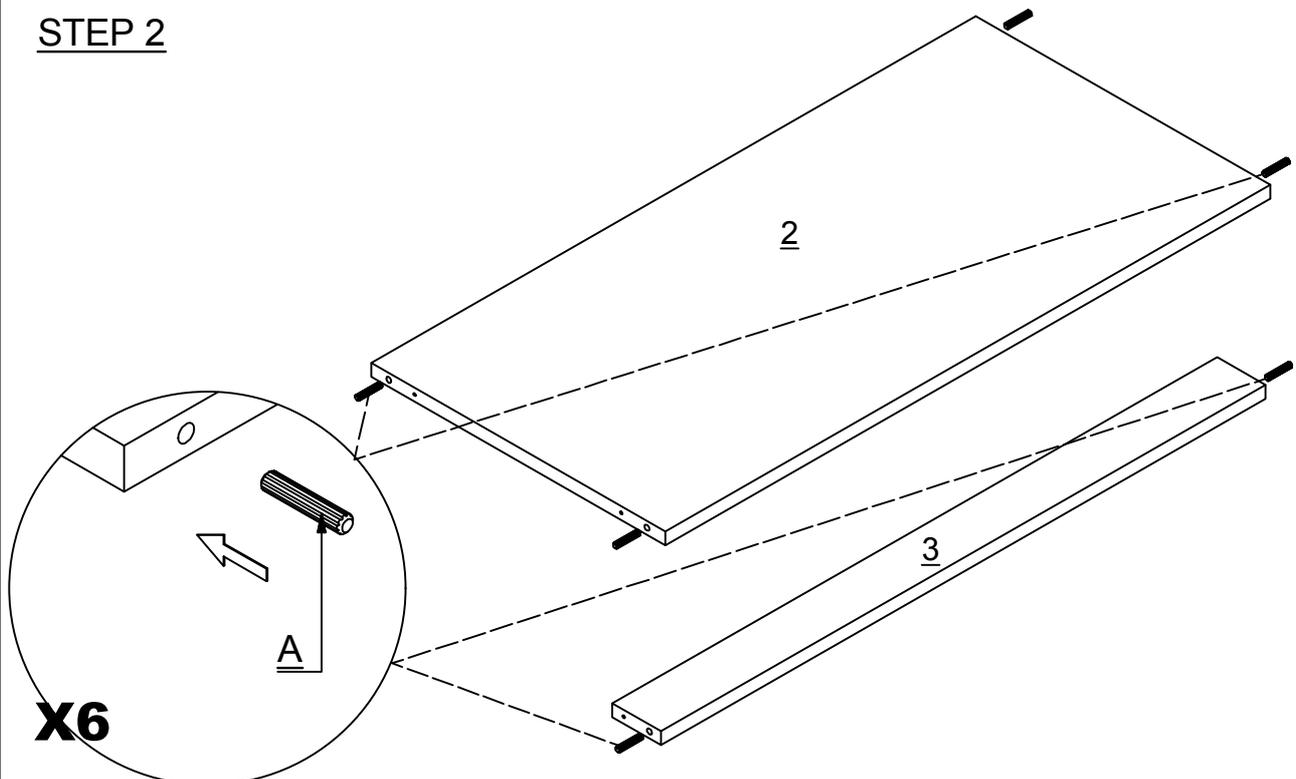


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

**STEP 3**

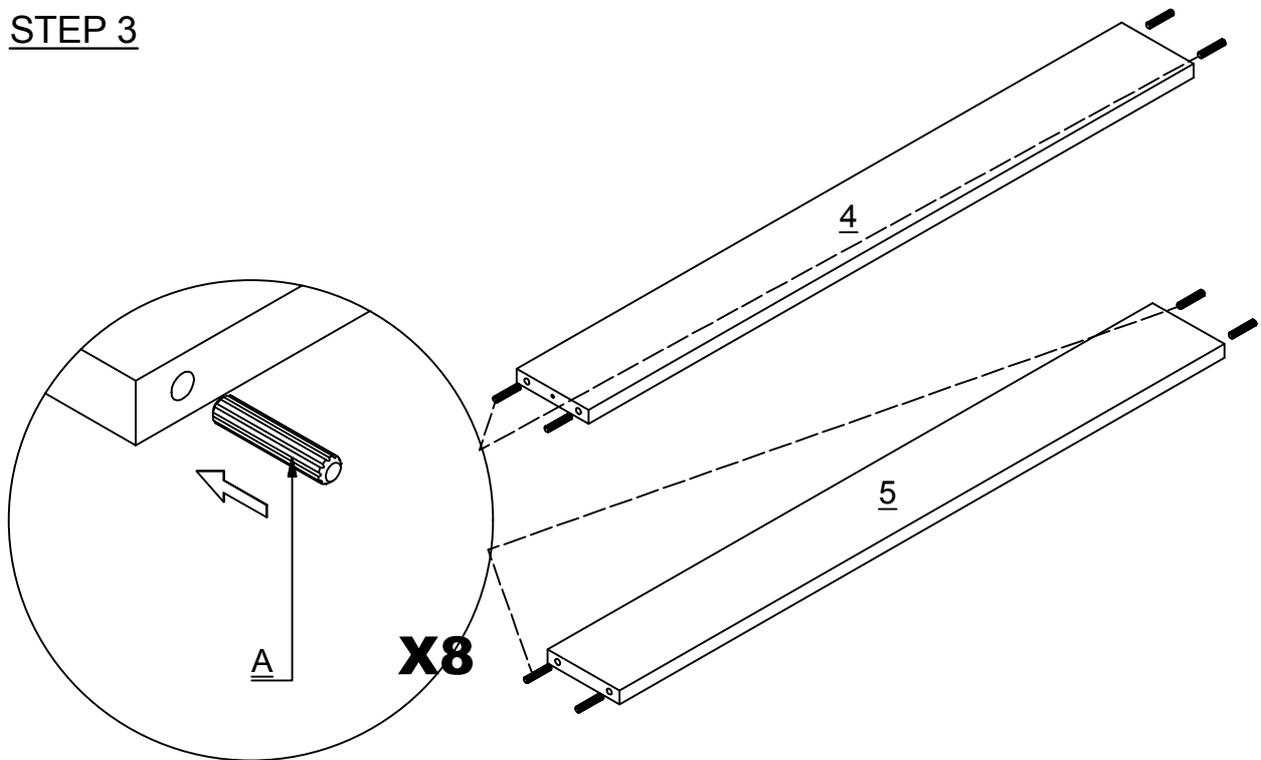


**STEP 4**

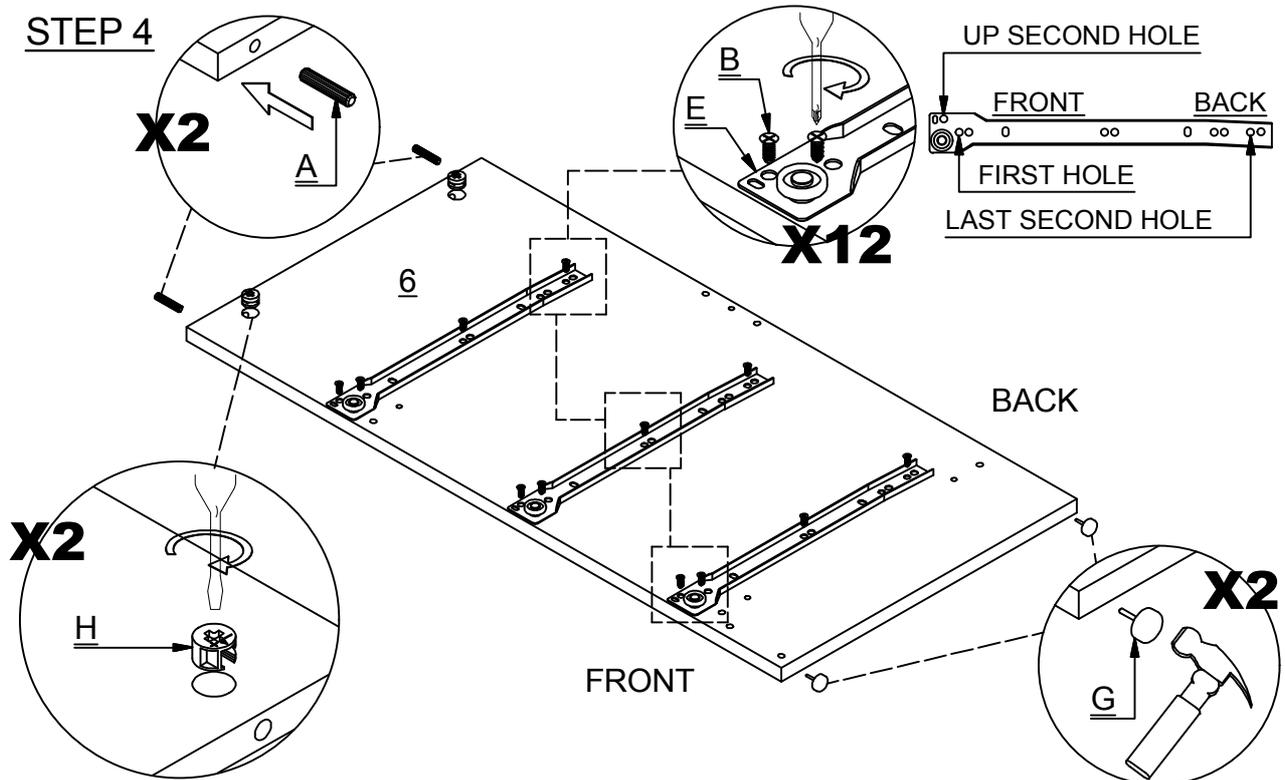


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

STEP 5

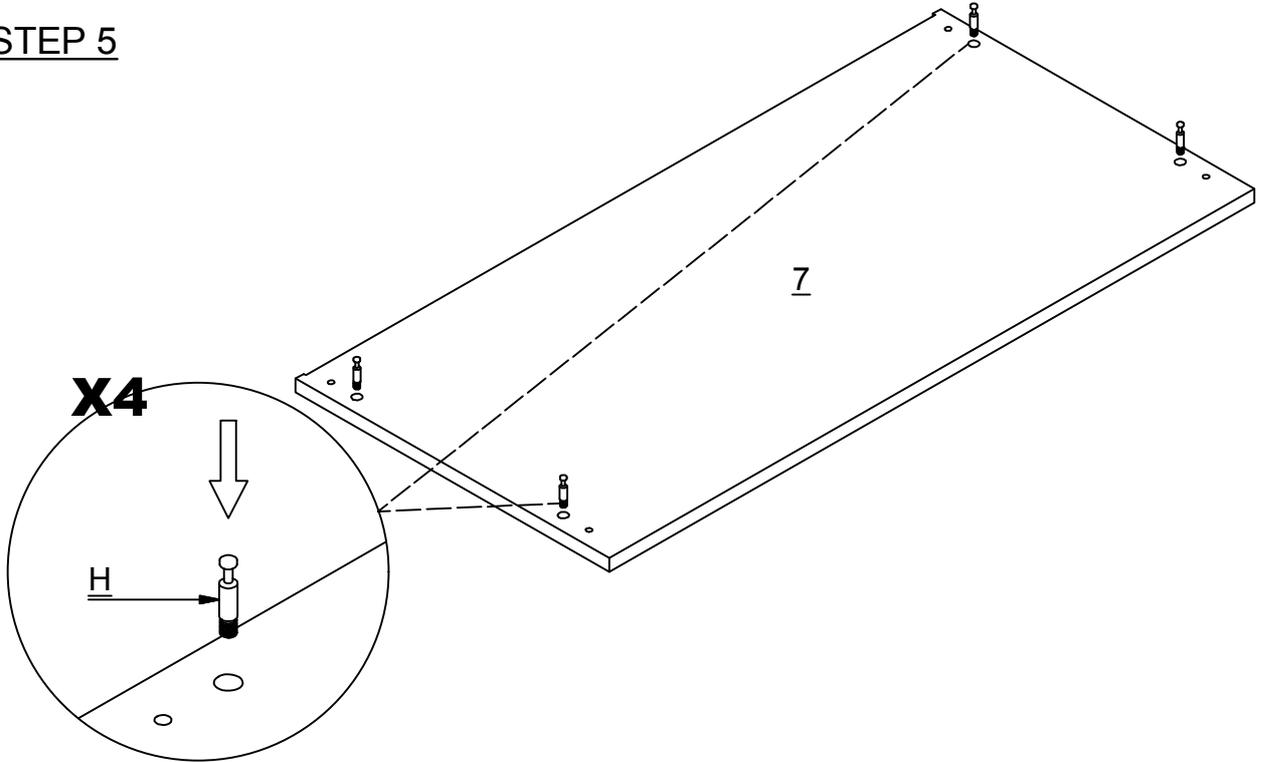


STEP 6

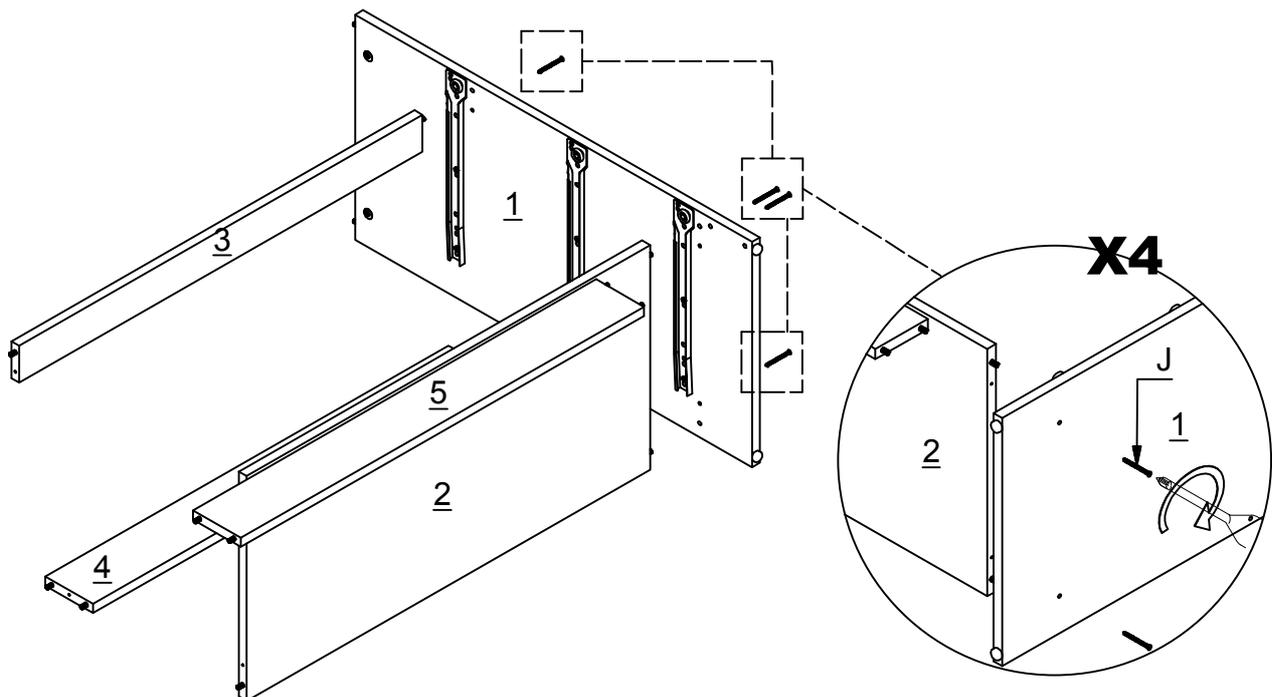


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

STEP 7

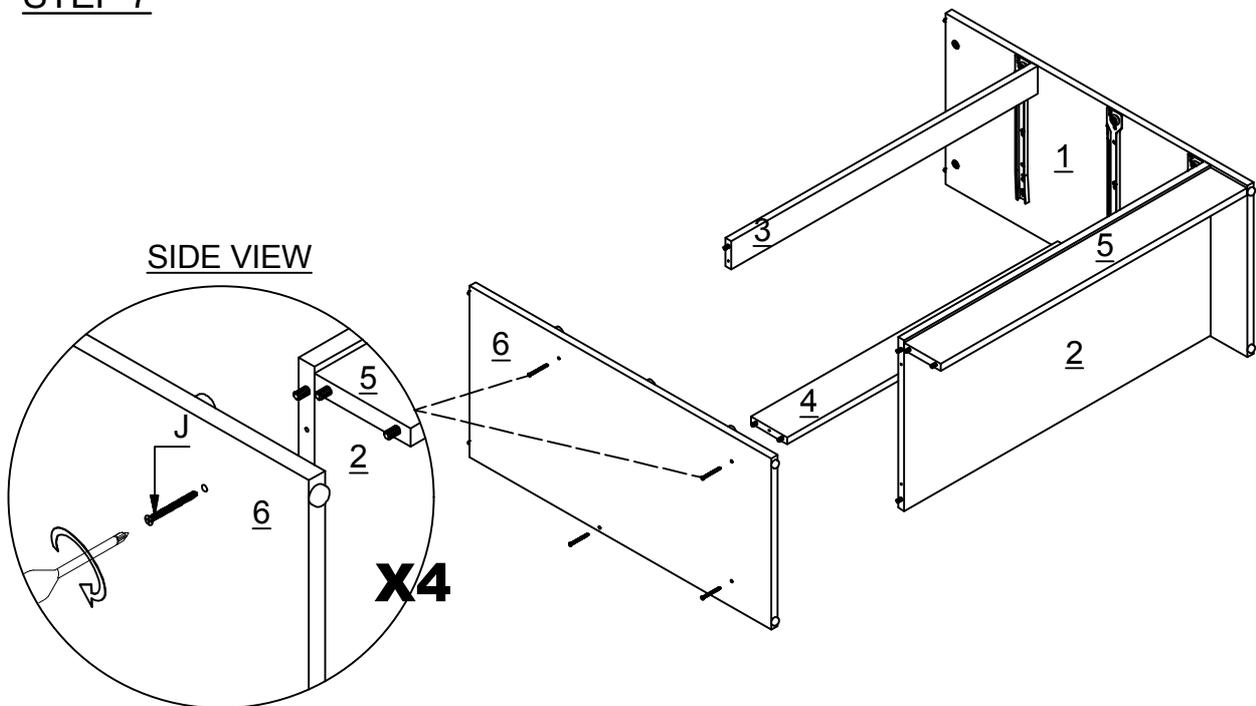


STEP 8

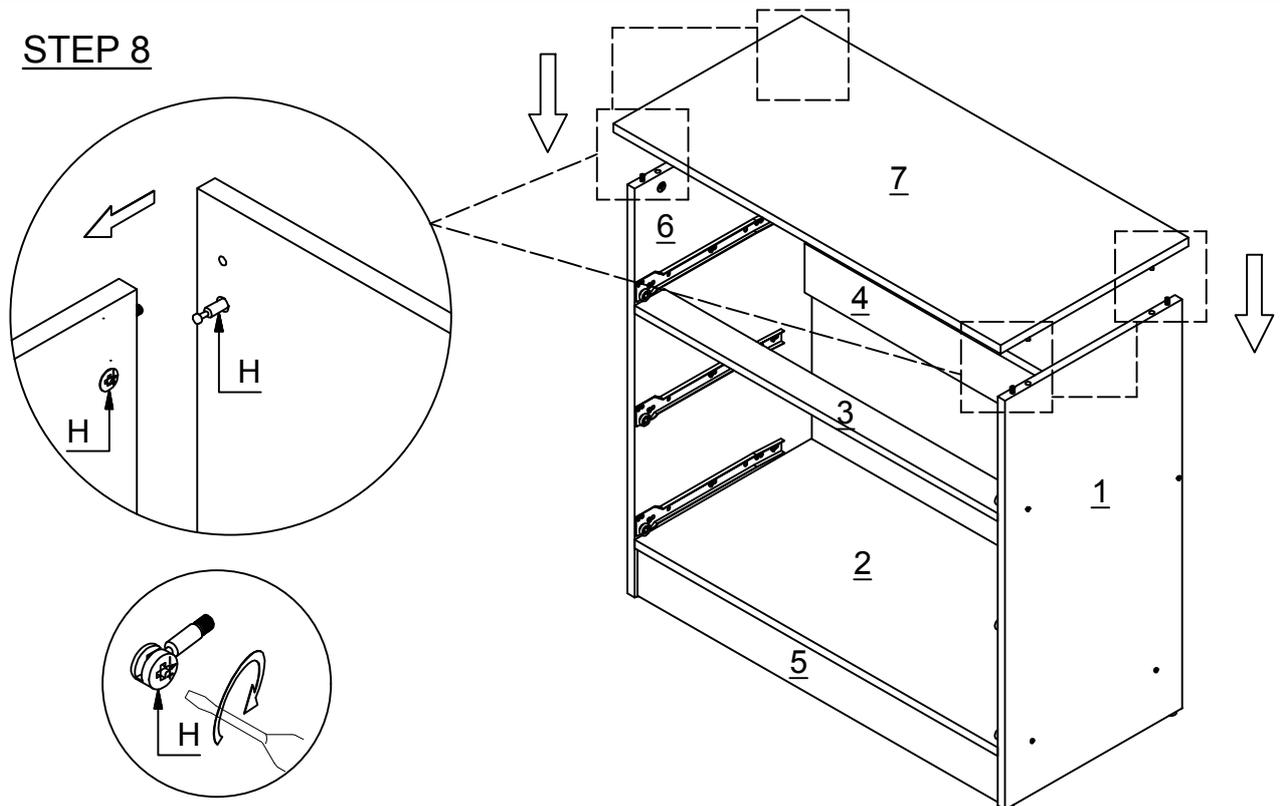


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

**STEP 9**

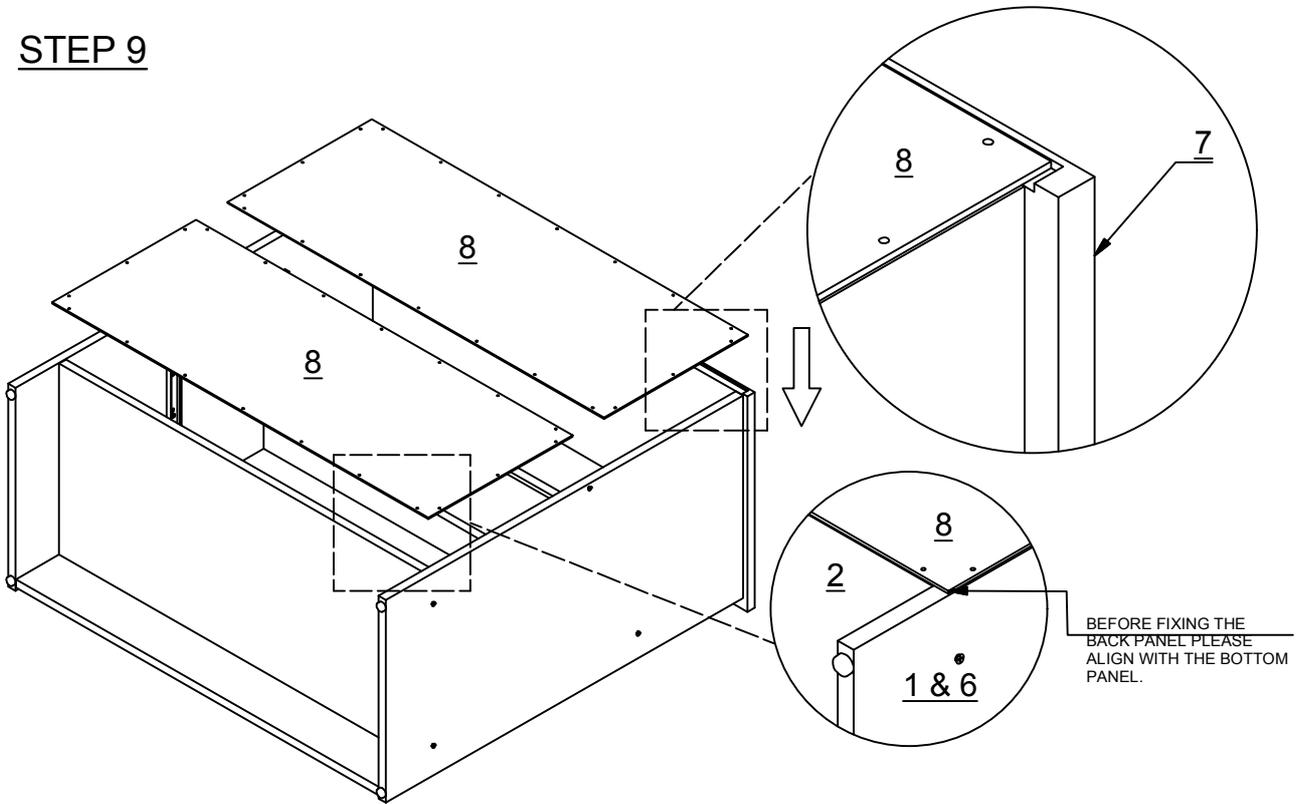


**STEP 10**

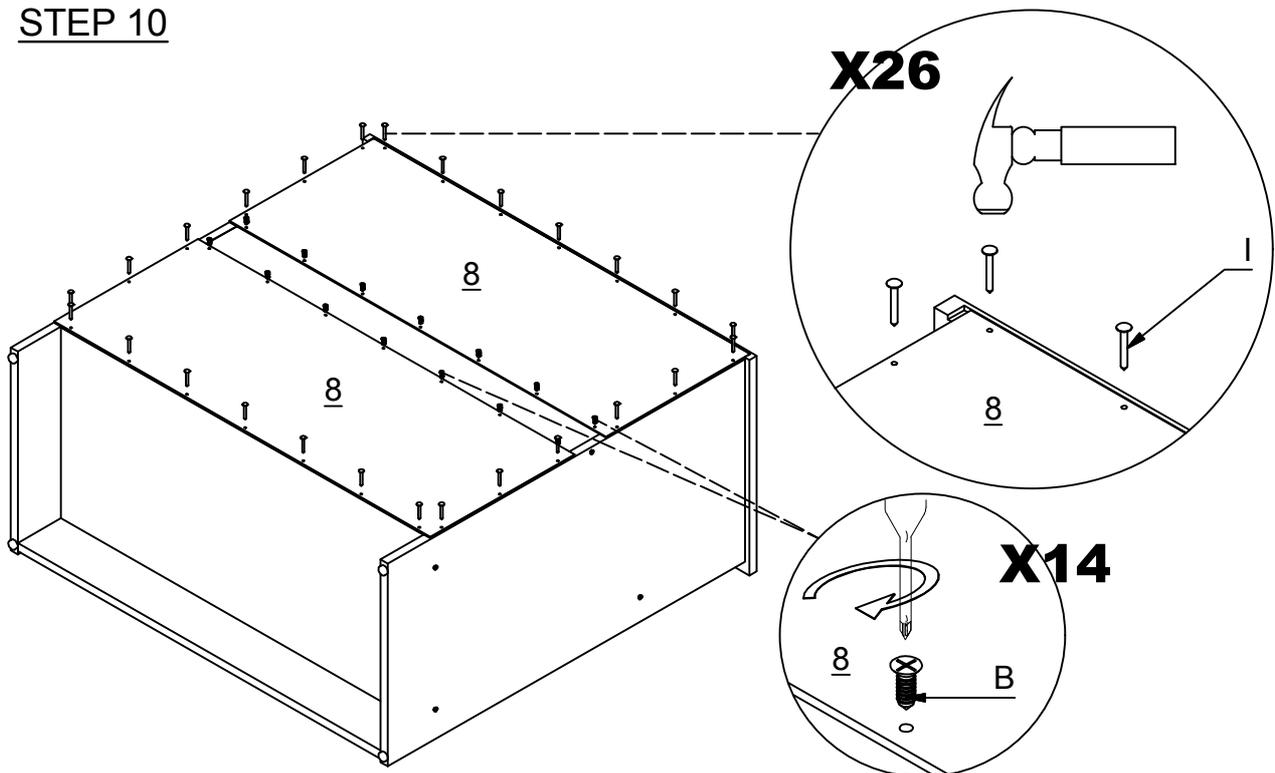


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

STEP 11

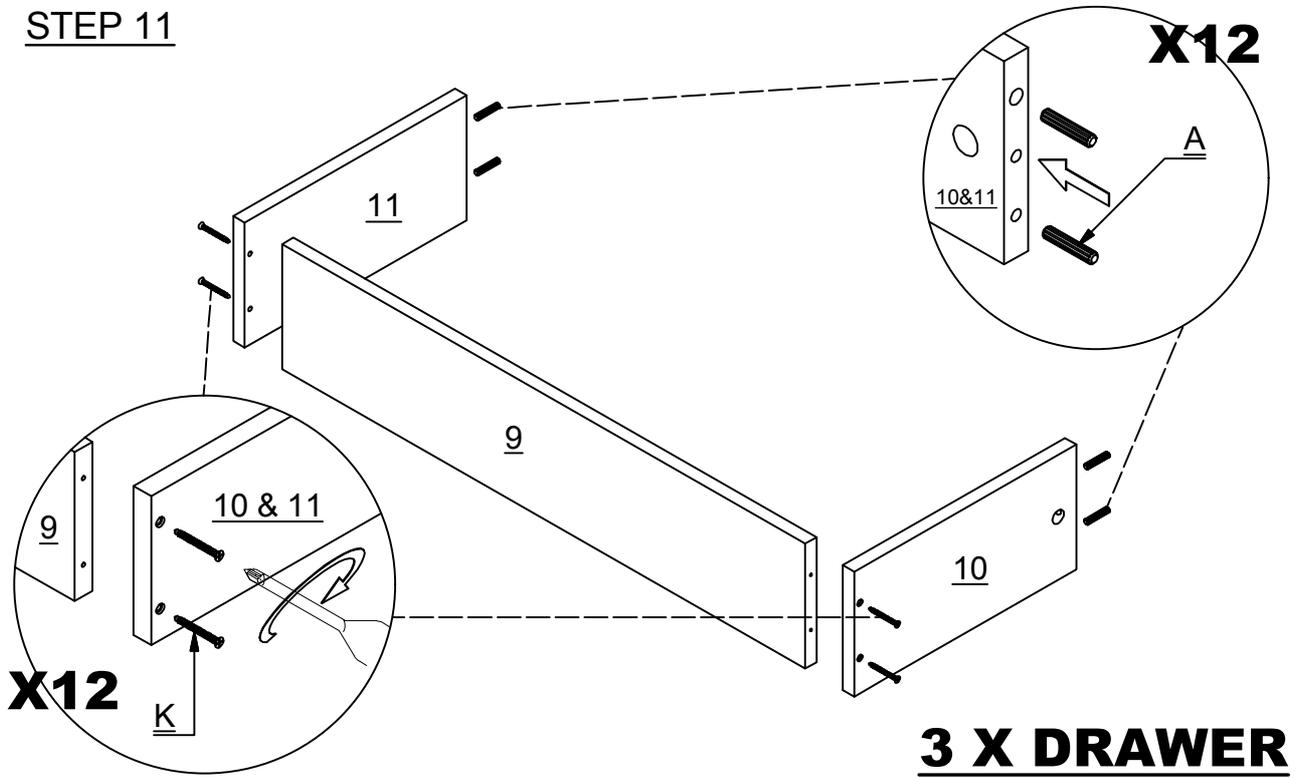


STEP 12

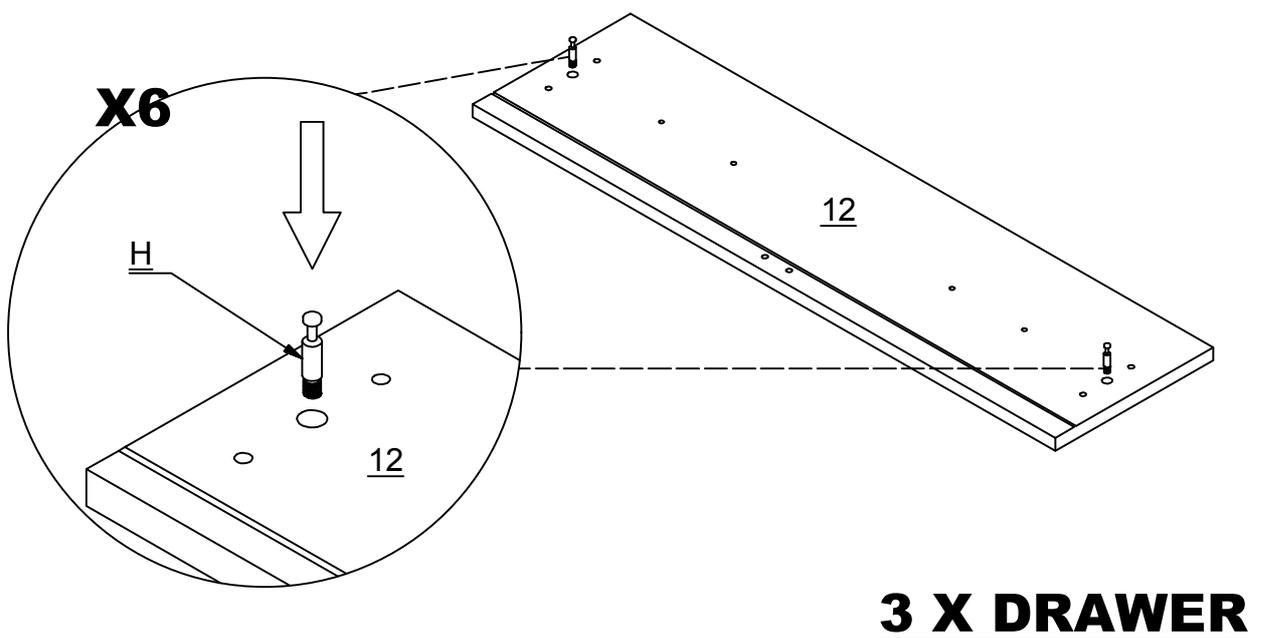


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

STEP 13

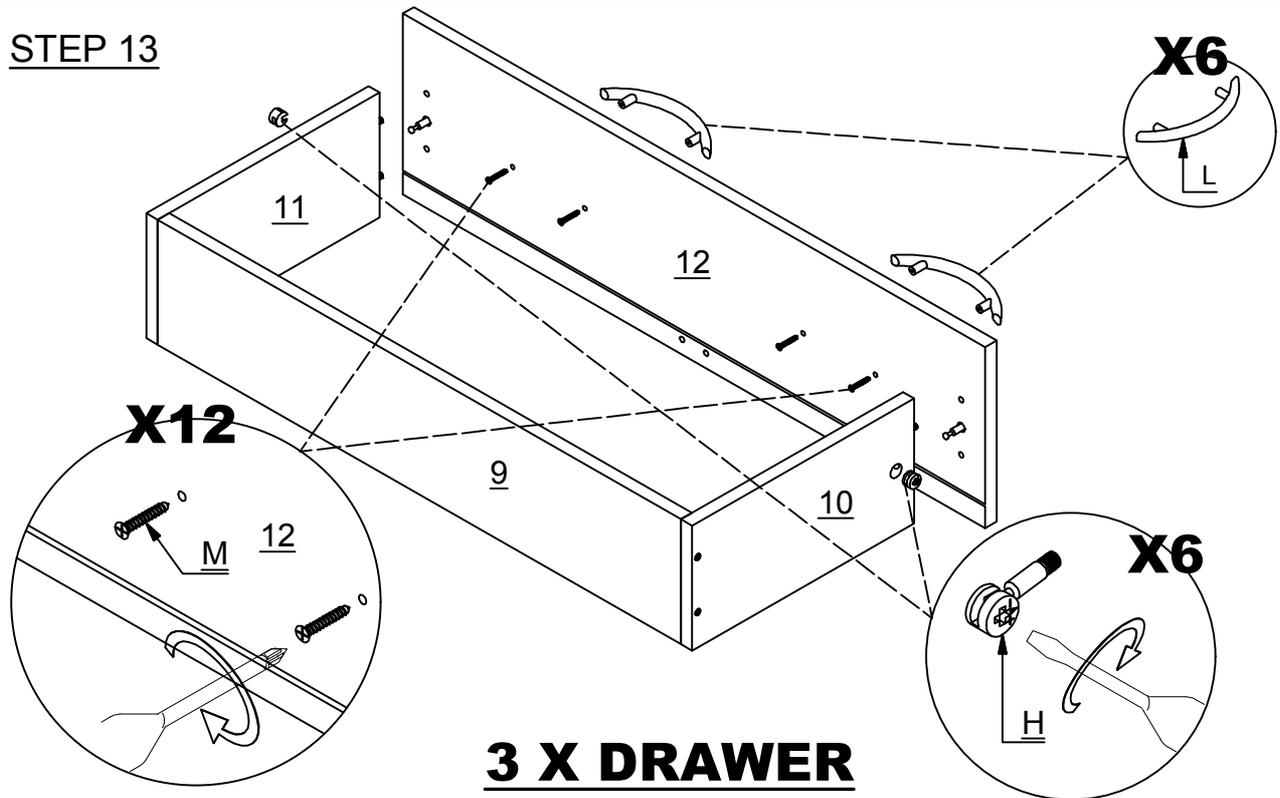



STEP 14

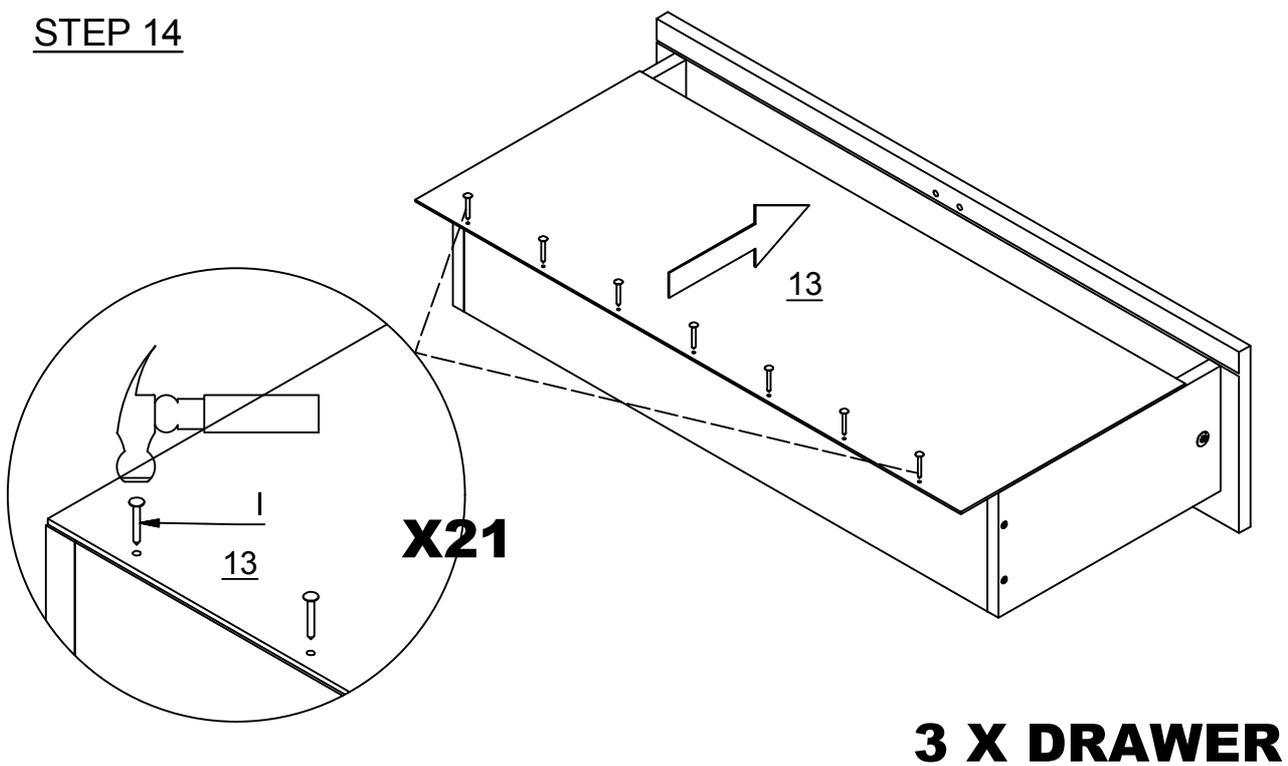

MODEL NAME:



**BELLINGHAM 3 DRAWER CHEST**

STEP 15

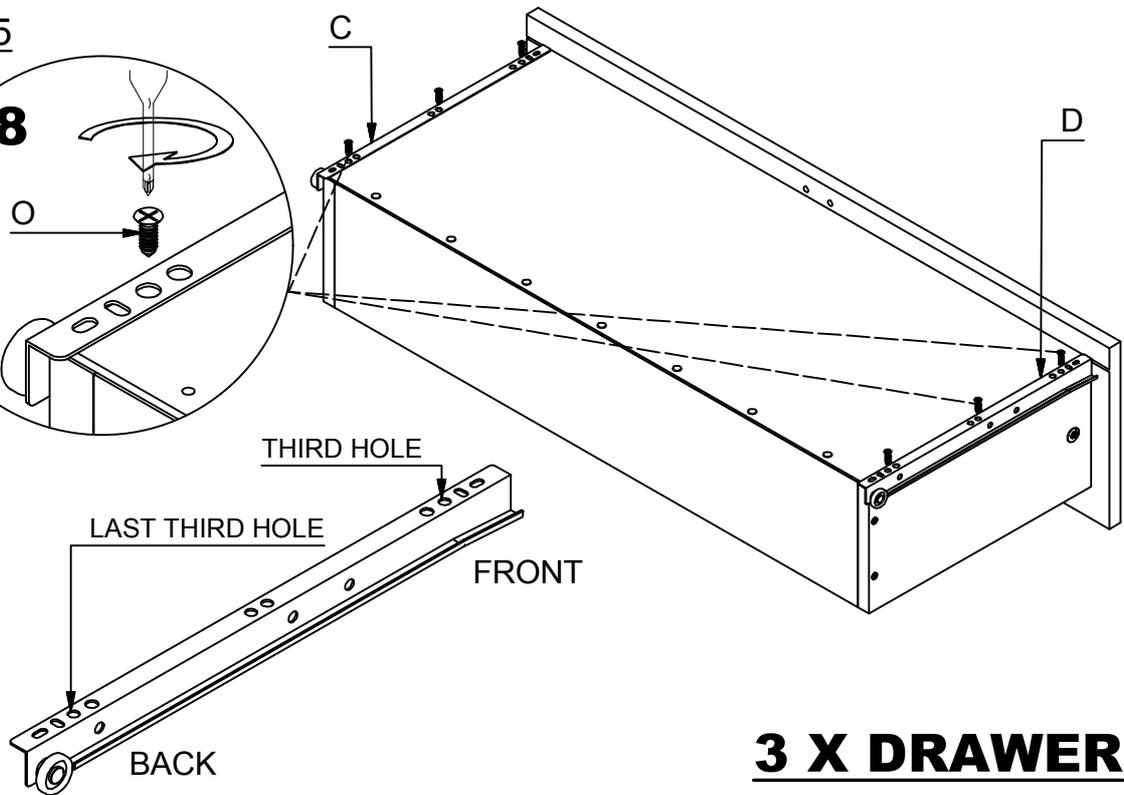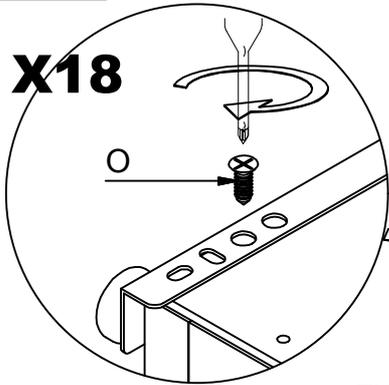

**3 X DRAWER**

STEP 16

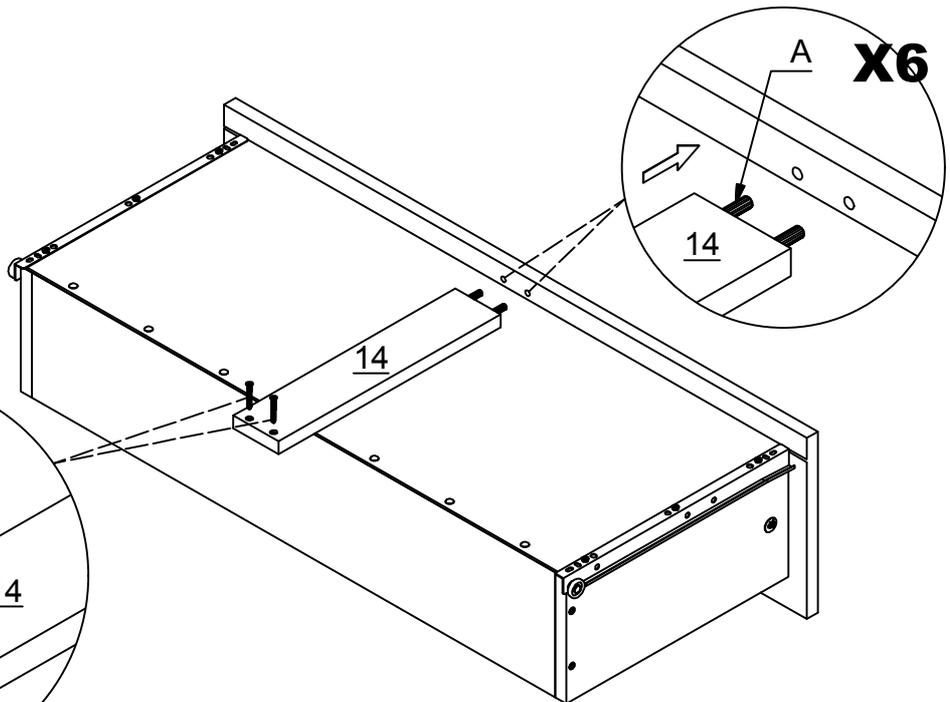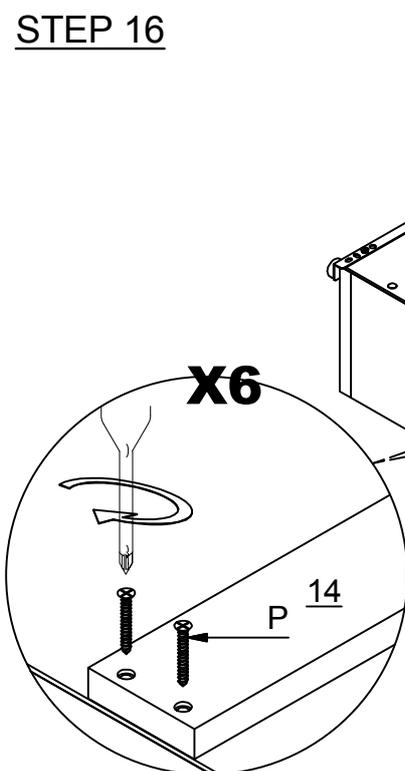


**3 X DRAWER**


MODEL NAME:

**BELLINGHAM 3 DRAWER CHEST**

STEP 17

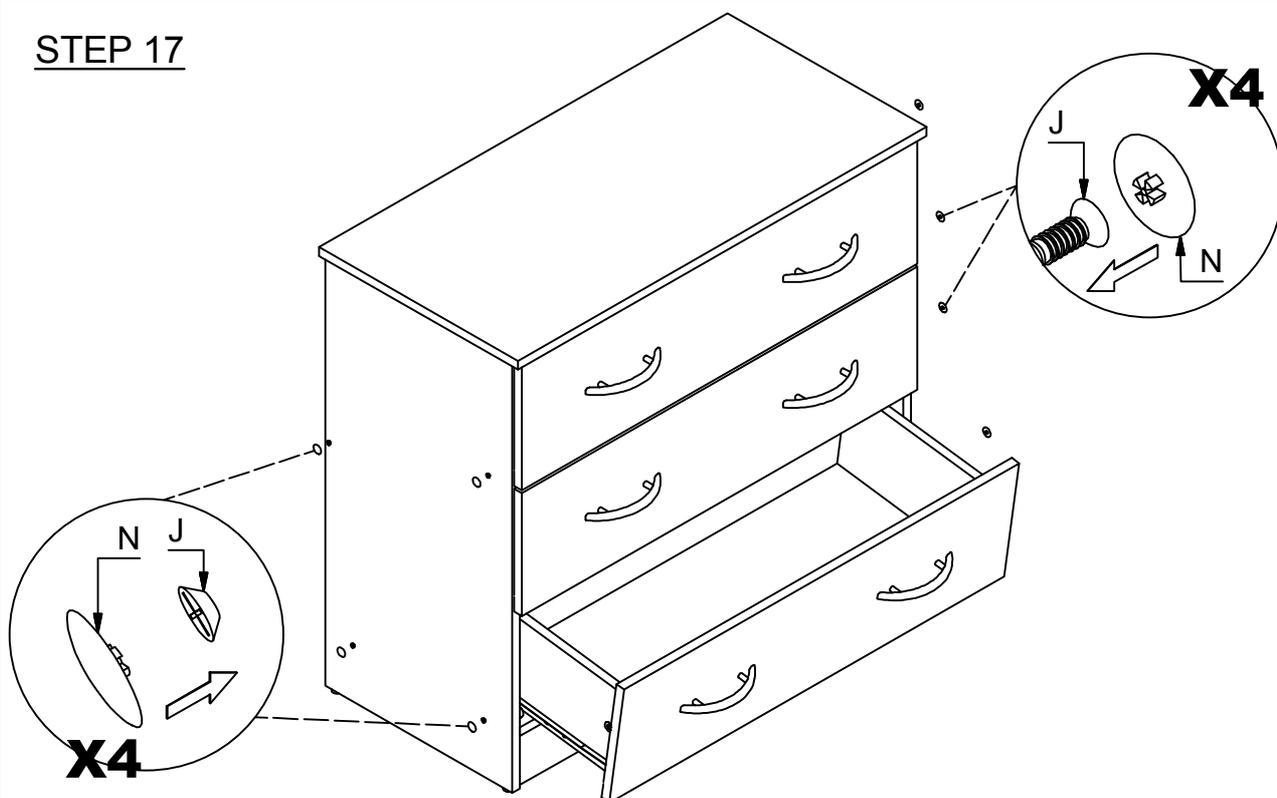

STEP 18

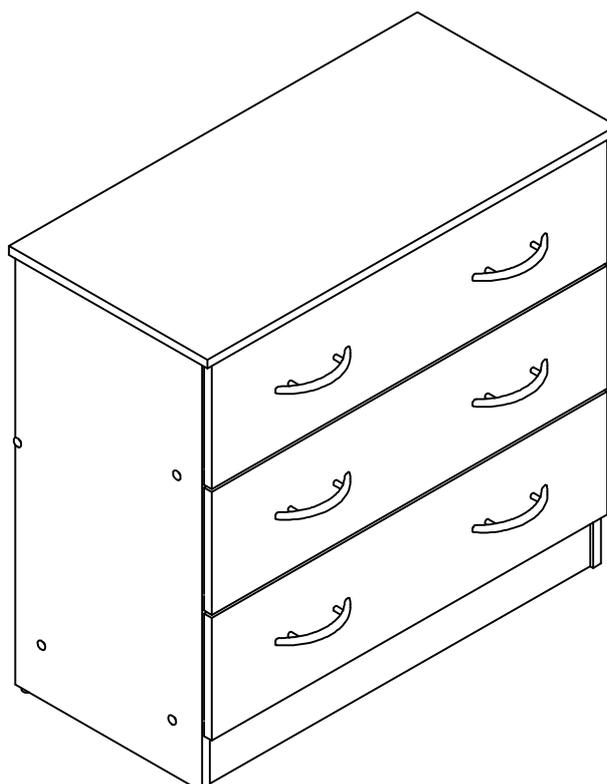

# WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.




## HARDWARE LIST



( Q ) Anti-Tip Strap - 2 pc



( R ) M4 X 16MM - 2 pc

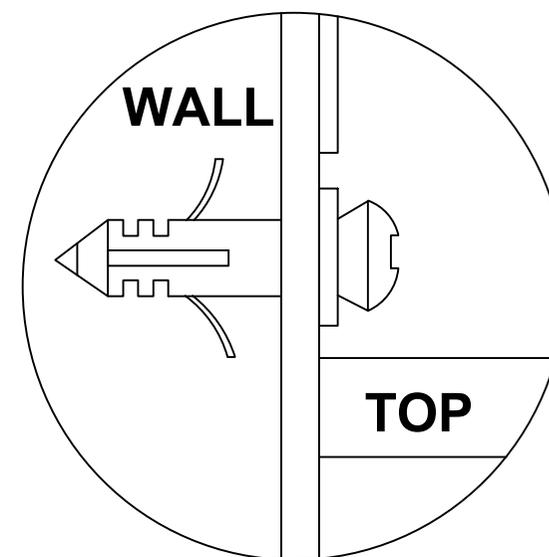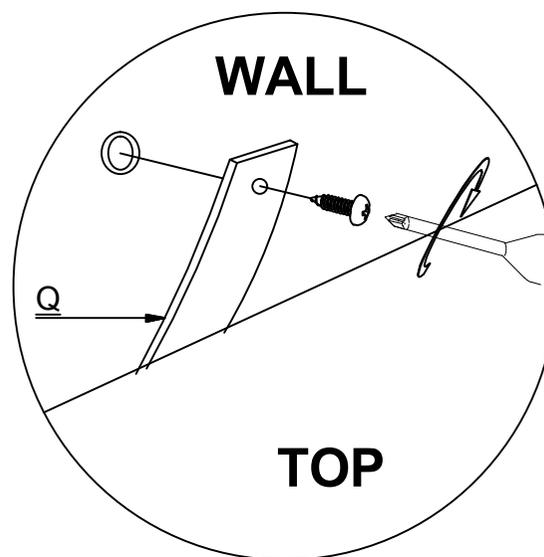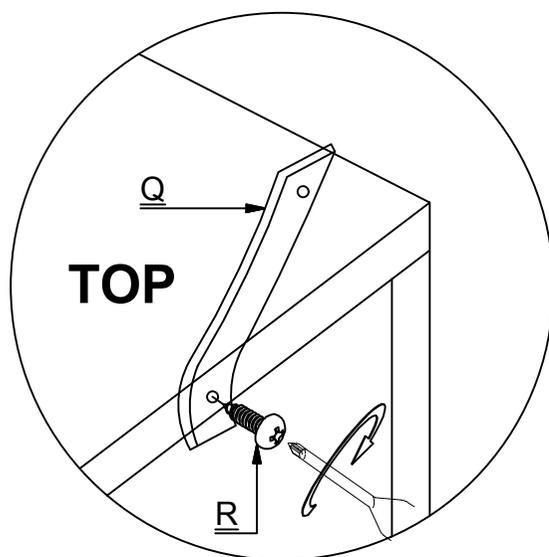

**CAUTION :** THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

