

OAK EFFECT VENEER CHARLES 3 DRAWER BEDSIDE CHEST ASSEMBLY INSTRUCTIONS



FOR DOMESTIC USE ONLY

IMPORTANT

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.


THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

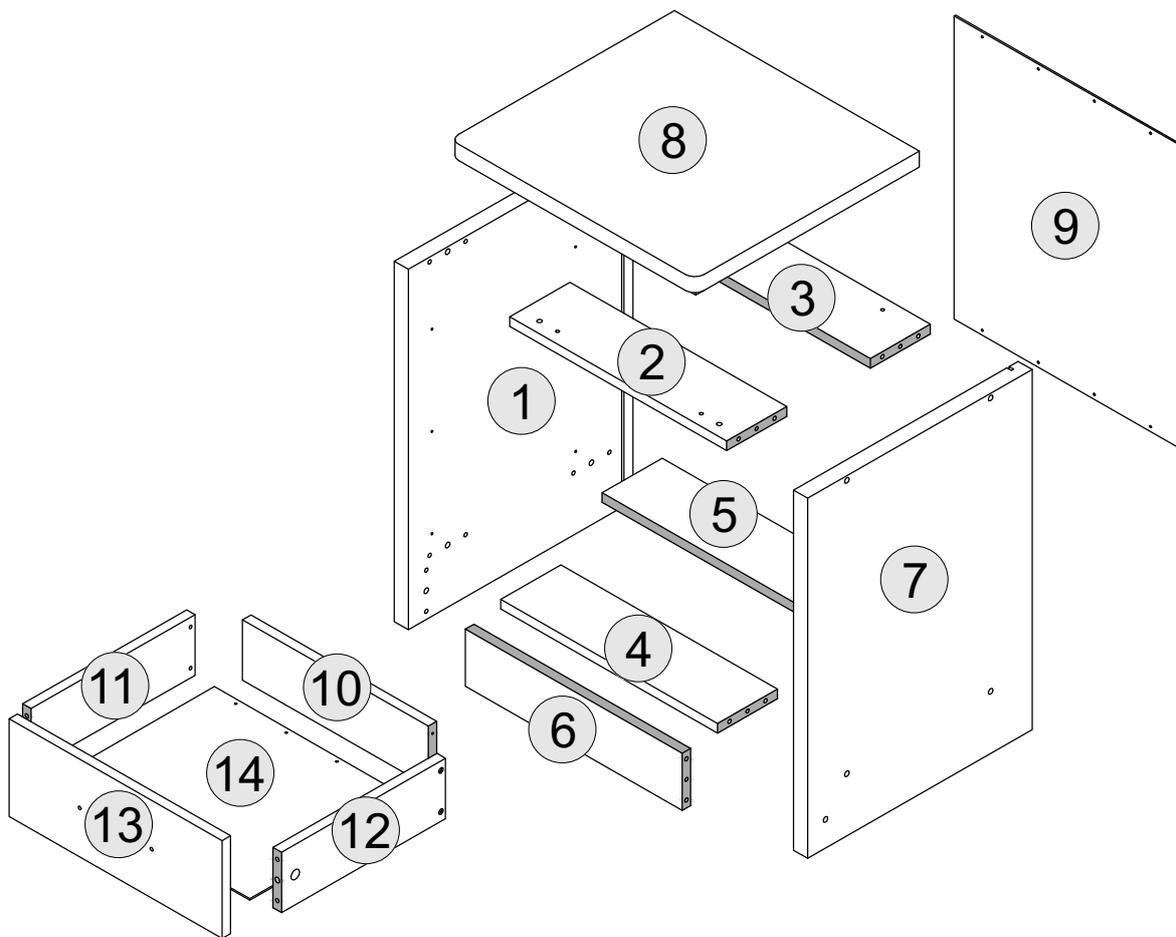


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-103-046-EU1-01	Left Side Panel	1	1/1
2	S100-103-046-EU1-02	Top Frame (Front)	1	1/1
3	S100-103-046-EU1-03	Top Frame (Back)	1	1/1
4	S100-103-046-EU1-04	Base Frame Horizontal	1	1/1
5	S100-103-046-EU1-05	Back Frame Horizontal	1	1/1
6	S100-103-046-EU1-06	Base Frame Vertical	1	1/1
7	S100-103-046-EU1-07	Right Side Panel	1	1/1
8	S100-103-046-EU1-08	Top Panel	1	1/1
9	S100-103-046-EU1-09	Back Panel	1	1/1
10	S100-103-046-EU1-10	Drawer Back	3	1/1
11	S100-103-046-EU1-11	Drawer Side - Left	3	1/1
12	S100-103-046-EU1-12	Drawer Side - Right	3	1/1
13	S100-103-046-EU1-13	Drawer Front	3	1/1
14	S100-103-046-EU1-14	Drawer Base	3	1/1






HARDWARE LIST

A		DOWEL 6 X 30MM	34 PCS
B		BOLT M7 X 60MM	10 PCS
C		SCREW M4 X 30MM	4 PCS
D		SCREW M4 X 38MM	12 PCS
E		TACK	20 PCS
F		HANDLE	3 PCS
G		CAM BOLT + CAM NUT	6 SETS
H		PLASTIC FOOT (L&R)	4 PCS
I		HANDLE SCREW M4 X 30MM	6 PCS
J		SCREW M3.5 X 16MM	46 PCS
K		DRAWER RUNNER A (L&R)	6 PCS
L		DRAWER RUNNER B (L&R)	6 PCS
M		ALLEN KEY	1 PC
N		ANTI - TIP STRAP	1 PCS
O		SCREW M4 X 16MM	1 PCS

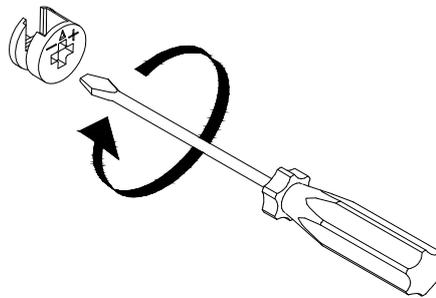

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

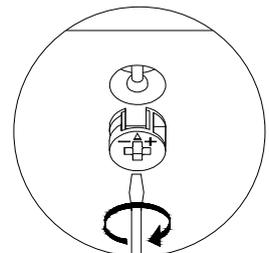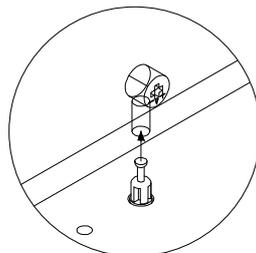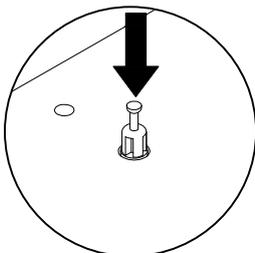

STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

STEP 1



PARTS REQUIRED

1 - LEFT SIDE PANEL	x1
7 - RIGHT SIDE PANEL	x1

HARDWARE REQUIRED

J		24
K		06

TOOLS REQUIRED

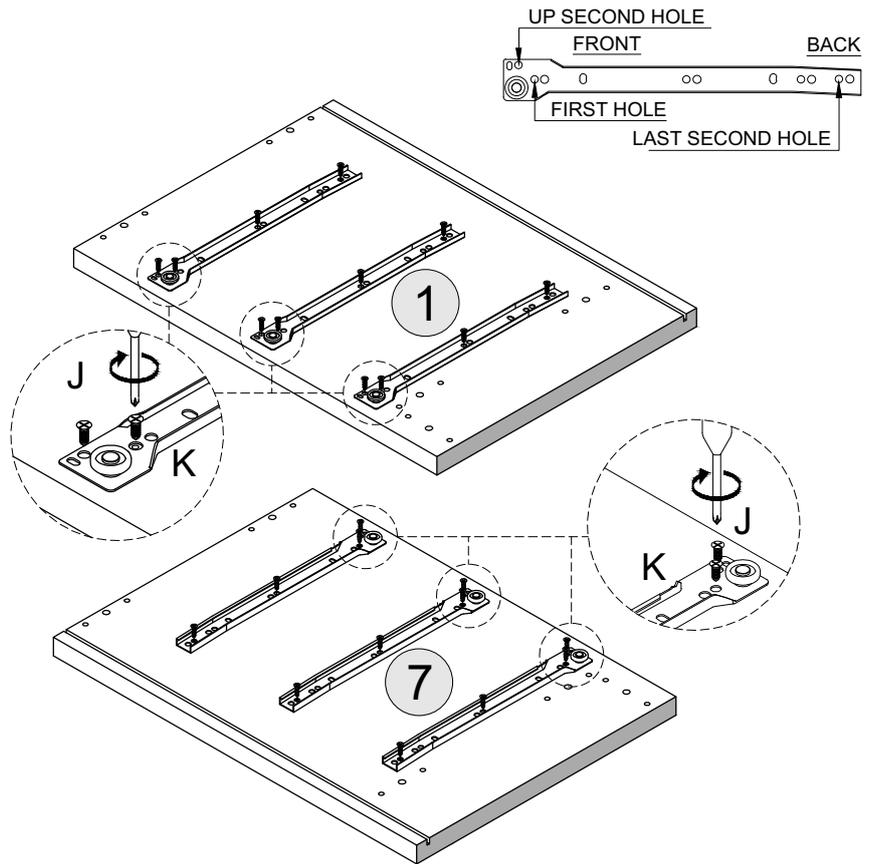

STEP 2


PARTS REQUIRED

2 - TOP FRAME (FRONT)	x1
3 - TOP FRAME (BACK)	x1
4 - BASE FRAME HORIZONTAL	x1
5 - BACK FRAME HORIZONTAL	x1
6 - BASE FRAME VERTICAL	x1
8 - TOP PANEL	x1

HARDWARE REQUIRED

A		22
---	---	----

TOOLS REQUIRED

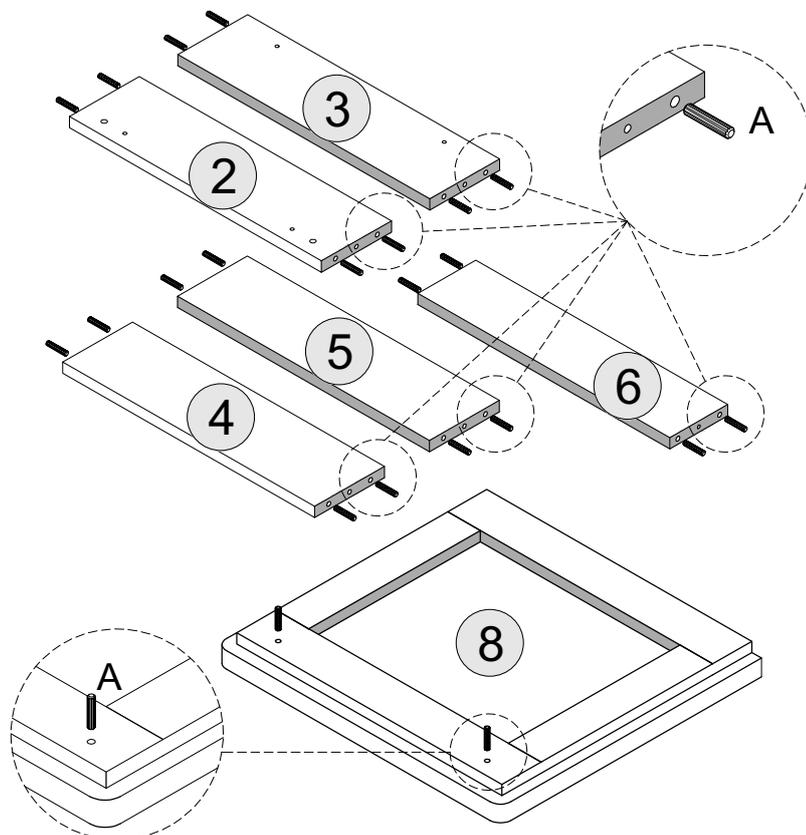


STEP 3


PARTS REQUIRED

1 - LEFT SIDE PANEL	x1
2 - TOP FRAME (FRONT)	x1
3 - TOP FRAME (BACK)	x1
4 - BASE FRAME HORIZONTAL	x1
5 - BACK FRAME HORIZONTAL	x1
6 - BASE FRAME VERTICAL	x1
7 - RIGHT SIDE PANEL	x1

HARDWARE REQUIRED


B		05
---	---	----

TOOLS REQUIRED

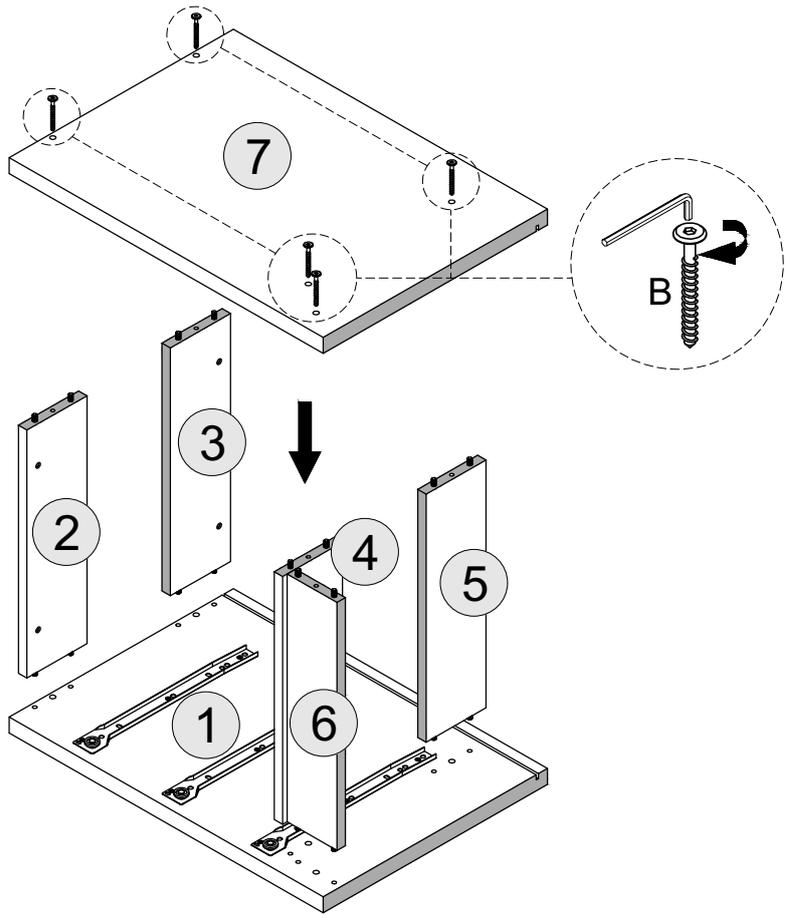


STEP 4


PARTS REQUIRED

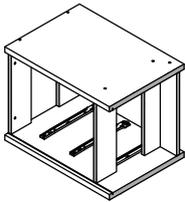

HARDWARE REQUIRED

B		05
---	---	----


TOOLS REQUIRED

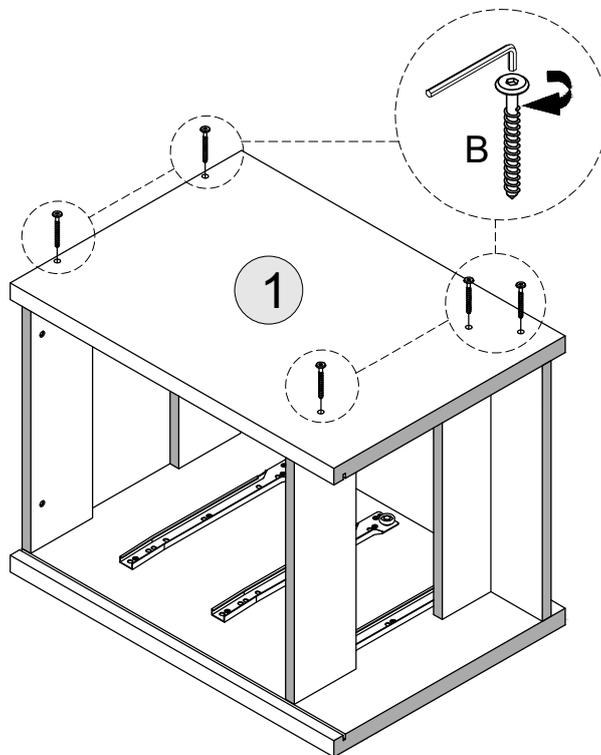

STEP 5

PARTS REQUIRED


8 - TOP PANEL x1

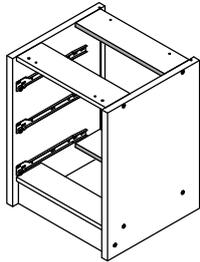


HARDWARE REQUIRED

C  04

TOOLS REQUIRED




FRONT SIDE VIEW

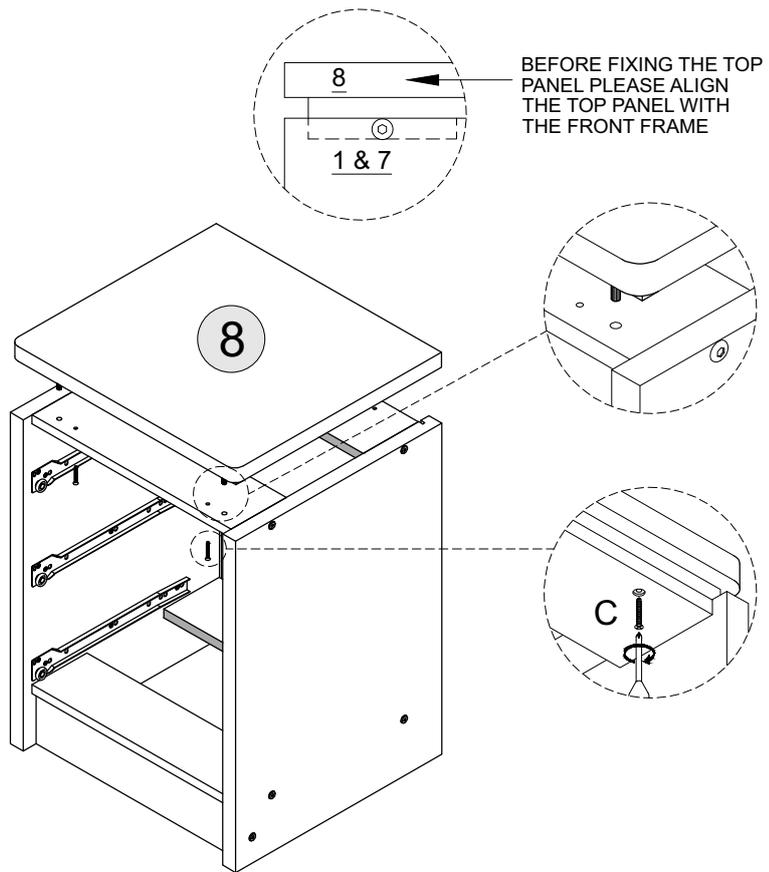

STEP 6

PARTS REQUIRED

9 - BACK PANEL x1

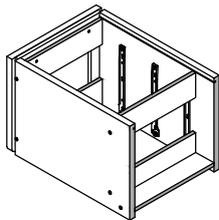




HARDWARE REQUIRED

E  08


H  04

J  04

TOOLS REQUIRED

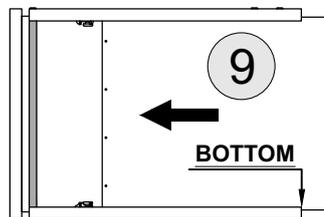

PLEASE INSERT THE BACK PANEL INTO THE UNIT

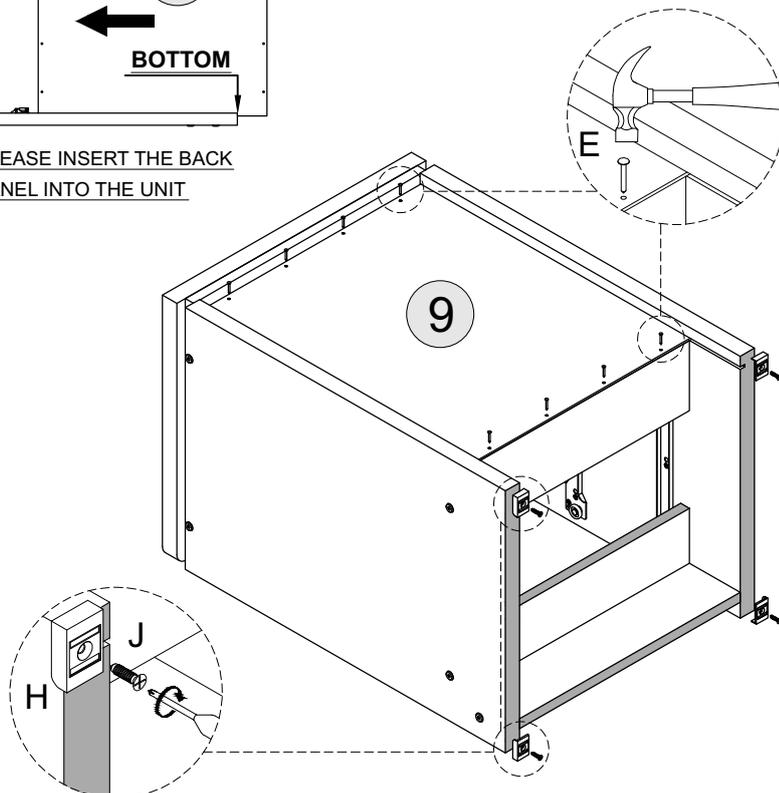

STEP 7



PARTS REQUIRED

10 - DRAWER BACK	x3
11 - DRAWER SIDE - LEFT	x3
12 - DRAWER SIDE - RIGHT	x3
13 - DRAWER FRONT	x3

HARDWARE REQUIRED

A		12
D		12
G		06

TOOLS REQUIRED

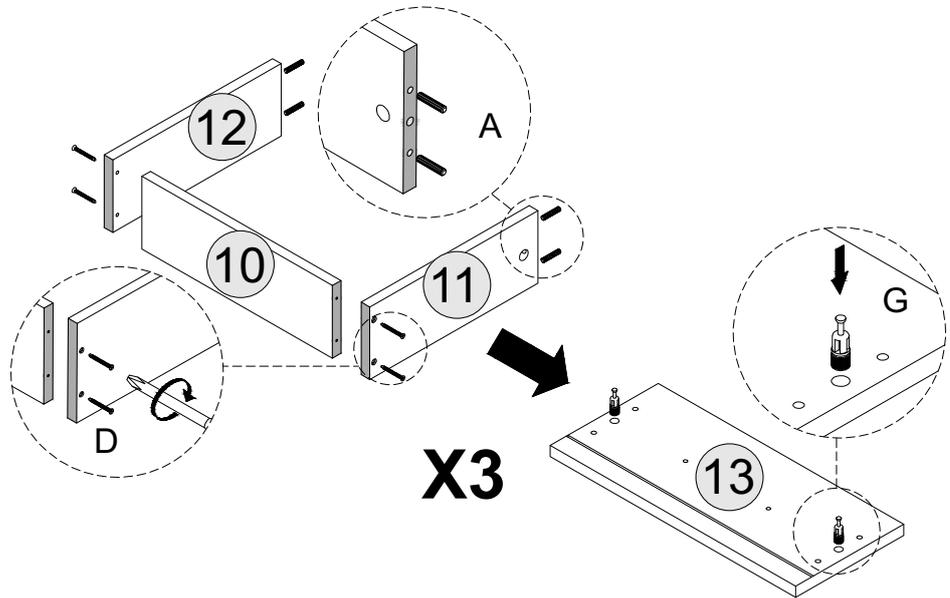

STEP 8



PARTS REQUIRED

13 - DRAWER FRONT	x3
-------------------	----

HARDWARE REQUIRED

F		03
G		06
I		06


TOOLS REQUIRED

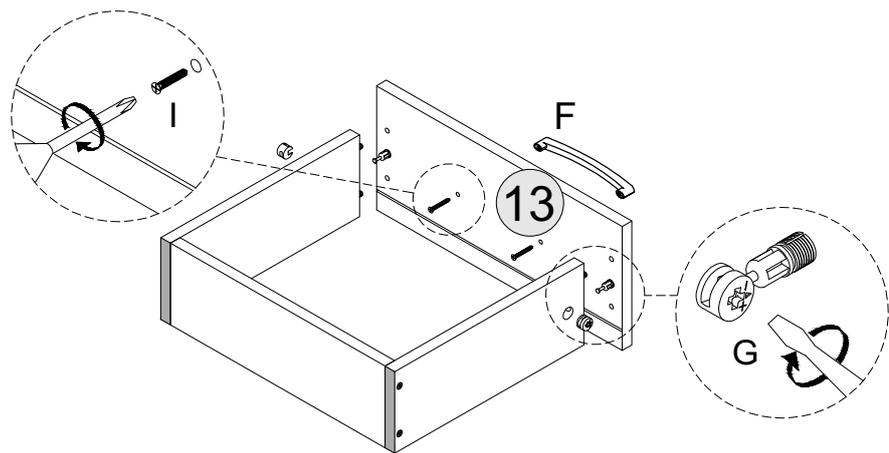

STEP 9

PARTS REQUIRED

14 - DRAWER BASE x3

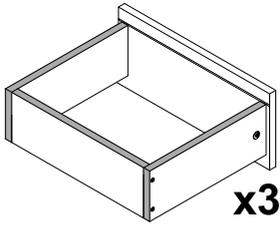




HARDWARE REQUIRED

E  12

J  18



L  06

TOOLS REQUIRED

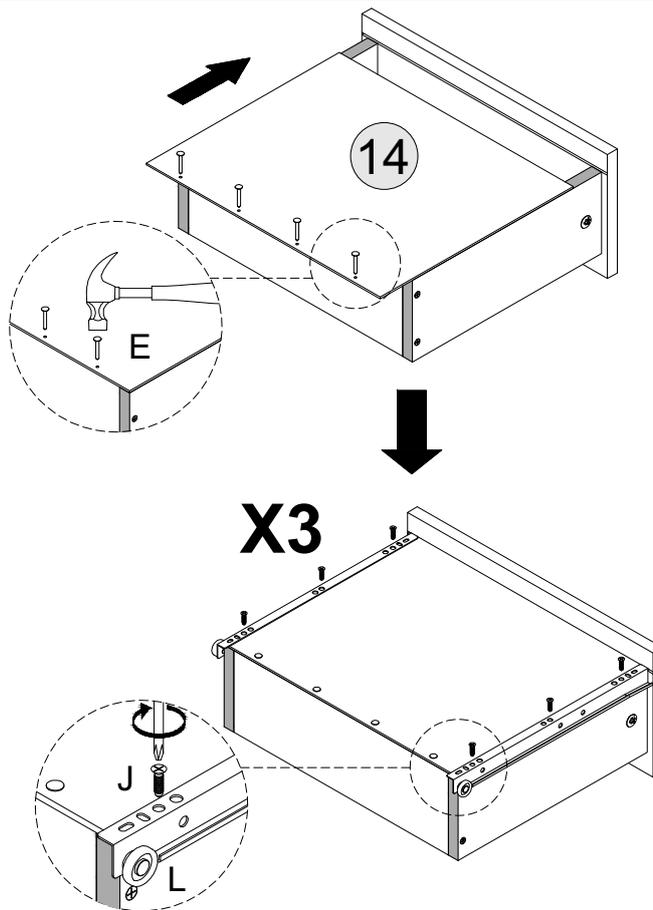


STEP 10

PARTS REQUIRED

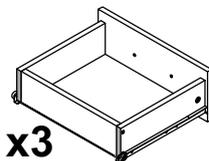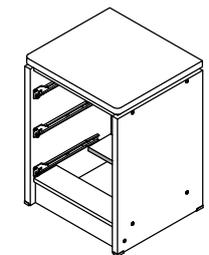

HARDWARE REQUIRED

TOOLS REQUIRED

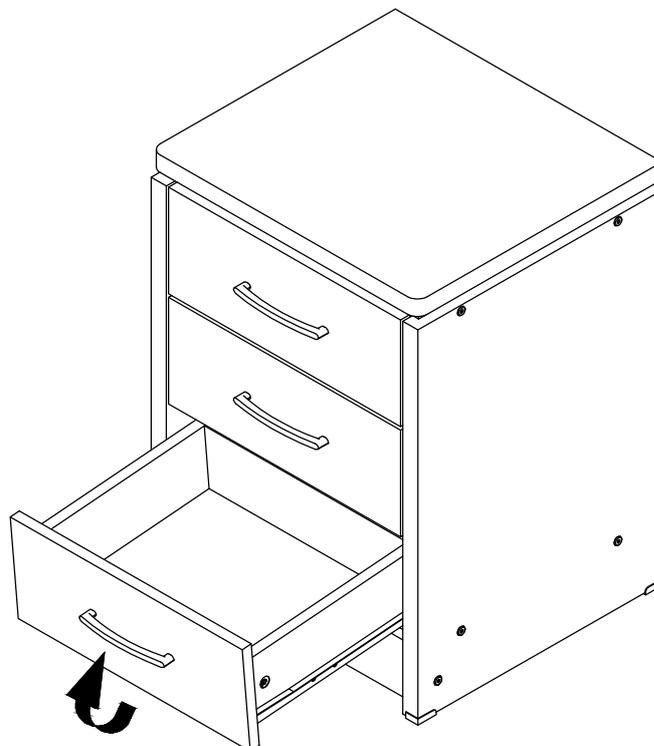

STEP 10PART REQUIREDHARDWARE REQUIREDTOOLS REQUIRED**WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

