


BERGEN 2 DOOR 2 DRAWER SIDEBBOARD

OAK EFFECT/WHITE/GREY

ASSEMBLY INSTRUCTIONS

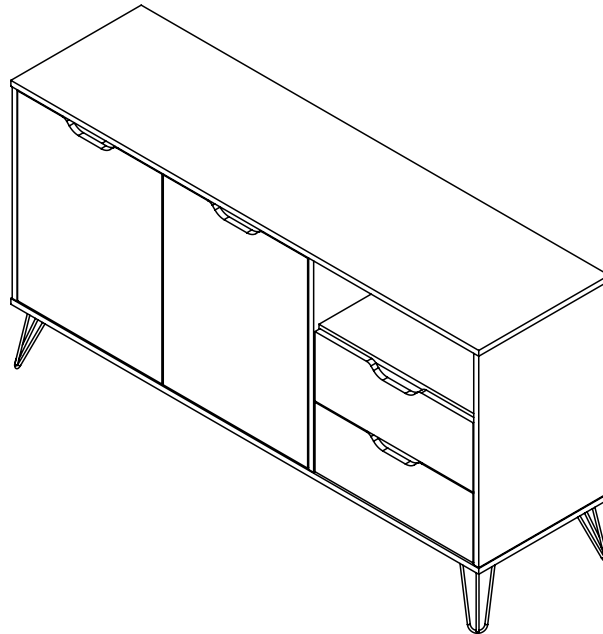


IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER


CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

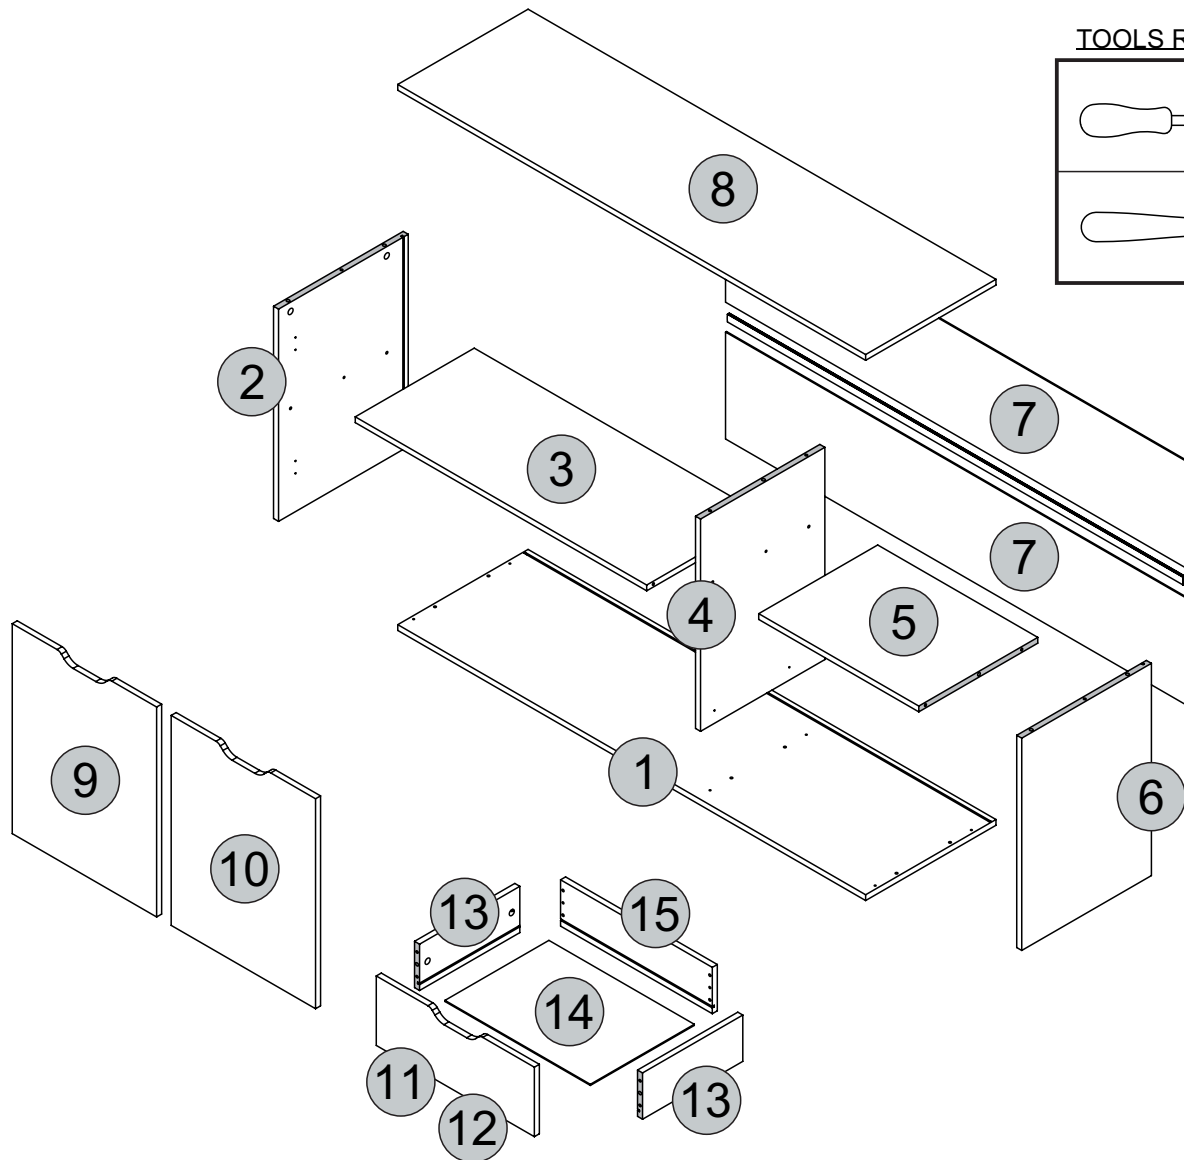

TOOLS REQUIRED

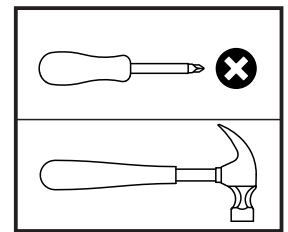









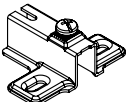
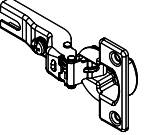
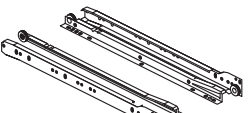

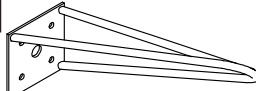
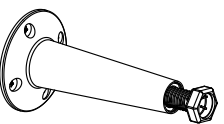

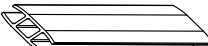

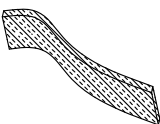

PARTS LIST

Please Note:

The below parts have all been stamped with the part number to help identify them during assembly.


Part Number	Part Code	Part Description	Quantity	Carton
1	S400-405-032-AY1 - 01	Base Panel	1	2/2
2	S400-405-032-AY1 - 02	Left Side Panel	1	2/2
3	S400-405-032-AY1 - 03	Shelf Panel	1	2/2
4	S400-405-032-AY1 - 04	Division Panel	1	2/2
5	S400-405-032-AY1 - 05	Fixed Shelf	1	1/2
6	S400-405-032-AY1 - 06	Right Side Panel	1	2/2
7	S400-405-032-AY1 - 07	Back Panel	2	2/2
8	S400-405-032-AY1 - 08	Top Panel	1	2/2
9	S400-405-032-AY1 - 09	Left Door	1	1/2
10	S400-405-032-AY1 - 10	Right Door	1	1/2
11	S400-405-032-AY1 - 11	Lower Drawer Front	1	1/2
12	S400-405-032-AY1 - 12	Drawer Front	1	1/2
13	S400-405-032-AY1 - 13	Drawer Side	4	1/2
14	S400-405-032-AY1 - 14	Drawer Bottom	2	2/2
15	S400-405-032-AY1 - 15	Drawer Back Panel	2	1/2

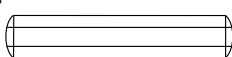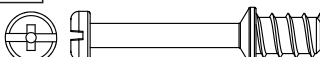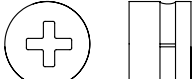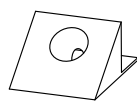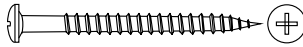FITTINGS LIST


<p>A</p>  <p>2/+ Dowel Ø6,0 x 30mm (34x)</p>	<p>B</p>  <p>2/+ Cam Bolt (17x)</p>	<p>C</p>  <p>2/+ Cam Nut (17x)</p>	<p>D</p>  <p>2/+ Plastic Corner (16x)</p>
<p>E</p>  <p>1/+ Pan Head Screw Ø3,5 x 40mm (6x)</p>	<p>F</p>  <p>2/+ Pan Head Screw Ø3 x 16mm (16x)</p>	<p>G</p>  <p>2/+ Pan Head Screw Ø3,5 x 12mm (20x)</p>	<p>H</p>  <p>2/+ Pan Head Screw Ø4 x 14mm (36x)</p>
<p>I</p>  <p>Hinge Plate (4x)</p>	<p>J</p>  <p>Hinge (4x)</p>	<p>K</p>  <p>Drawer Runners (2x)</p>	<p>L</p>  <p>3/+ Hole Plugs (13x)</p>
<p>M</p>  <p>Metal Leg (4x)</p>	<p>N</p>  <p>Adjustable Leg (1x)</p>	<p>O</p>  <p>Glue (2x)</p>	<p>P</p>  <p>Back Panel Strip (1x)</p>
<p>Q</p>  <p>Washer (4x)</p>	<p>R</p>  <p>Strap (2x)</p>	<p>S</p>  <p>Pan Head Screw Ø4 x 20mm (1x)</p>	

TIPS FOR FITTINGS CAM-LOCKS


WHEN FITTING CAM NUT, ENSURE STARTING POSITION IS CORRECT BEFORE YOU INSERT CONNECTING CAM BOLT. TURN CLOCKWISE UNTIL SECURE




↑
CORRECT




WRONG



WRONG




X

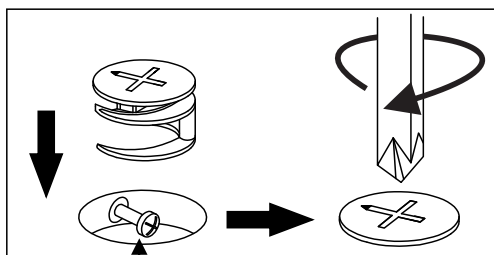

Cam bolt head needs to be in centre

CAMBOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

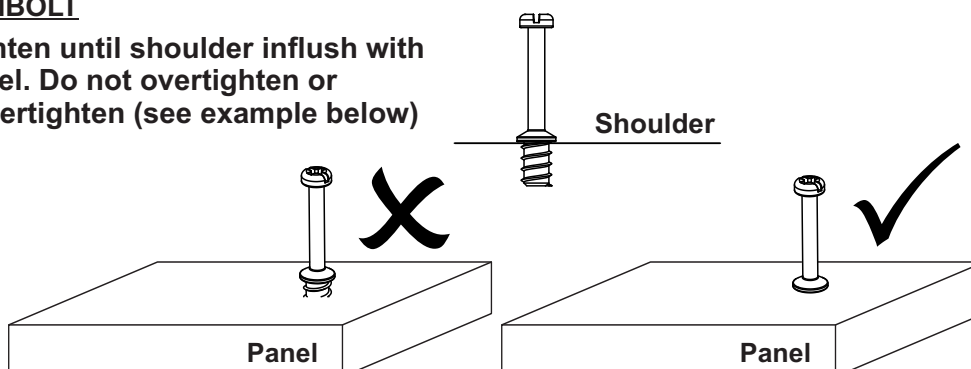


STEP 1




PARTS REQUIRED

8 - TOP PANEL x1

HARDWARE REQUIRED

B  05

TOOLS REQUIRED

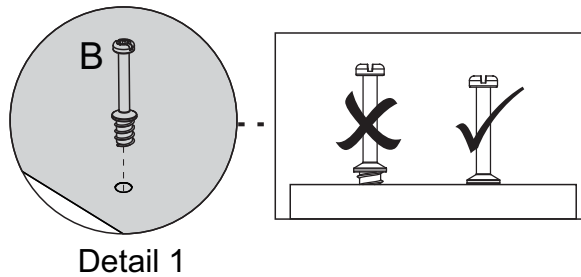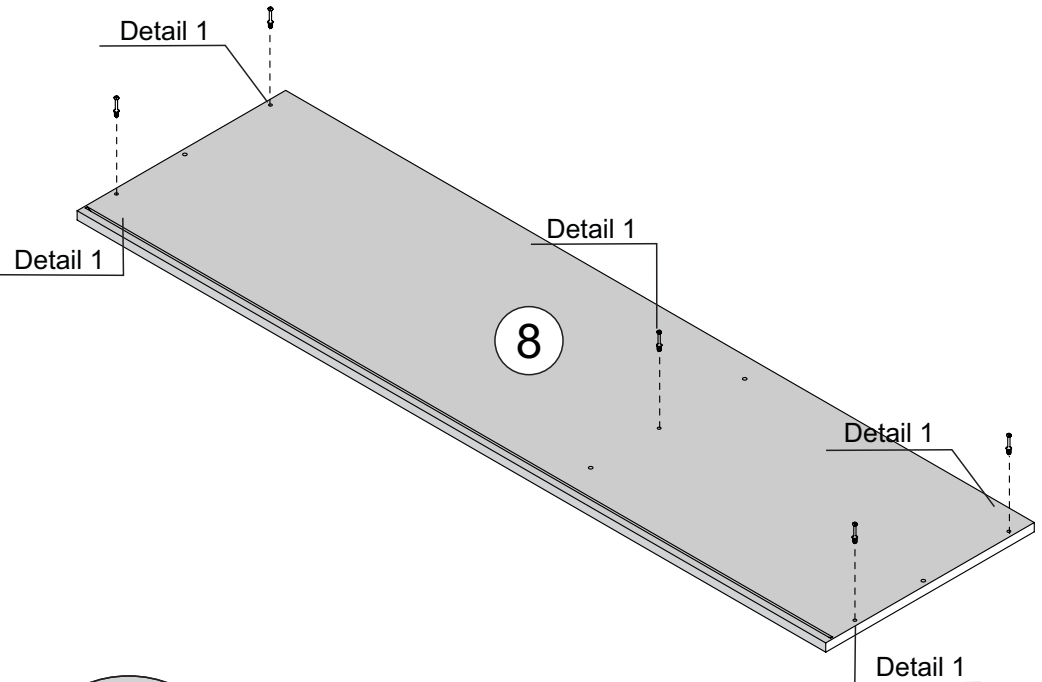


STEP 2

PARTS REQUIRED



3- SHELF PANEL x1

HARDWARE REQUIRED

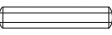A  04

O  GLUE 01

TOOLS REQUIRED

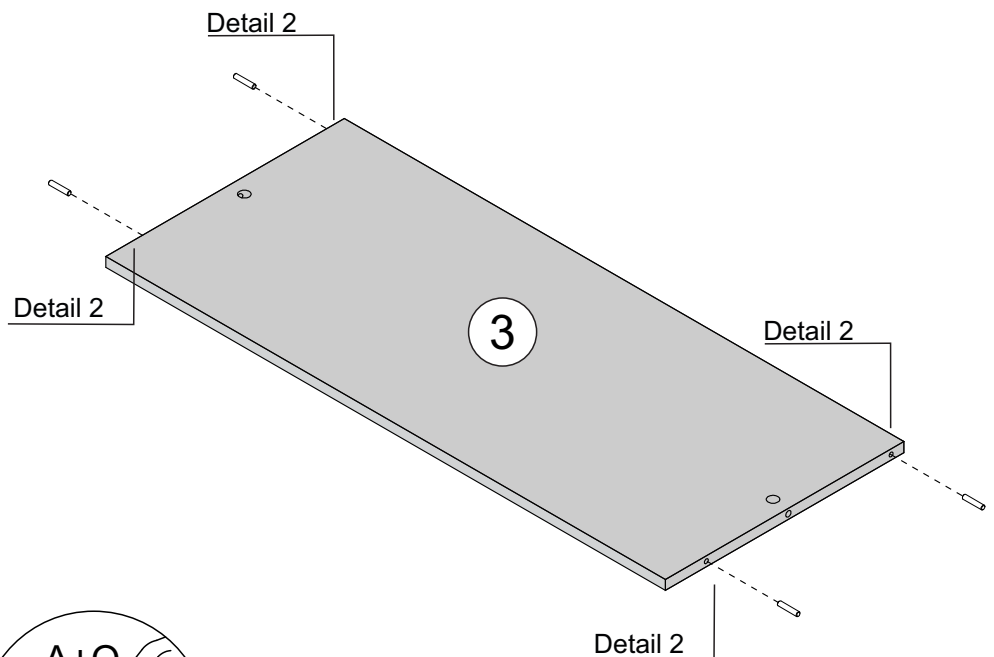


STEP 3

PARTS REQUIRED



5 - FIXED SHELF x1

HARDWARE REQUIRED

A  04

O  01

TOOLS REQUIRED

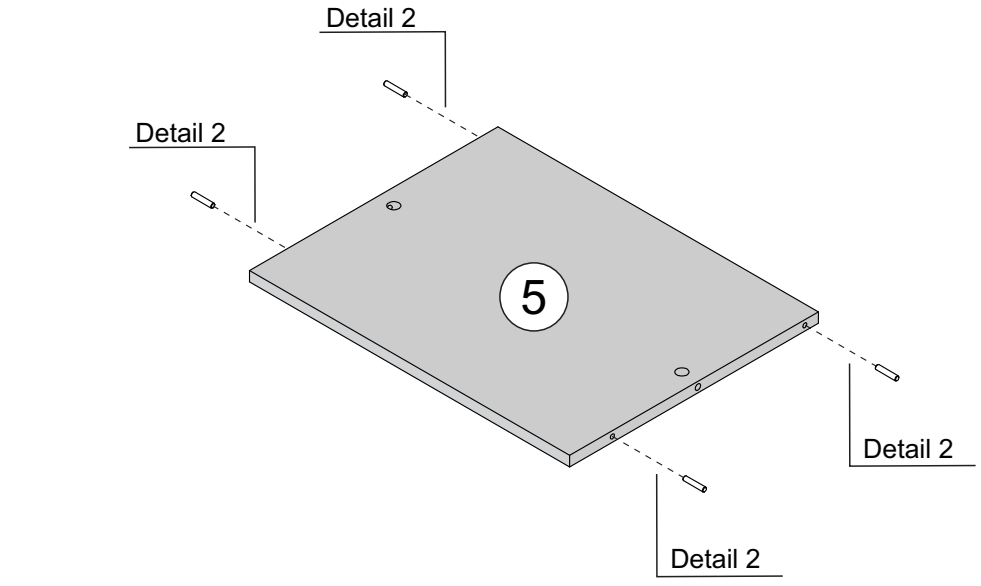


Detail 2


STEP 4


PARTS REQUIRED


2 - LEFT SIDE PANEL x1

HARDWARE REQUIRED

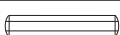A  03




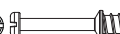
B  01

H  04



I  02

O  01


TOOLS REQUIRED

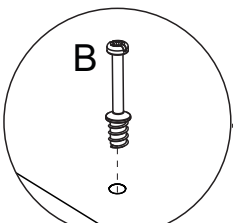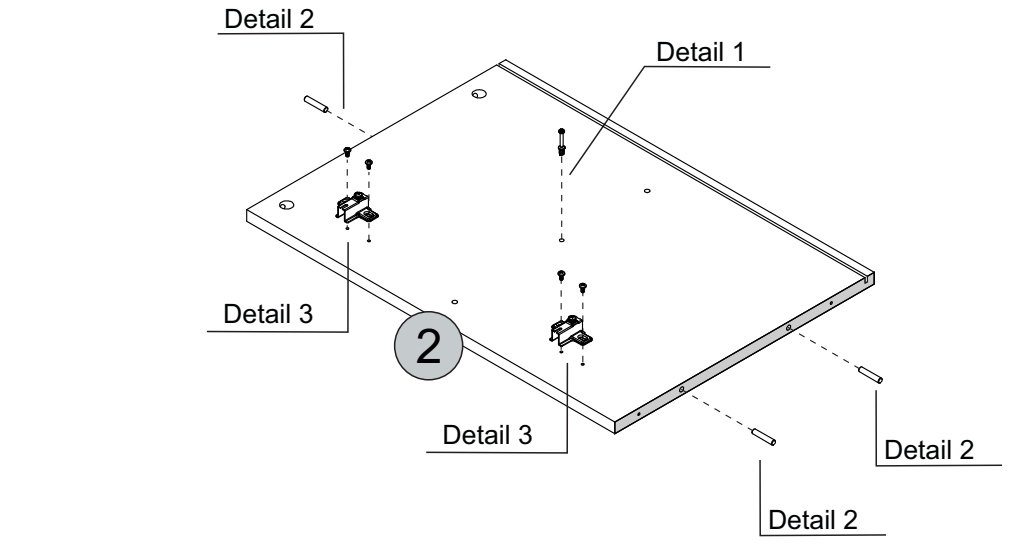

Detail 1

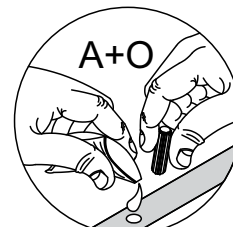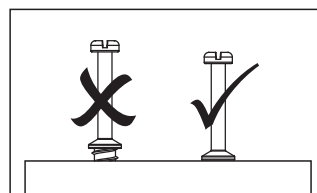

Detail 2

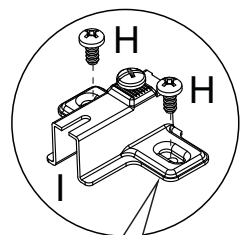

Please note:
Pre-marked
Holes






Detail 3

STEP 5








PARTS REQUIRED

6 - RIGHT SIDE PANEL x1

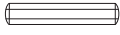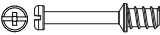HARDWARE REQUIRED

- A  03
- B  01
- G  06
- K  02
- O  01

TOOLS REQUIRED

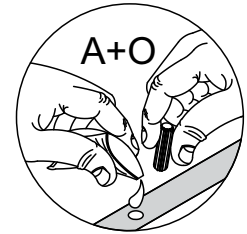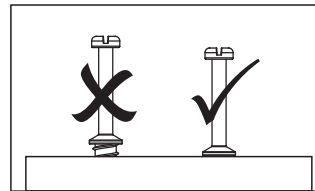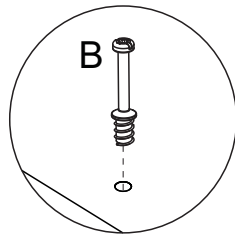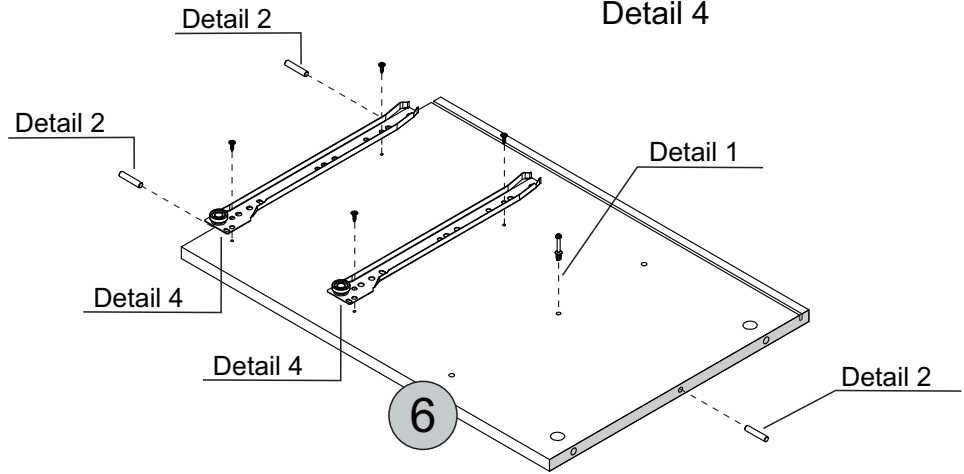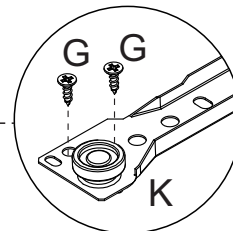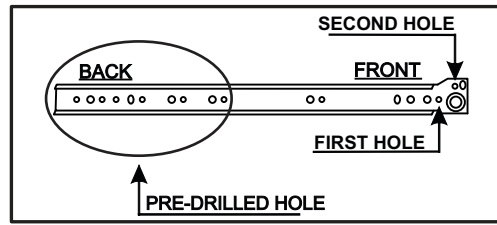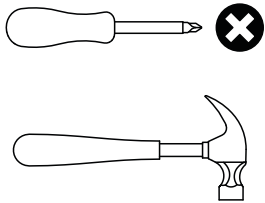

Detail 1






Detail 2

STEP 6





PARTS REQUIRED

4 - DIVISION PANEL x1

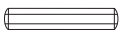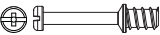HARDWARE REQUIRED

- A  04
- B  01
- H  04
- I  02
- O  01

TOOLS REQUIRED

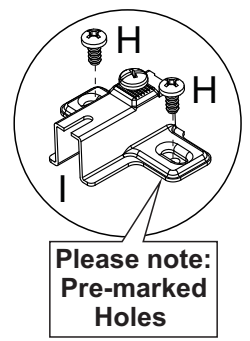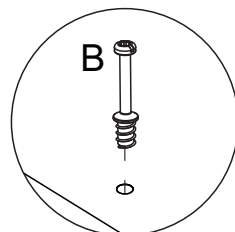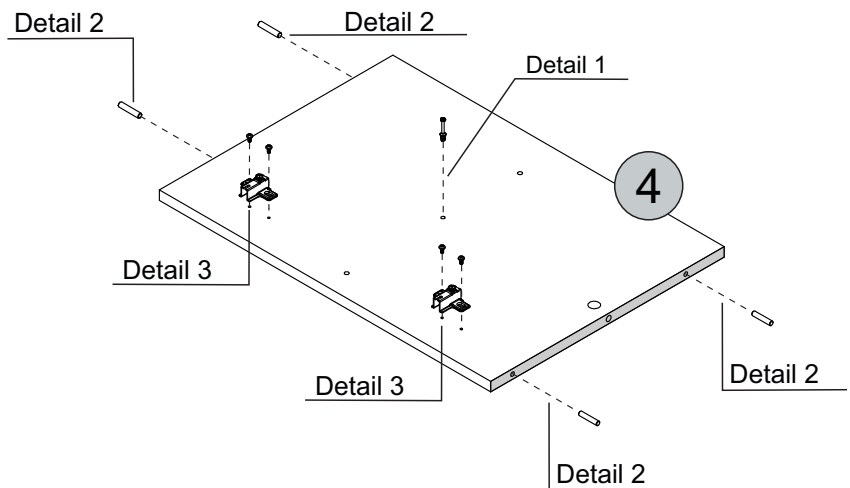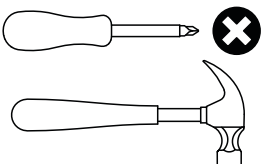

Please note:
Pre-marked
Holes

Detail 1

Detail 2

Detail 3

STEP 7

PARTS REQUIRED




4 - DIVISION PANEL x1

HARDWARE REQUIRED


G  06

K  02

TOOLS REQUIRED

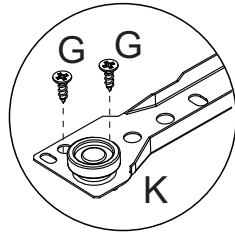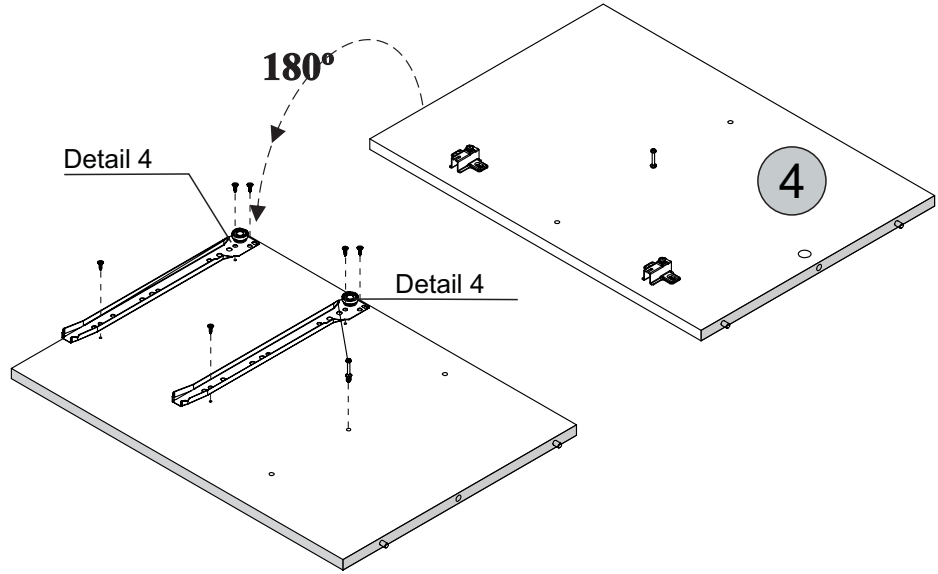

Detail 4

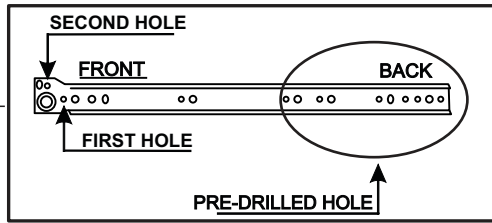

STEP 8

PARTS REQUIRED

2 - LEFT SIDE PANEL x1




3 - SHELF PANEL x1

HARDWARE REQUIRED


C  01

O  01

TOOLS REQUIRED

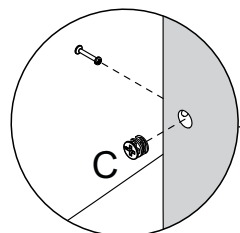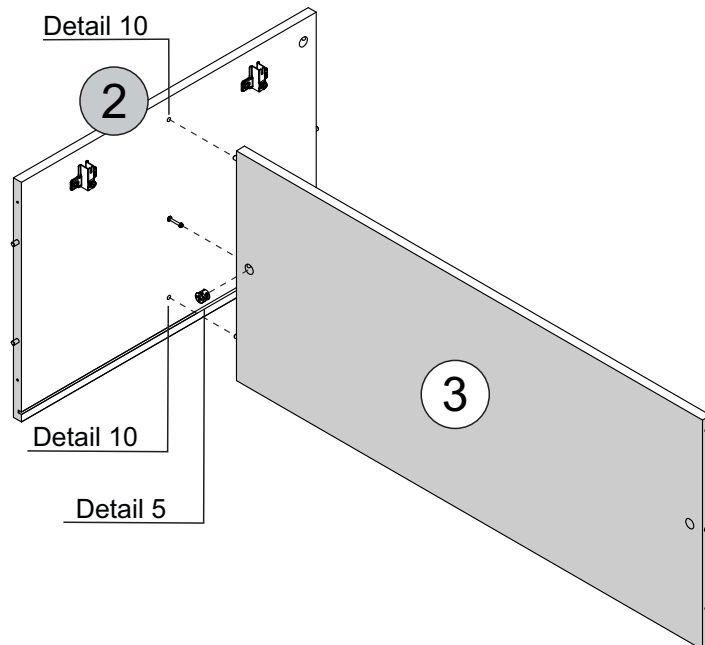

Detail 5

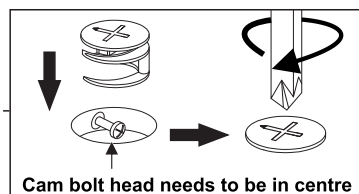

Cam bolt head needs to be in centre




Detail 10



STEP 9

PARTS REQUIRED

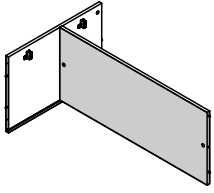4 - DIVISION PANEL x1






HARDWARE REQUIRED


C   01

O  01

TOOLS REQUIRED

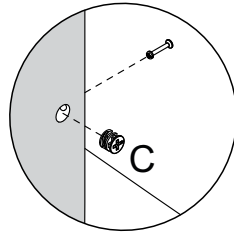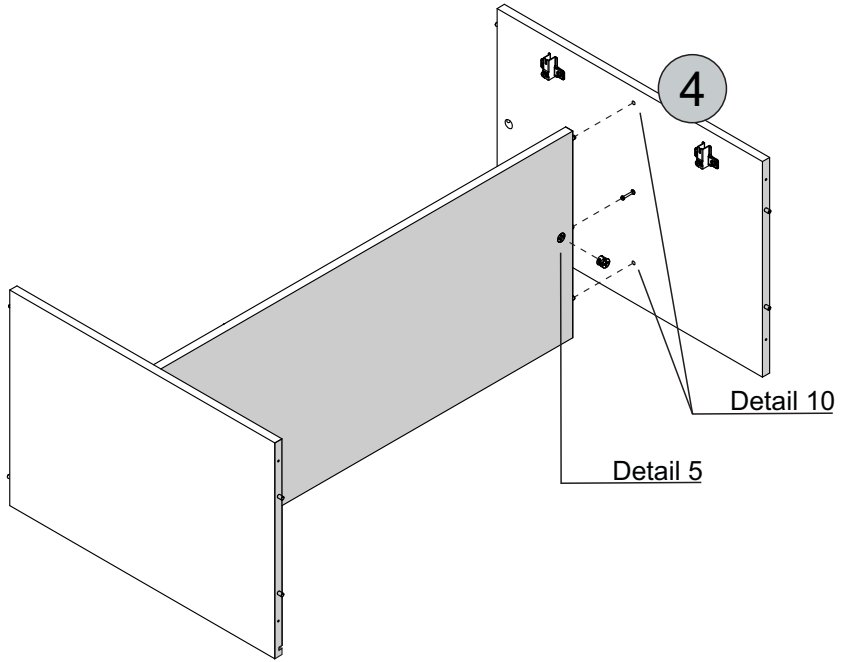

Detail 5

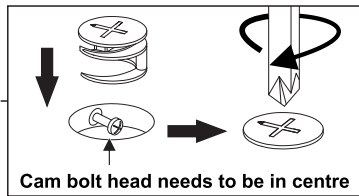


Detail 10



STEP 10

PARTS REQUIRED

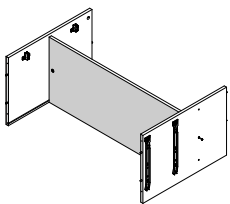5 - FIXED SHELF x1






HARDWARE REQUIRED



C   01

O  01

TOOLS REQUIRED

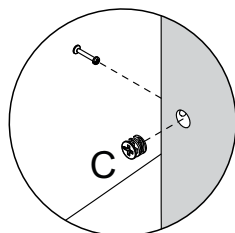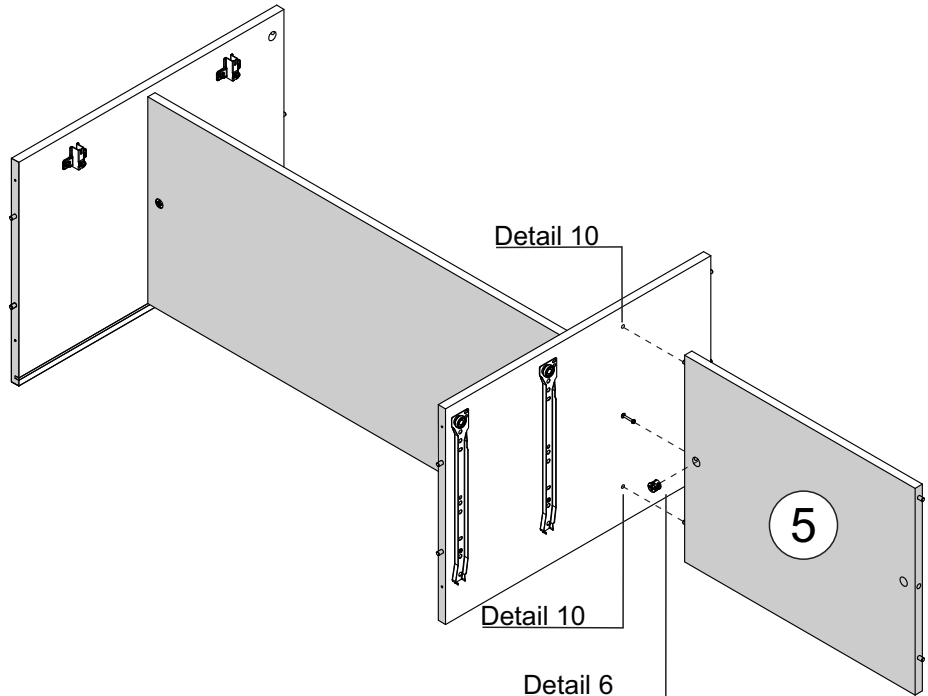


Detail 5

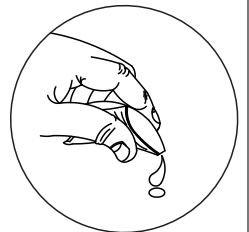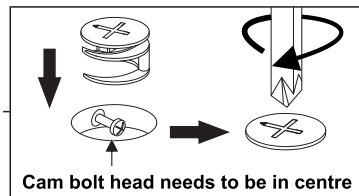

Detail 10

STEP 11

6 - RIGHT SIDE PANEL x1


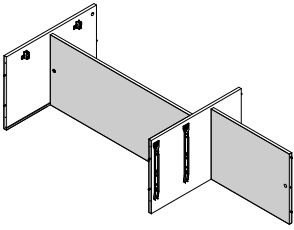


HARDWARE REQUIRED



C   01

O  GLUE 01


TOOLS REQUIRED

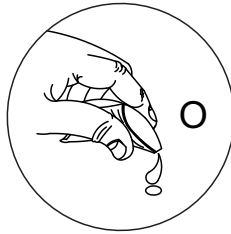

Detail 10

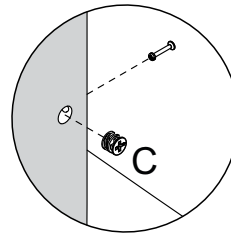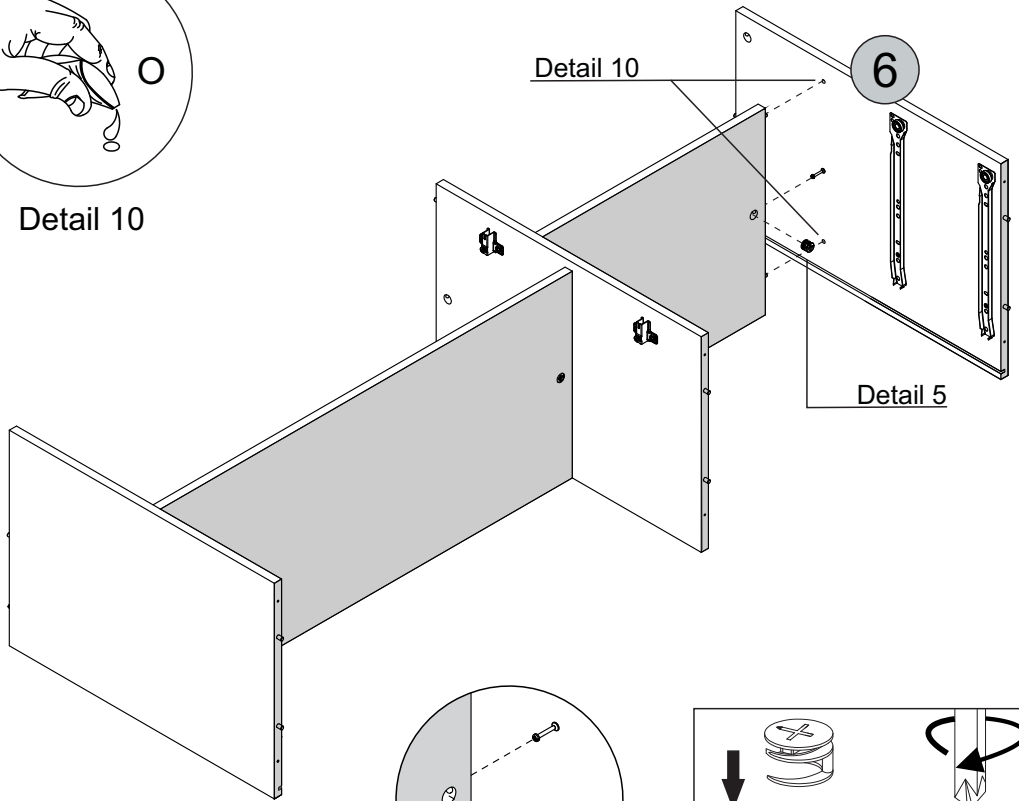


Detail 5

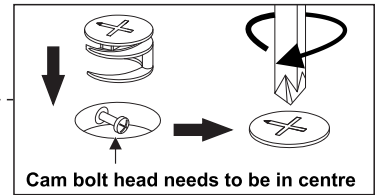


STEP 12

PARTS REQUIRED

1 - BASE PANEL x1

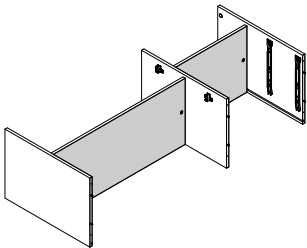


HARDWARE REQUIRED



E  06

O  GLUE 01

TOOLS REQUIRED




Detail 10

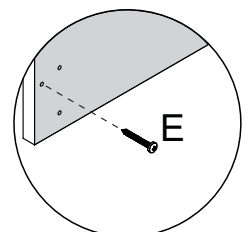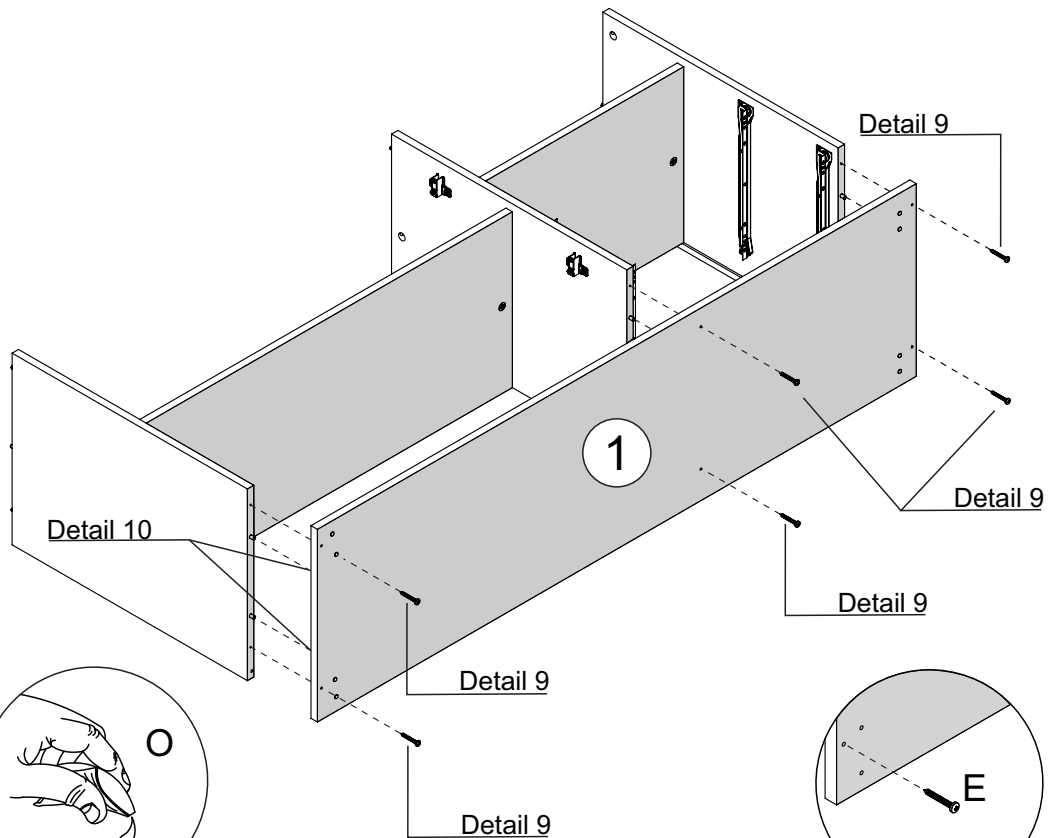



Detail 9

STEP 13



PARTS REQUIRED

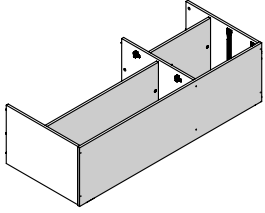

HARDWARE REQUIRED




TOOLS REQUIRED

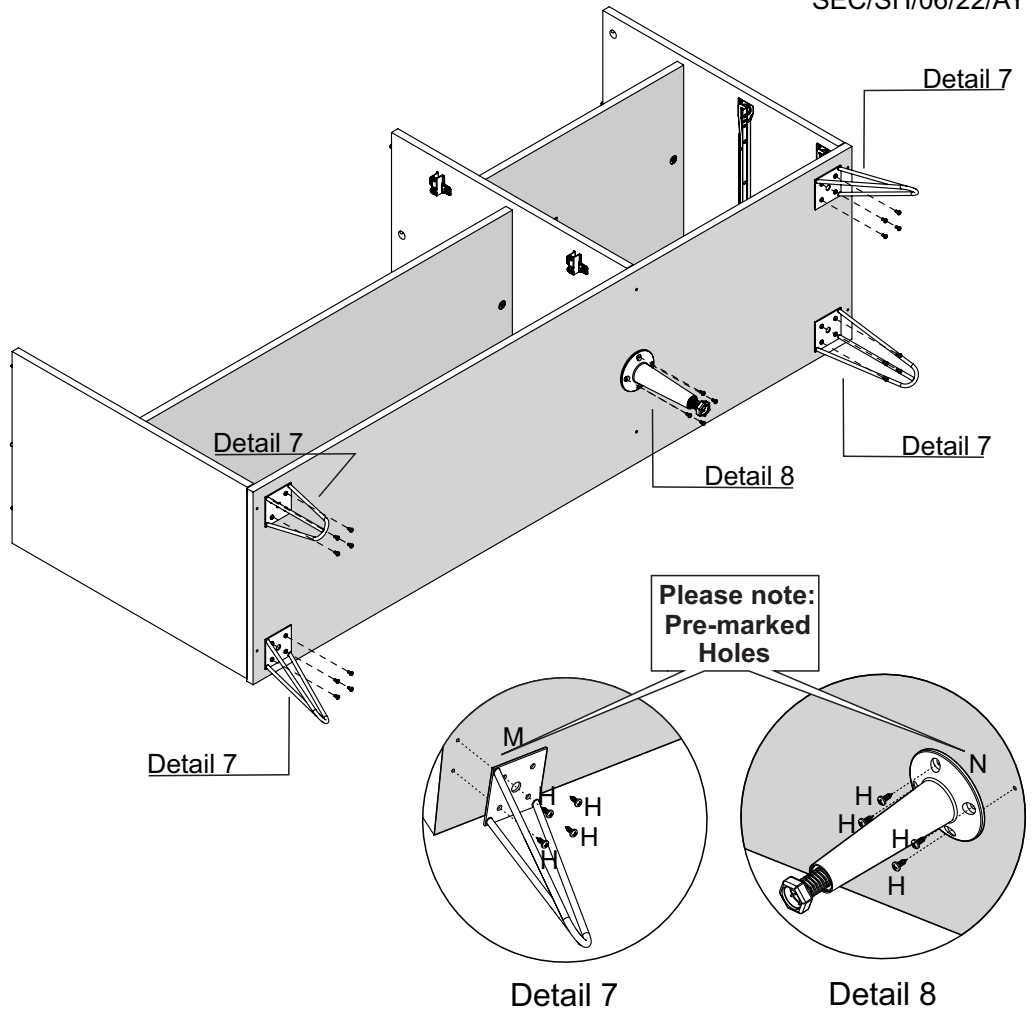


STEP 14

PARTS REQUIRED


7 - BACK PANEL x2

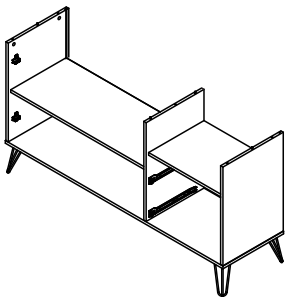

HARDWARE REQUIRED




TOOLS REQUIRED

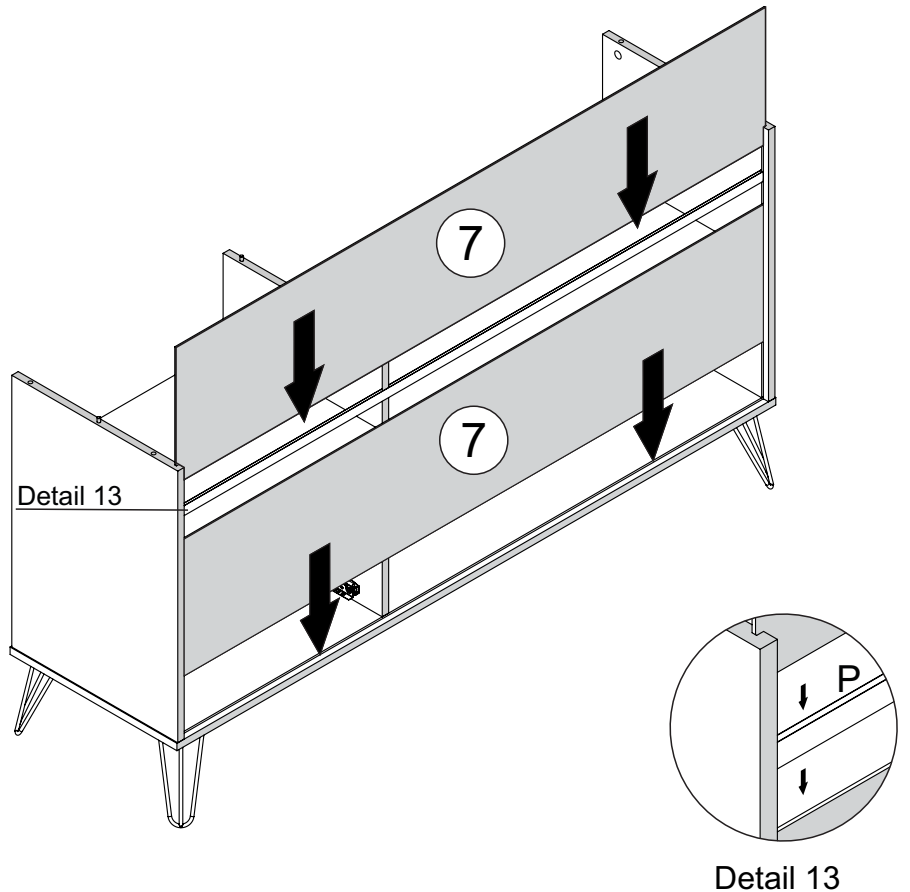

STEP 15

PARTS REQUIRED

8 - TOP PANEL x1

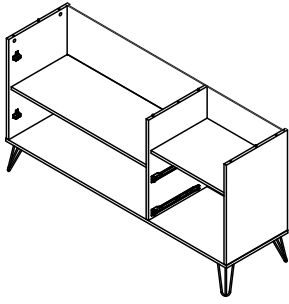





HARDWARE REQUIRED

C 05

L 05


O 01

TOOLS REQUIRED

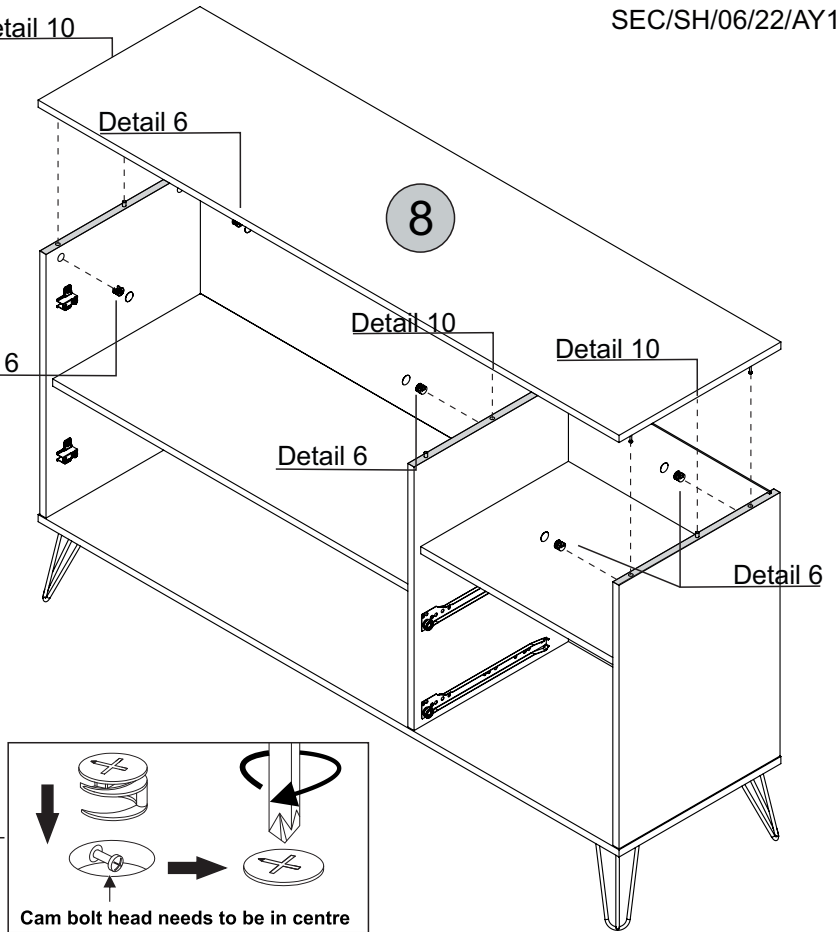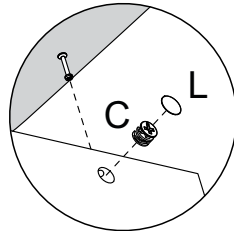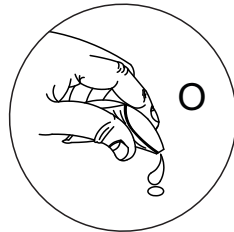

STEP 16

PARTS REQUIRED





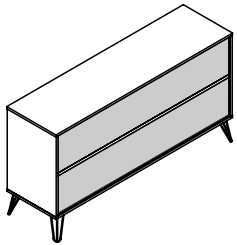


HARDWARE REQUIRED

D 16

F 16

TOOLS REQUIRED

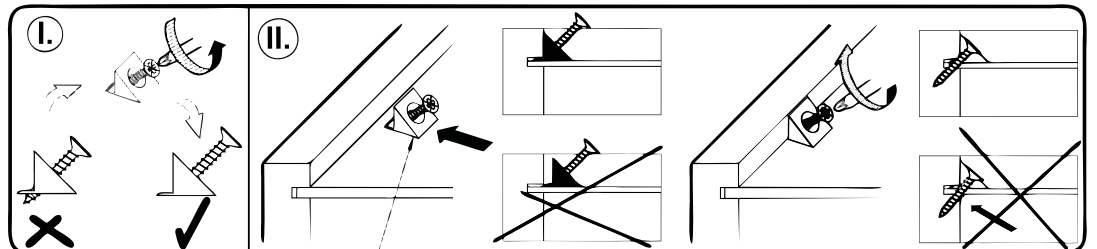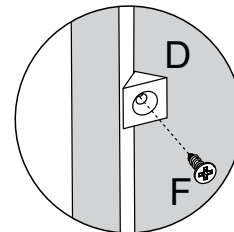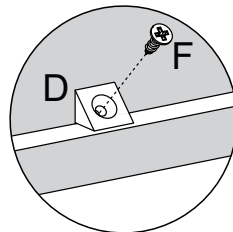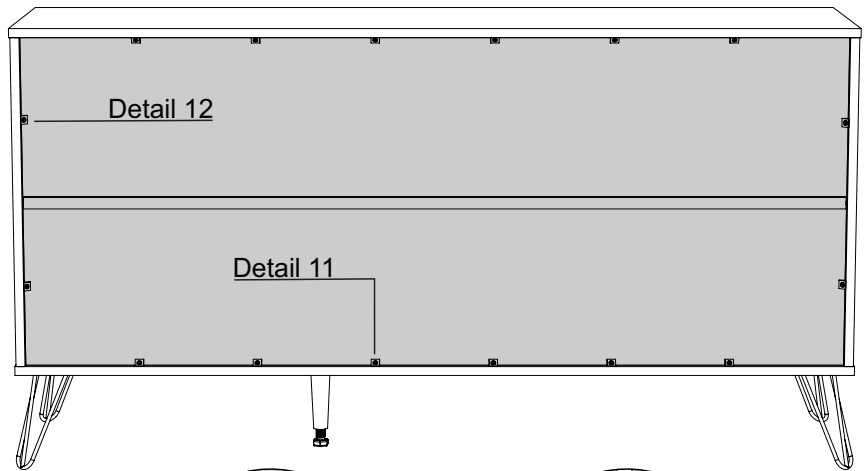


STEP 17


PARTS REQUIRED

9 - LEFT DOOR x1



10 - RIGHT DOOR x1

HARDWARE REQUIRED

H  08

J  04

TOOLS REQUIRED

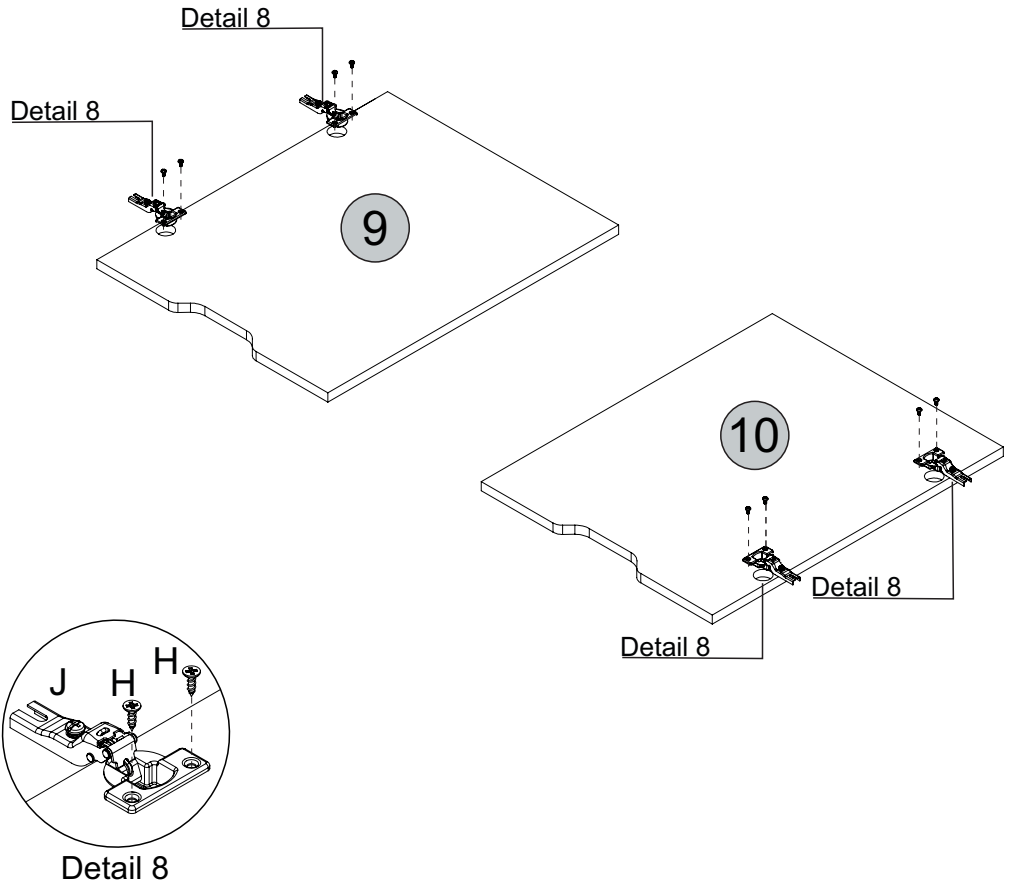


STEP 18

PARTS REQUIRED


9 - LEFT DOOR x1

10 - RIGHT DOOR x1

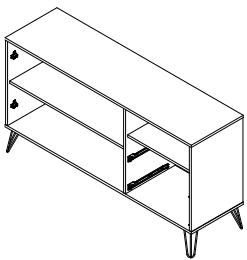

HARDWARE REQUIRED

TOOLS REQUIRED

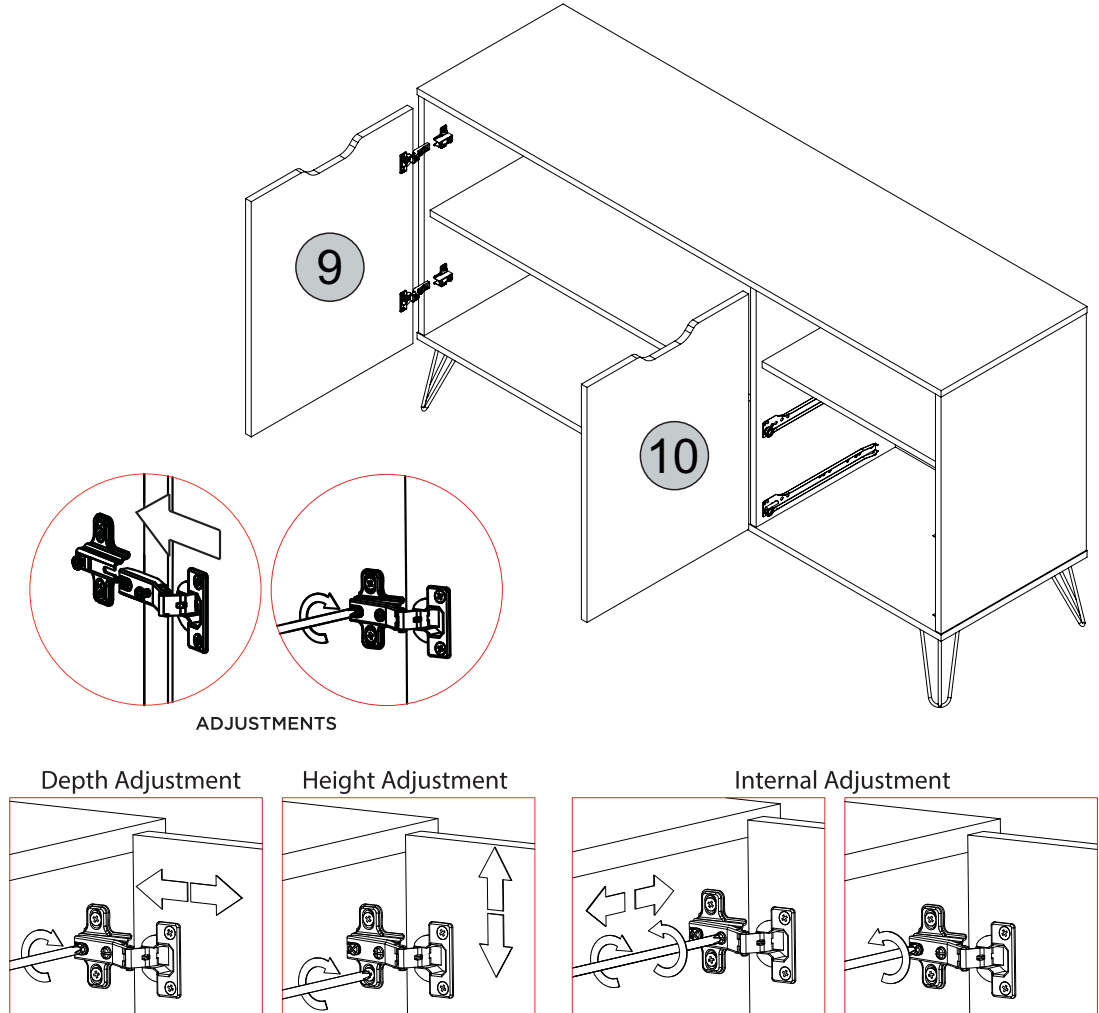




STEP 19





PARTS REQUIRED

- 11 - LOWER DRAWER FRONT x1
- 12 - DRAWER FRONT x1
- 13 - DRAWER SIDE x4
- 15 - DRAWER BACK x2

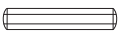HARDWARE REQUIRED

- A  16
- B  08
- O  01

TOOLS REQUIRED

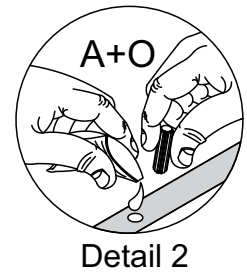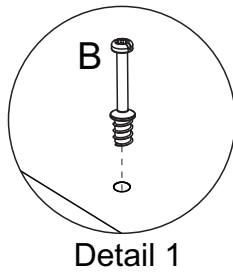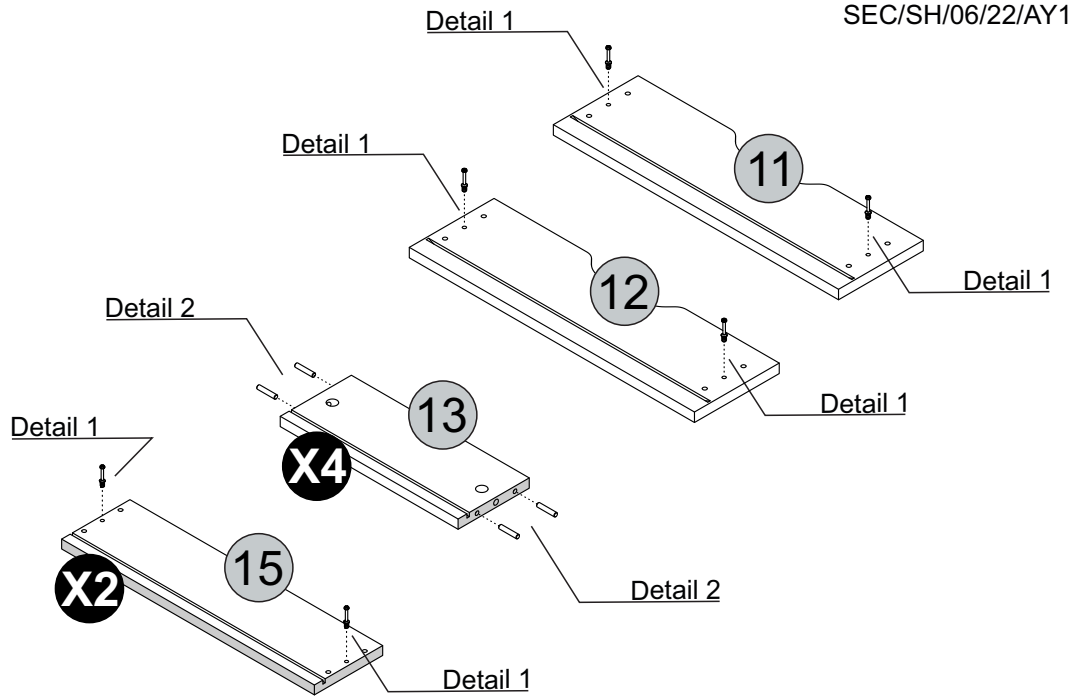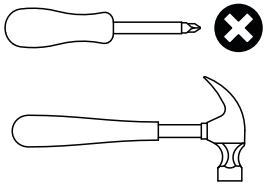




STEP 20





PARTS REQUIRED

- 13 - DRAWER SIDE x4
- 14 - DRAWER BOTTOM x2
- 15 - DRAWER BACK x2

HARDWARE REQUIRED

- C   04
- L  04

TOOLS REQUIRED

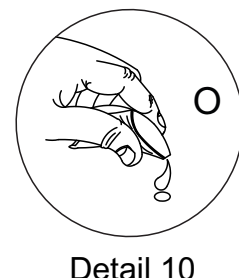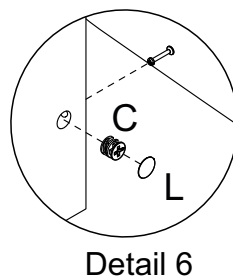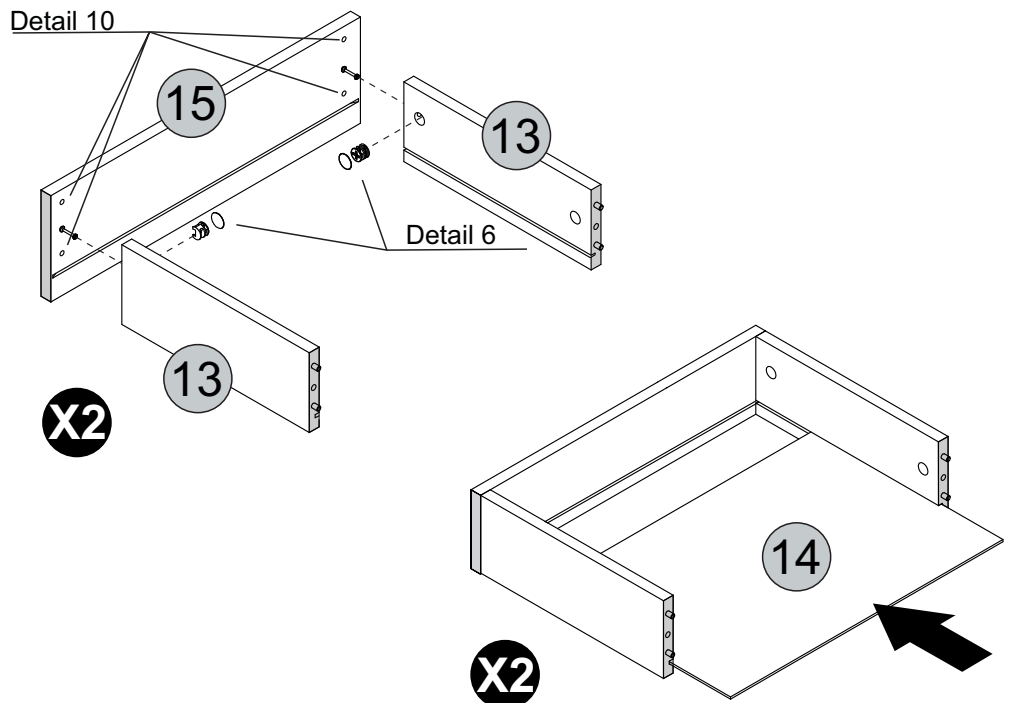


STEP 21


PARTS REQUIRED

11 - LOWER DRAWER FRONT x2

12 - DRAWER FRONT x2



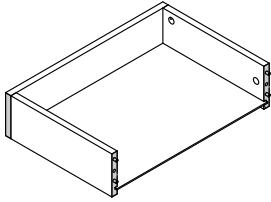


HARDWARE REQUIRED



C  04

L  04

TOOLS REQUIRED

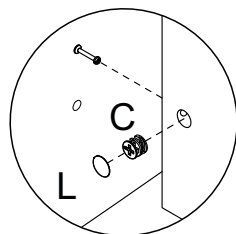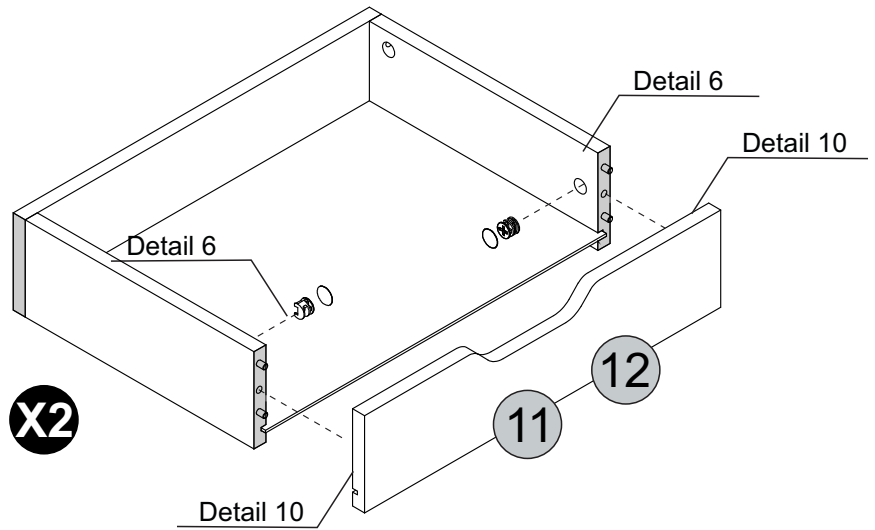


Detail 6

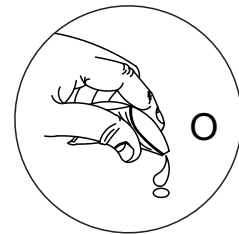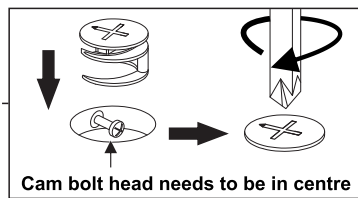

Detail 10

STEP 22

PARTS REQUIRED




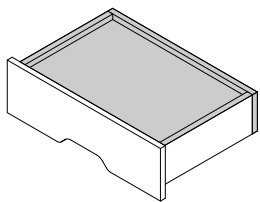


HARDWARE REQUIRED

G  08

K  04

TOOLS REQUIRED

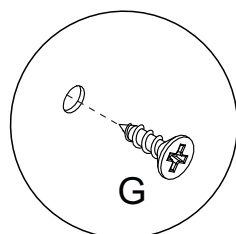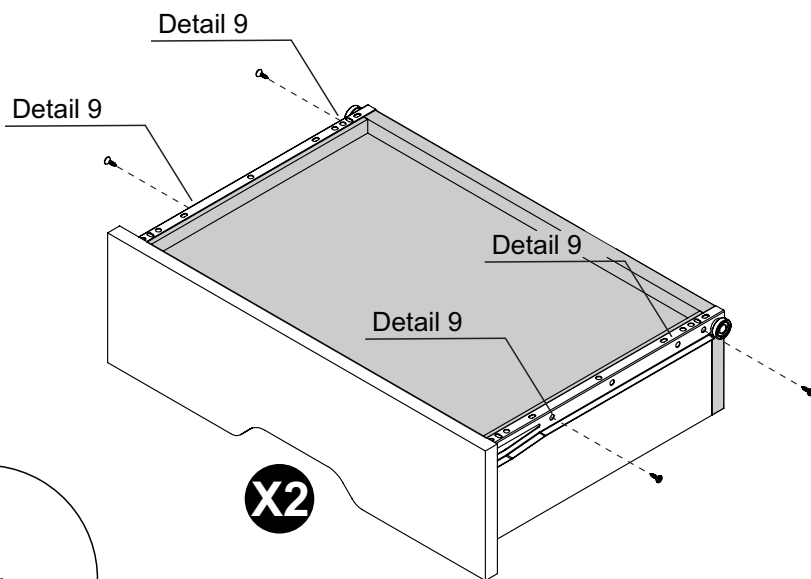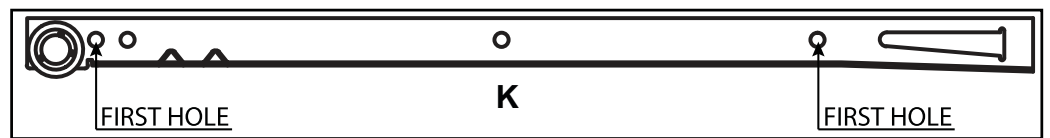



Detail 9

STEP 21



SEC/SH/06/22/AY1

PARTS REQUIRED

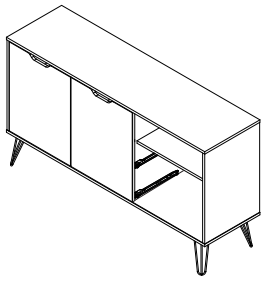

HARDWARE REQUIRED

TOOLS REQUIRED

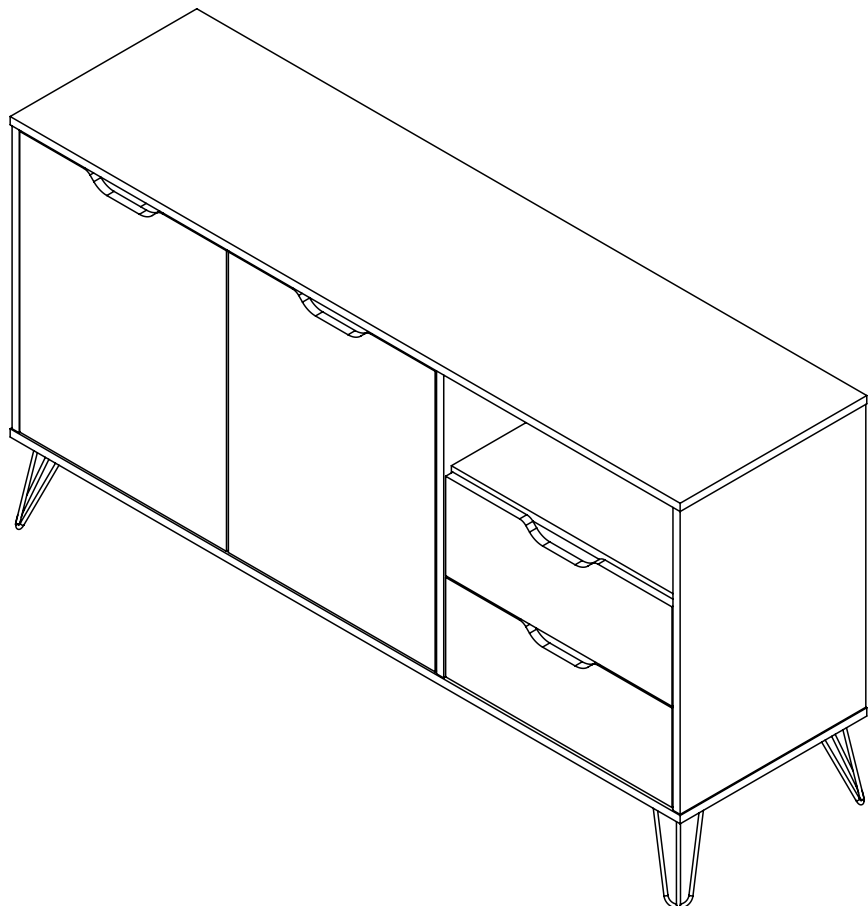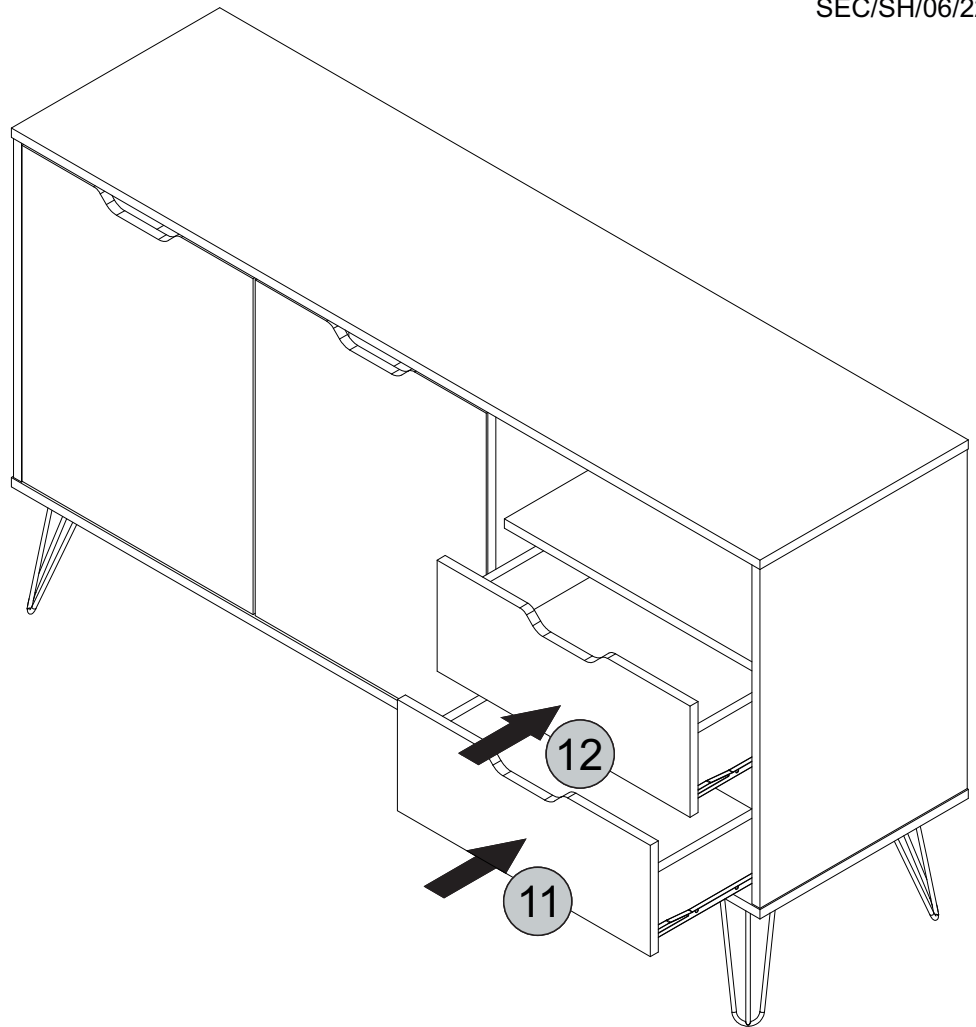





WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

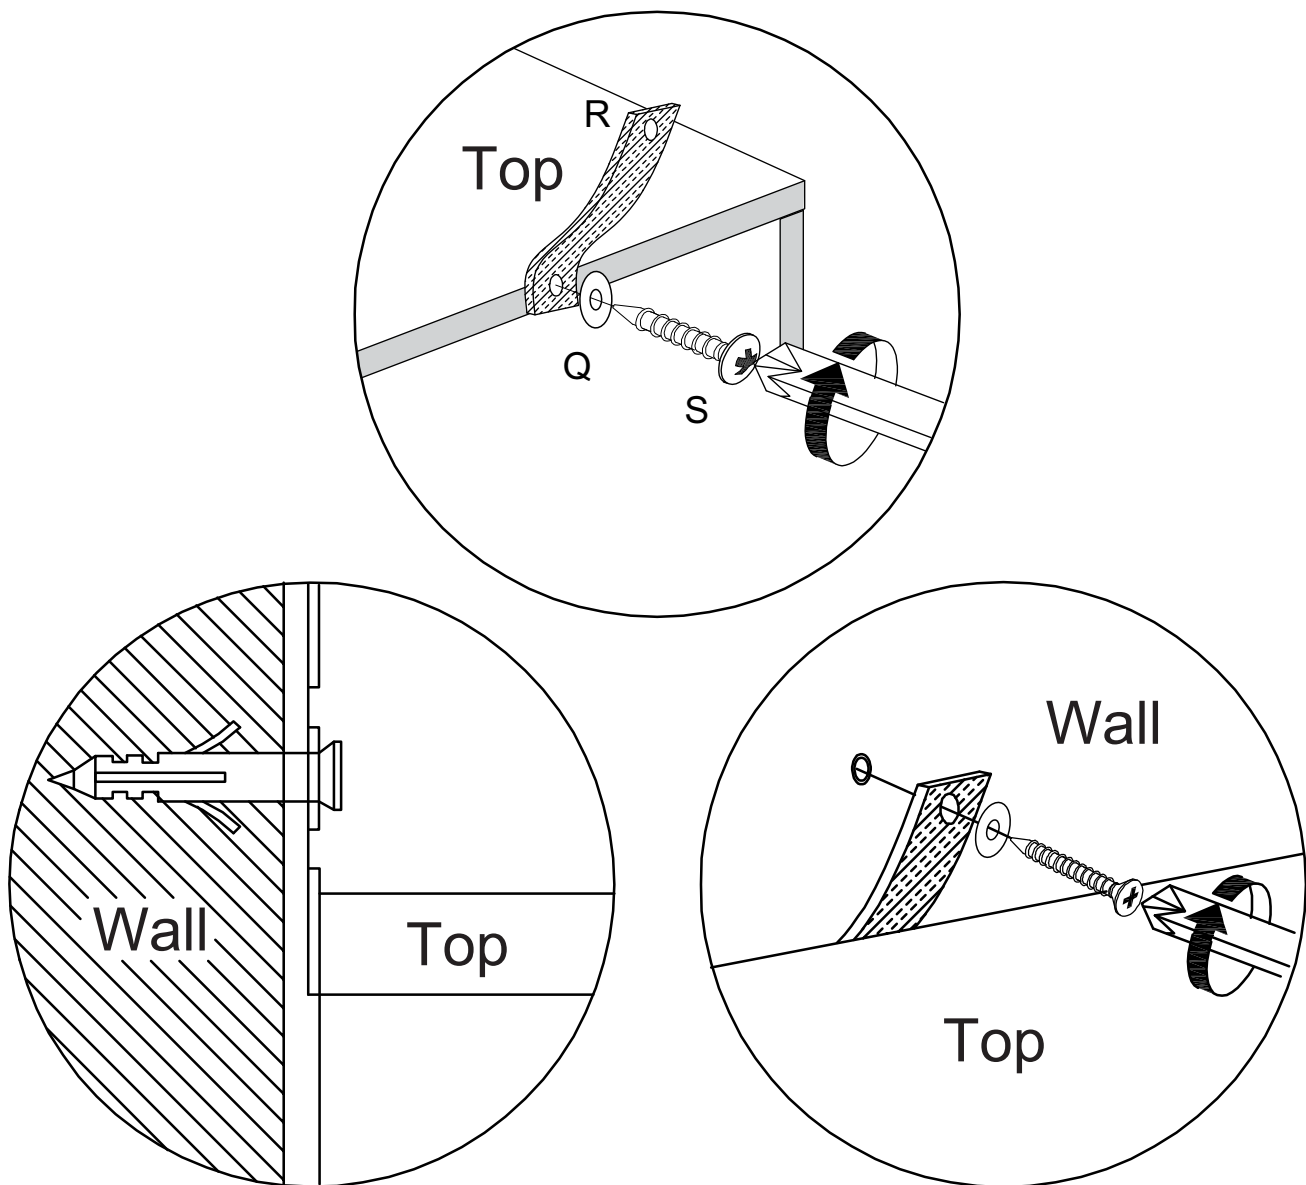

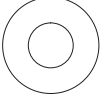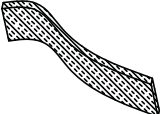Q  Washer (4x)	R  Strap (2x)	S  Pan Head Screw Ø4 x 14mm (2x)
--	---	---