
CLEVELAND 3 DRAWER CHEST ASSEMBLY INSTRUCTIONS WHITE/GREY METAL EFFECT

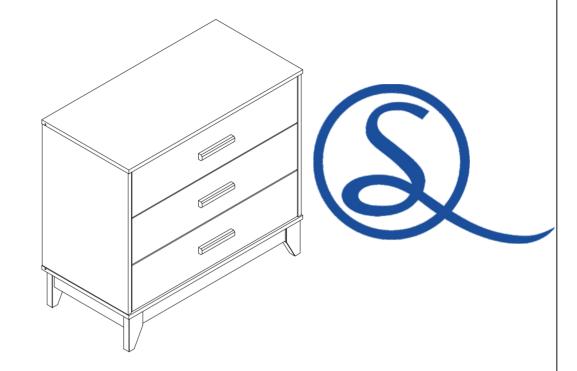




IMPORTANT FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

CARE AND MAINTENANCE

After unpacking this product please keep the original packaging in case it needs to be returned for any reason.

- Please ensure all fittings and parts are present before commencing with assembly.
- Never drag or push products as this could cause damage to the joints making it inferior.
- We strongly recommend that you keep children away from your work area.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- Assemble this product as close to its final position as possible.
- Do not place this product next to a radiator or in direct sunlight.
- Do not drag or push items across your high gloss furniture as this may cause the surface to scratch
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use a soft cotton or micro fibre cloth, and do not use detergents of any kind.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.
- Do not place on a wet or damp floor as staining may occur to your floor.

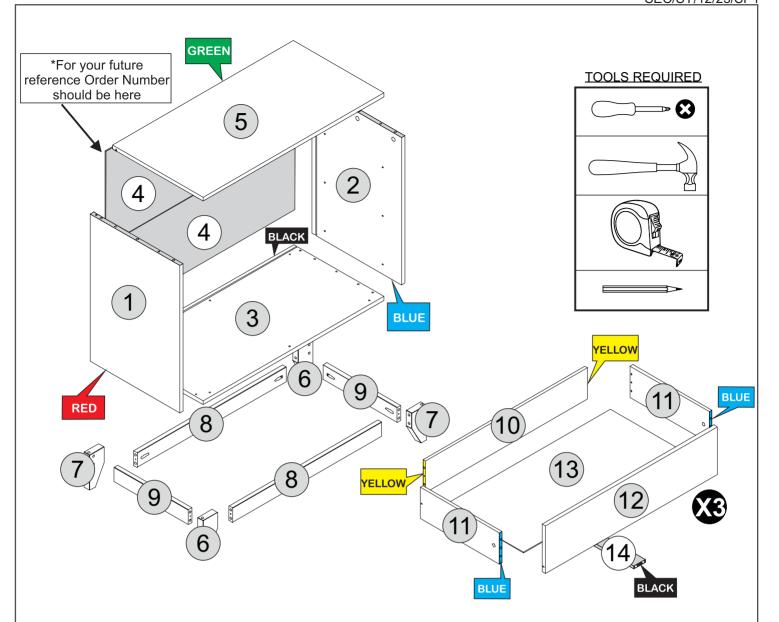


PARTS LIST

Please Note:


The below parts have all been stamped with the part number/color to help identify them during assembly.

| Part Number | Part Code | Part Description | Quantity | Carton |
|-------------|---------------------|-----------------------------|----------|--------|
| 1 | S100-102-191-SP1-01 | Left Side Panel - RED | 1 | 1/1 |
| 2 | S100-102-191-SP1-02 | Right Side Panel - BLUE | 1 | 1/1 |
| 3 | S100-102-191-SP1-03 | Base Panel - BLACK | 1 | 1/1 |
| 4 | S100-102-191-SP1-04 | Back Panel | 2 | 1/1 |
| 5 | S100-102-191-SP1-05 | Top Panel - GREEN | 1 | 1/1 |
| 6 | S100-102-191-SP1-06 | Left Leg | 2 | 1/1 |
| 7 | S100-102-191-SP1-07 | Right Leg | 2 | 1/1 |
| 8 | S100-102-191-SP1-08 | Leg Support Front & Back | 2 | 1/1 |
| 9 | S100-102-191-SP1-09 | Leg Support Left & Right | 2 | 1/1 |
| 10 | S100-102-191-SP1-10 | Drawer Back - YELLOW | 3 | 1/1 |
| 11 | S100-102-191-SP1-11 | Drawer Sides - BLUE | 6 | 1/1 |
| 12 | S100-102-191-SP1-12 | Drawer Front | 3 | 1/1 |
| 13 | S100-102-191-SP1-13 | Drawer Base | 3 | 1/1 |
| 14 | S100-102-191-SP1-14 | Drawer Base Support - BLACK | 3 | 1/1 |


FITTINGS LIST

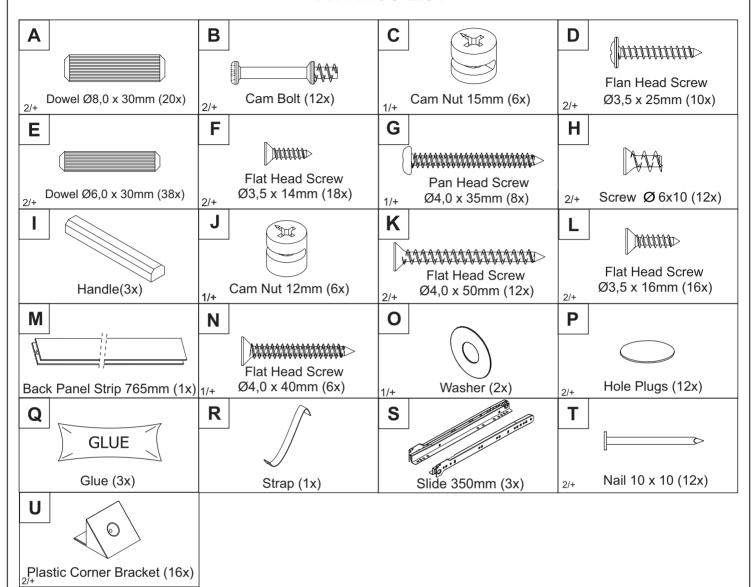


TIPS FOR FITTINGS CAM-LOCKS

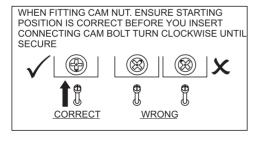

Shoulder

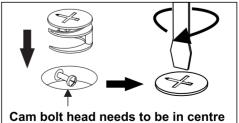


CAMBOLT Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example beside)






1 - LEFT SIDE PANEL (RED) x

HARDWARE REQUIRED



TOOLS REQUIRED



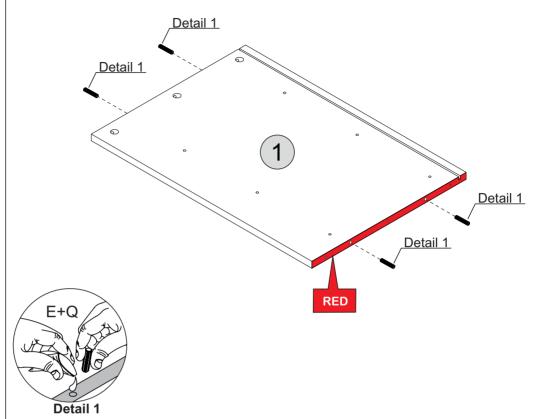


STEP 2


PARTS REQUIRED

1- LEFT SIDE PANEL (RED) x1

HARDWARE REQUIRED





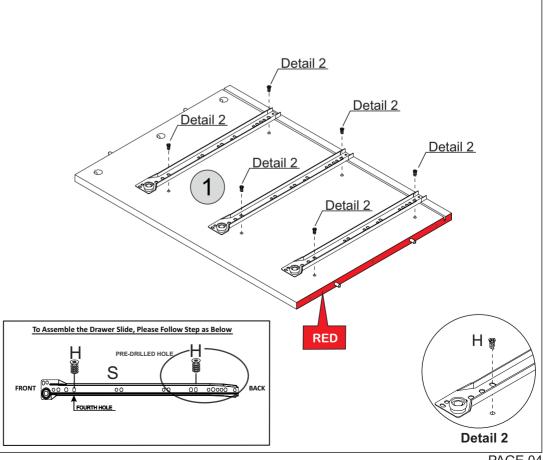




2 - RIGHT SIDE PANEL (BLUE) x1

HARDWARE REQUIRED



TOOLS REQUIRED



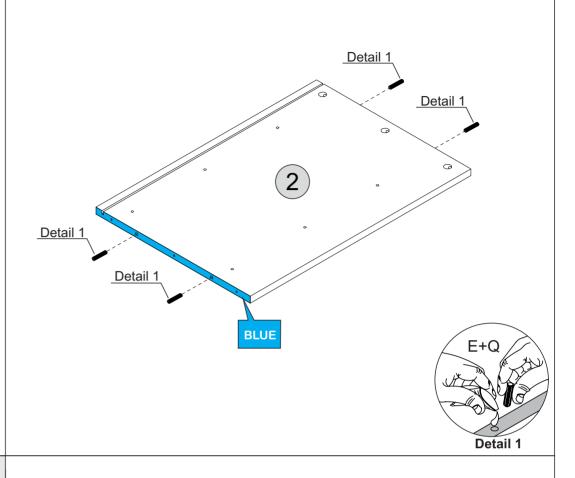



STEP 4


PARTS REQUIRED

2 - RIGHT SIDE PANEL (BLUE) x1

HARDWARE REQUIRED






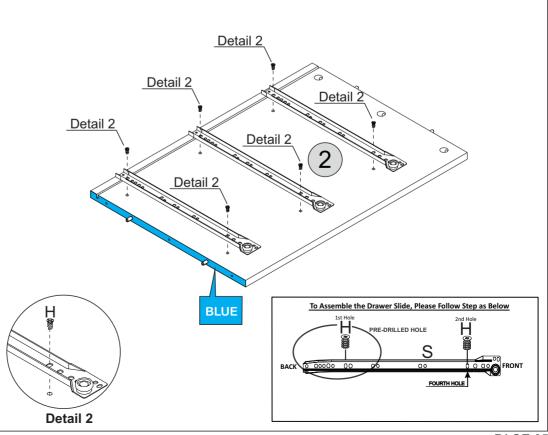




5 - TOP PANEL (GREEN) x1

HARDWARE REQUIRED



TOOLS REQUIRED



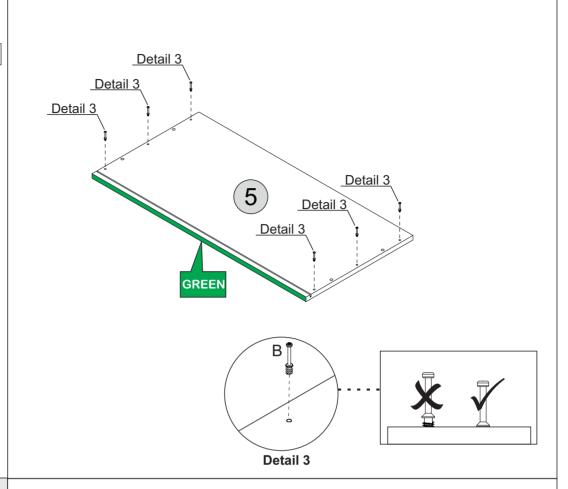


STEP 6


PARTS REQUIRED




HARDWARE REQUIRED






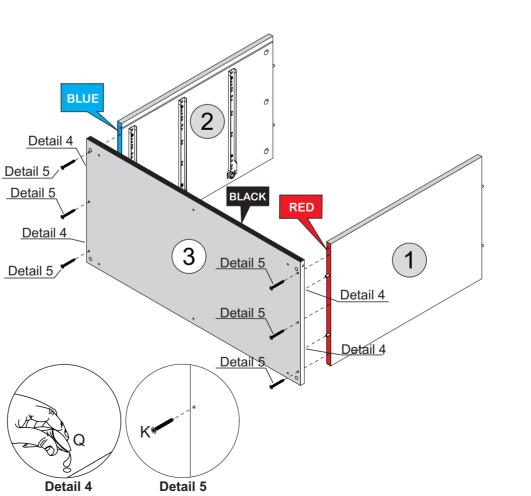


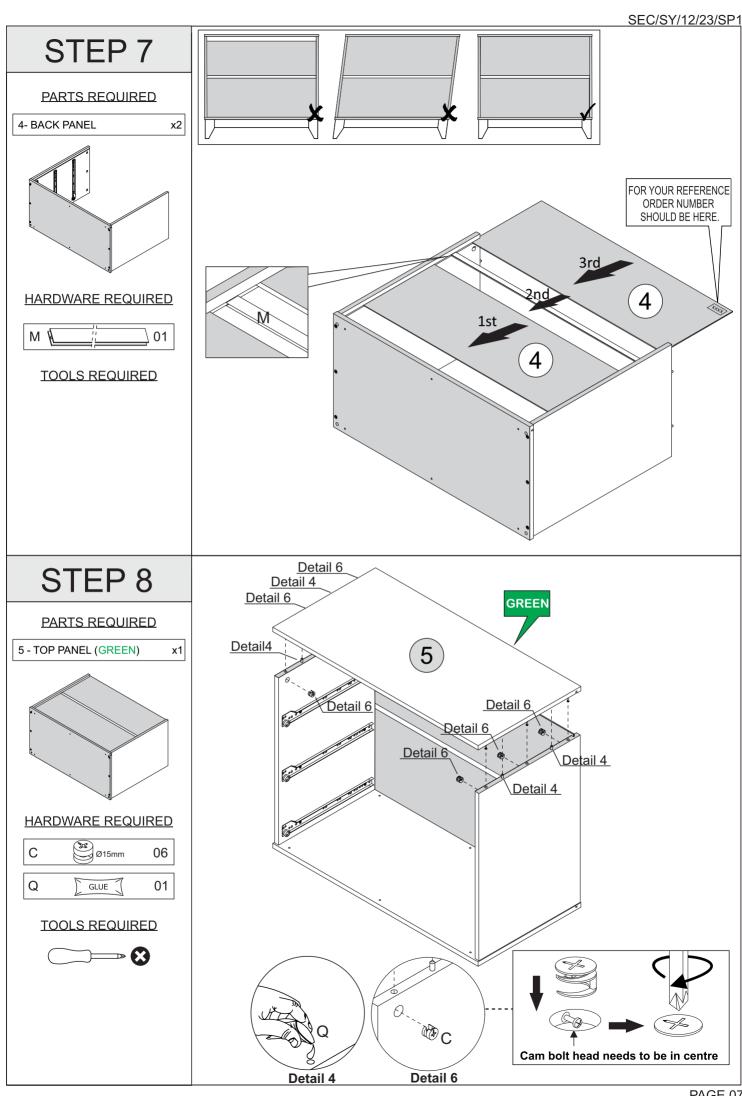


PARTS REQUIRED






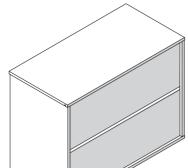






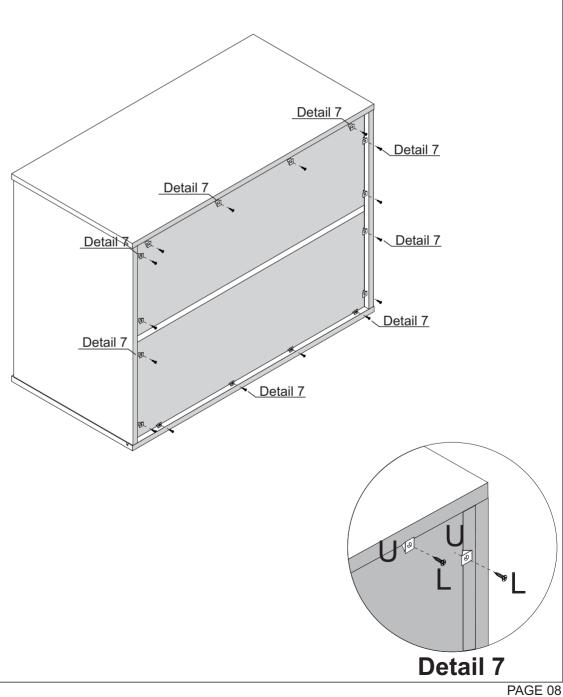




6 - LEFT LEG x2
7 - RIGHT LEG x2

HARDWARE REQUIRED



TOOLS REQUIRED



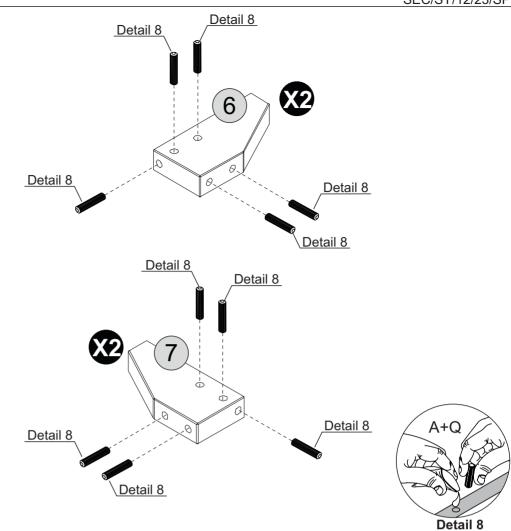

STEP 11

PARTS REQUIRED

6 - LEFT LEG x2


7 - RIGHT LEG x2

8- LEG SUPPORT FRONT&BACK x2

HARDWARE REQUIRED






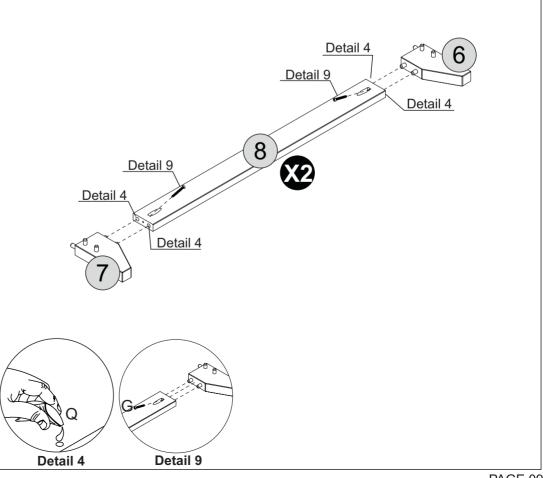



9 - LEG SUPPORT LEFT & RIGHT x2




HARDWARE REQUIRED



TOOLS REQUIRED



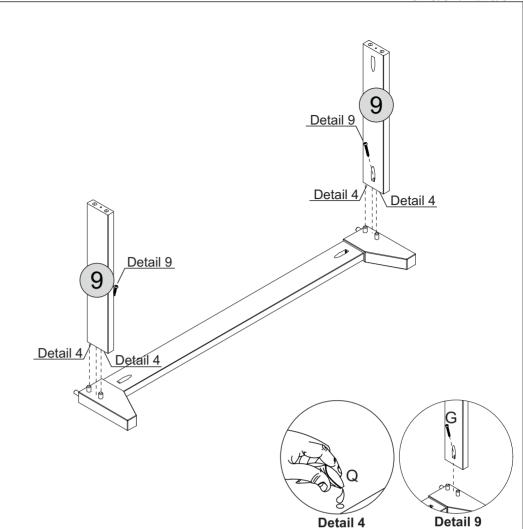


STEP 13


PARTS REQUIRED




HARDWARE REQUIRED






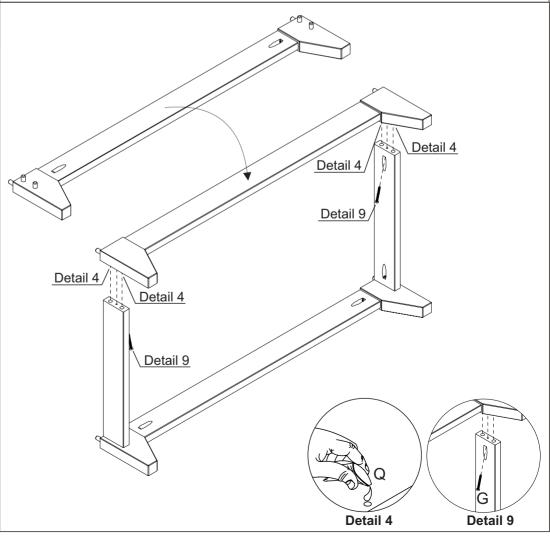




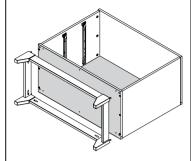


HARDWARE REQUIRED



TOOLS REQUIRED



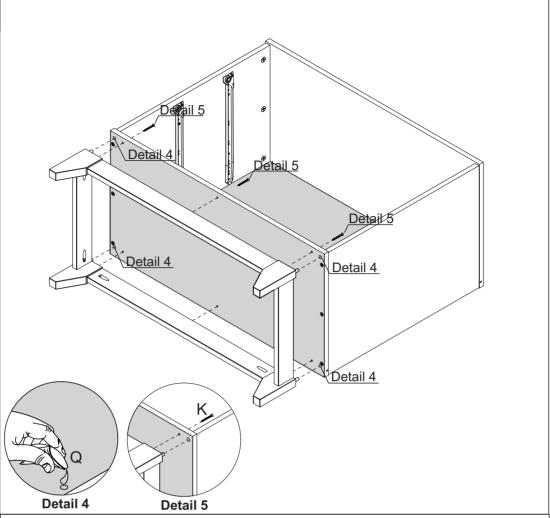

STEP 15


PARTS REQUIRED

10 - DRAWER BACK (YELLOW) x3


11 - DRAWER SIDES (BLUE) x6


14 - DRAWER BASE SUPPORT (BLACK) x3


HARDWARE REQUIRED






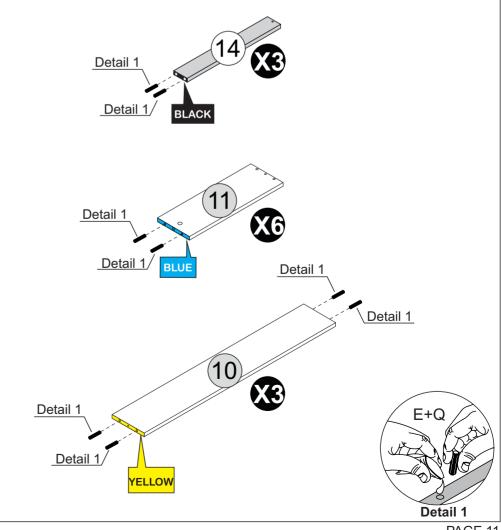


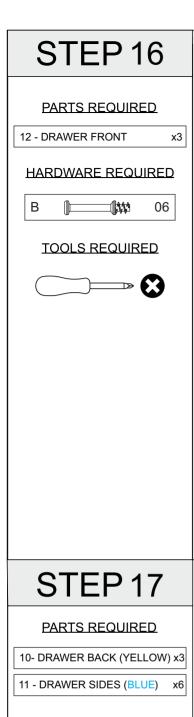


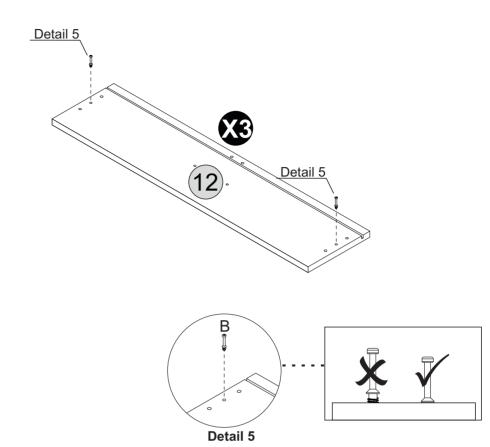


HARDWARE REQUIRED






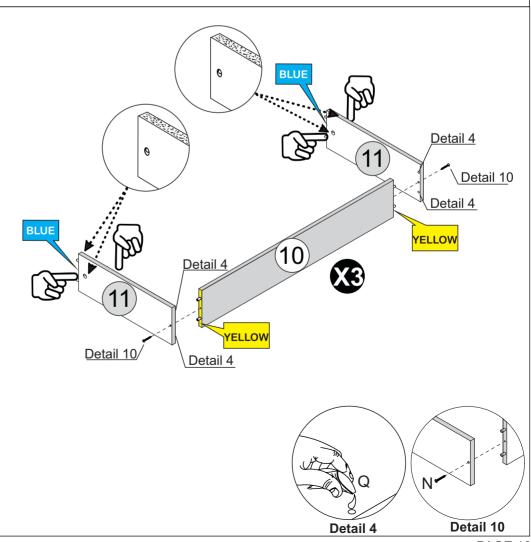



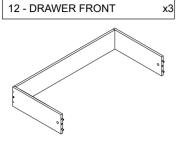


HARDWARE REQUIRED




TOOLS REQUIRED



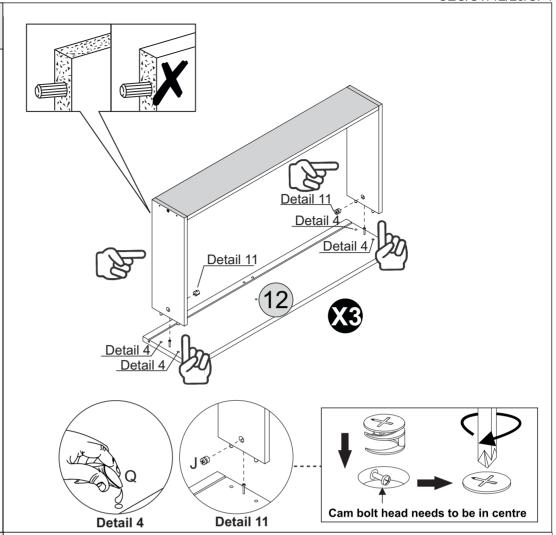


STEP 19


PARTS REQUIRED

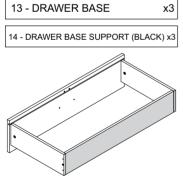


HARDWARE REQUIRED





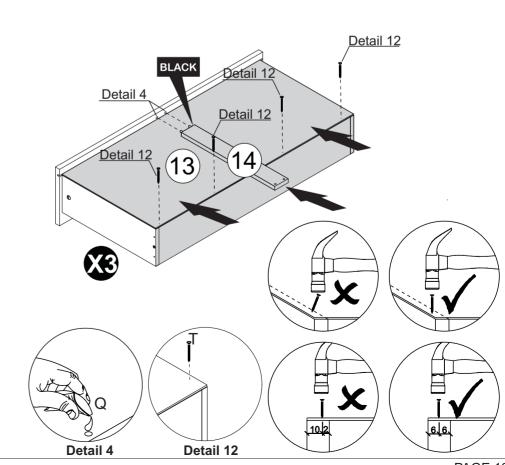

PARTS REQUIRED

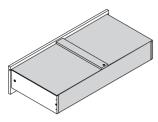


HARDWARE REQUIRED

| D | ∮11111111111> Ø3,5 x 25mm | 03 |
|-----|--|----------------|
| F | ∭∭ Ø3,5x14mm | 12 |
| S = | LEFT | 03 |
| S = | RIGHT | 03 |

TOOLS REQUIRED



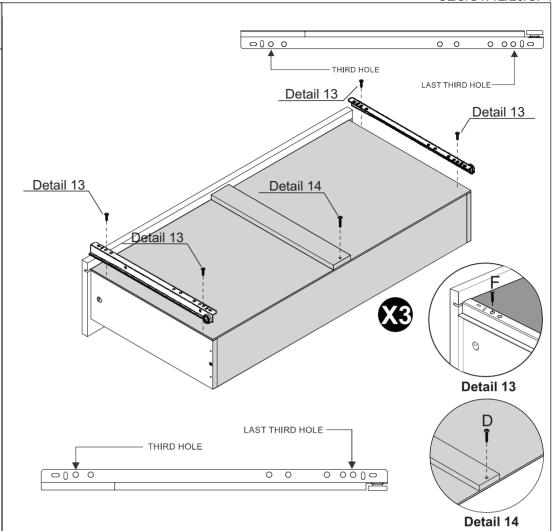

STEP 21


PARTS REQUIRED




HARDWARE REQUIRED

| D | ∮11111111111 ⊳ Ø3,5 x 25mm | 06 |
|---|--------------------------------------|----|
| I | | 03 |
| Р | | 12 |



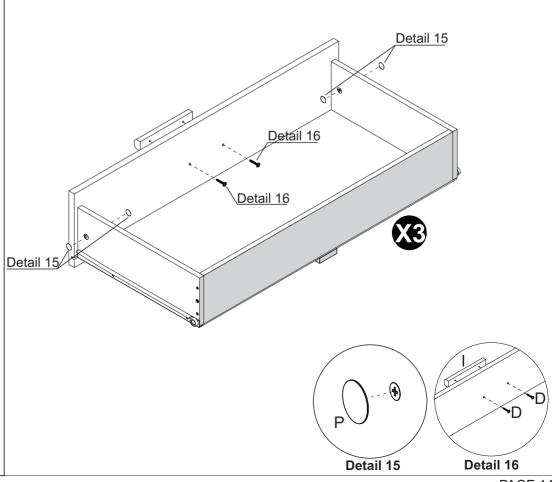


PARTS REQUIRED

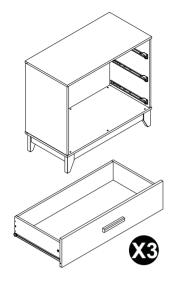

HARDWARE REQUIRED

TOOLS REQUIRED

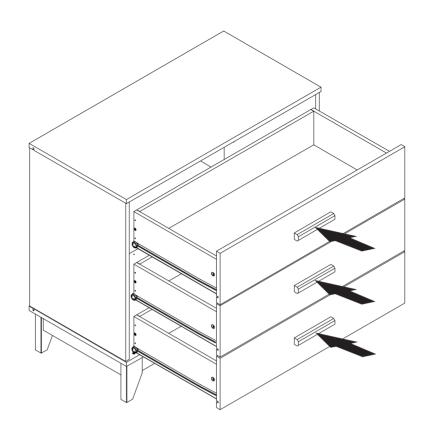

STEP 23

PARTS REQUIRED





HARDWARE REQUIRED

F Ø3,5 x 14mm 06

TOOLS REQUIRED



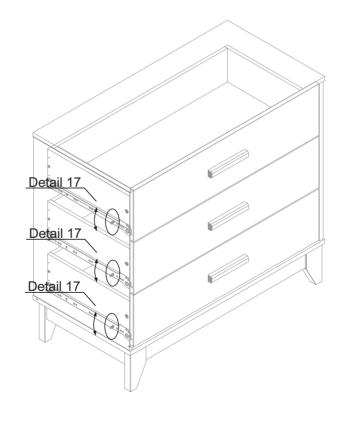

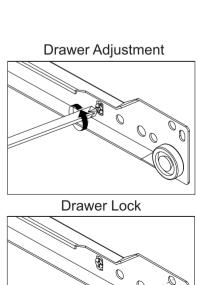

Detail 17


PARTS REQUIRED





HARDWARE REQUIRED

| D | ∮ուսւսսս ⊳ Ø3,5 x 25mm | 01 |
|---|----------------------------------|----|
| 0 | 0 | 02 |
| R | | 01 |

TOOLS REQUIRED



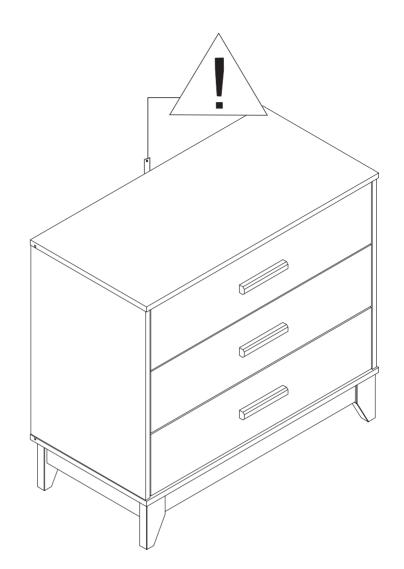

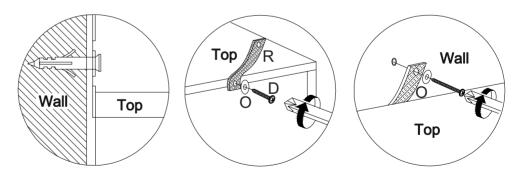

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.