
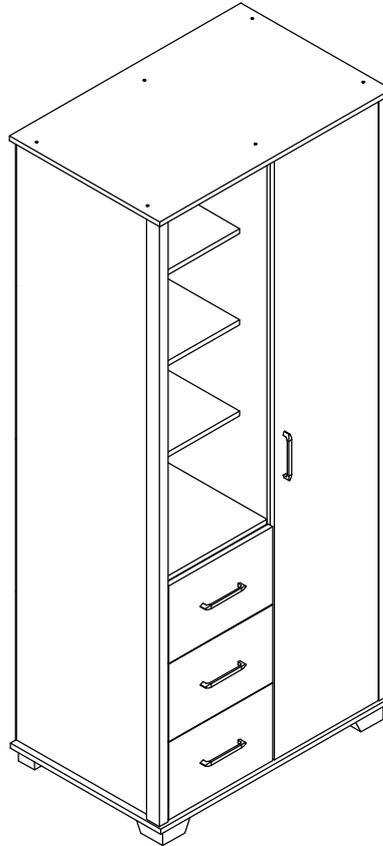


OLIVER 1 DOOR 3 DRAWER OPEN SHELF WARDROBE ASSEMBLY INSTRUCTIONS

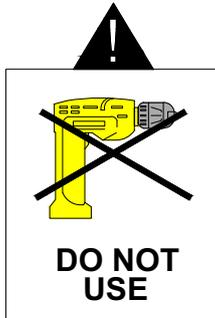

IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.



THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

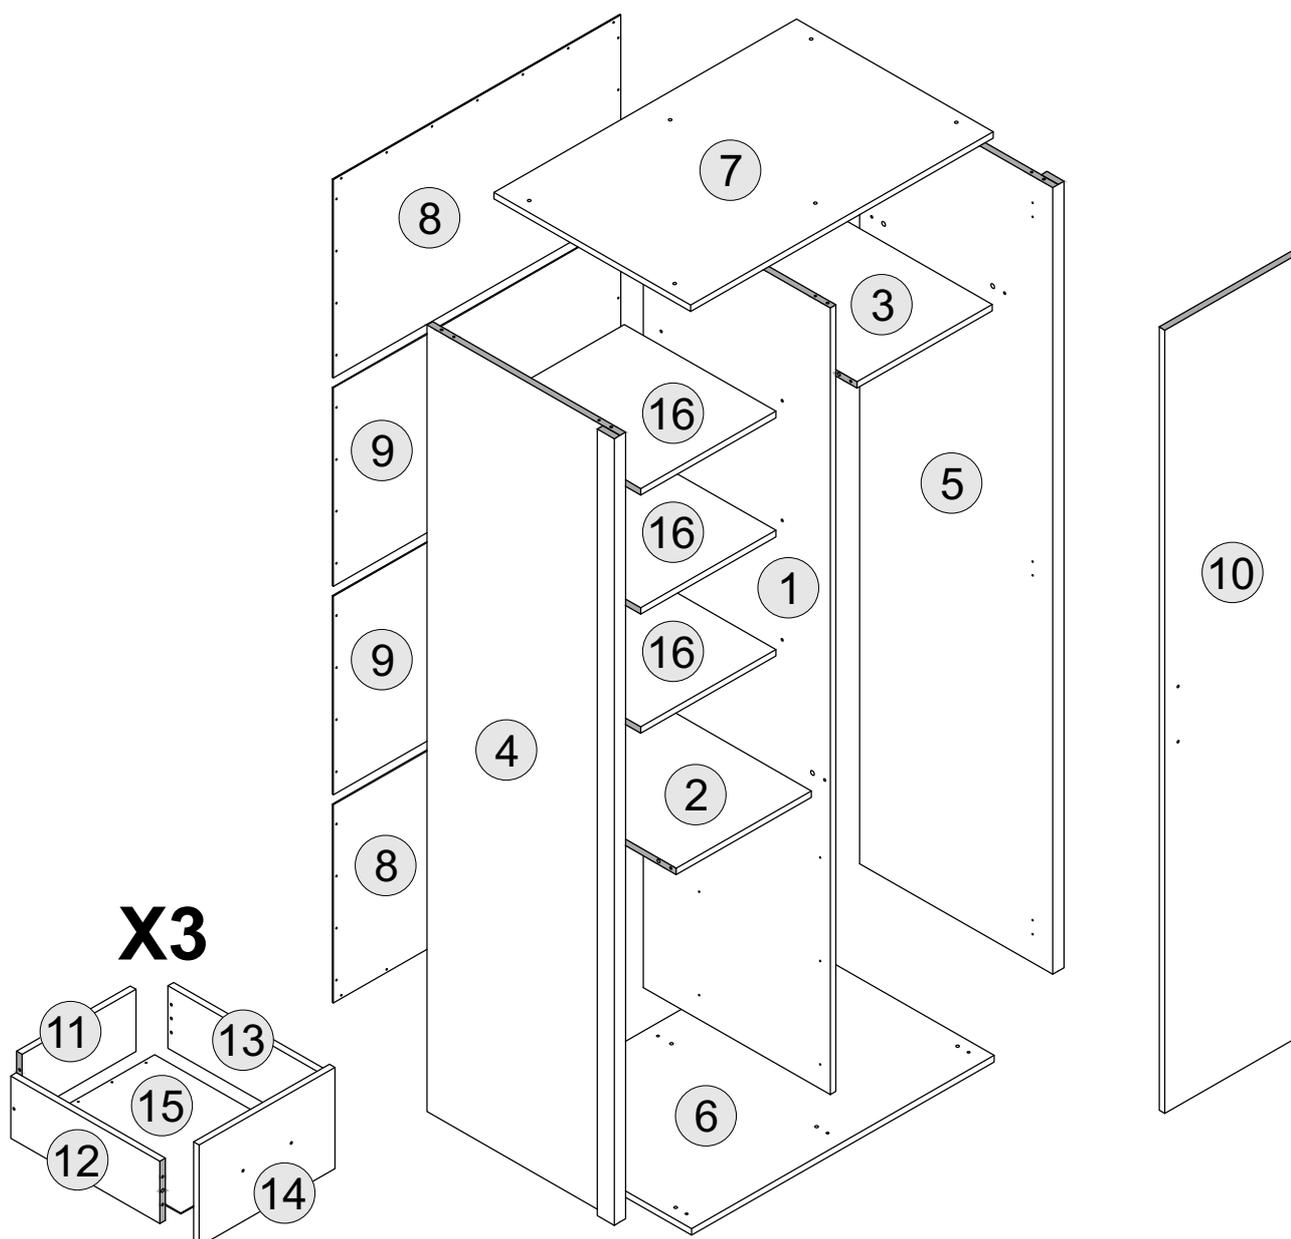


PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-101-208-EU1-01	Centre Panel	1	3/3
2	S100-101-208-EU1-02	Shelf Panel - Left	1	2/3
3	S100-101-208-EU1-03	Shelf Panel - Right	1	3/3
4	S100-101-208-EU1-04	Side Panel - Left	1	1/3
5	S100-101-208-EU1-05	Side Panel - Right	1	1/3
6	S100-101-208-EU1-06	Bottom Panel	1	2/3
7	S100-101-208-EU1-07	Top Panel	1	2/3
8	S100-101-208-EU1-08	Back Panel I	2	2/3
9	S100-101-208-EU1-09	Back Panel II	2	2/3
10	S100-101-208-EU1-10	Door	1	3/3
11	S100-101-208-EU1-11	Drawer Back	3	2/3
12	S100-101-208-EU1-12	Drawer Side - Left	3	2/3
13	S100-101-208-EU1-13	Drawer Side - Right	3	2/3
14	S100-101-208-EU1-14	Drawer Front	3	2/3
15	S100-101-208-EU1-15	Drawer Base	3	2/3
16	S100-101-208-EU1-16	Shelf Panel	3	3/3


HARDWARE LIST

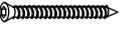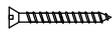A		DOWEL 6 X 30MM	44 PCS	M		SQUARE PVC FOOT	3 PCS
B		CAM BOLT + CAM NUT	14 SETS	N		HINGES 7/8	3 PCS
C		SCREW M6 X 50MM	12 PCS	O		DRAWER RUNNER A - L/R	6 PCS
D		SCREW M3.5 X 16MM	24 PCS	P		DRAWER RUNNER B - L/R	6 PCS
E		TACK	46 PCS	Q		HANGING RAIL	1 PC
F		SCREW M4 X 32MM	12 PCS	R		PLASTIC H STRIP	3 PCS
G		HANDLE	4 PCS	S		HANGING RAIL SUPPORT	2 PCS
H		TAPPING SCREW M8 X 12MM	6 PCS	T		SHELF SUPPORT	12 PCS
I		ALLEN KEY	1 PC	U		SCREW M4 X 38MM	6 PCS
J		HANDLE SCREW 20MM	8 PCS	V		ANTI - TIP STRAP	2 PCS
K		SCREW M3.5 X 12MM	40 PCS	W		SCREW M4 X 16MM	2 PCS
L		L PVC FOOT	2 PCS				

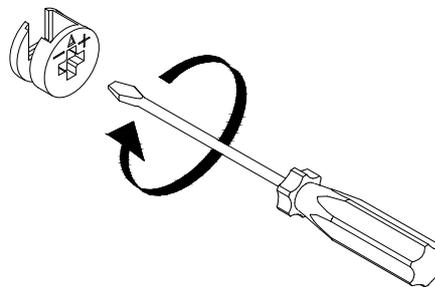

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

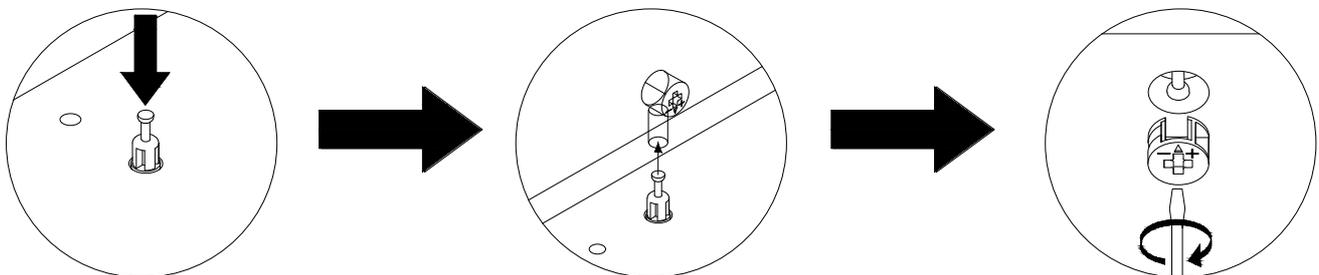

STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. (MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.

STEP 1

PARTS REQUIRED

1 - CENTRE PANEL x1

HARDWARE REQUIRED

A  04




B  02

K  12

O  03

T  06

TOOLS REQUIRED

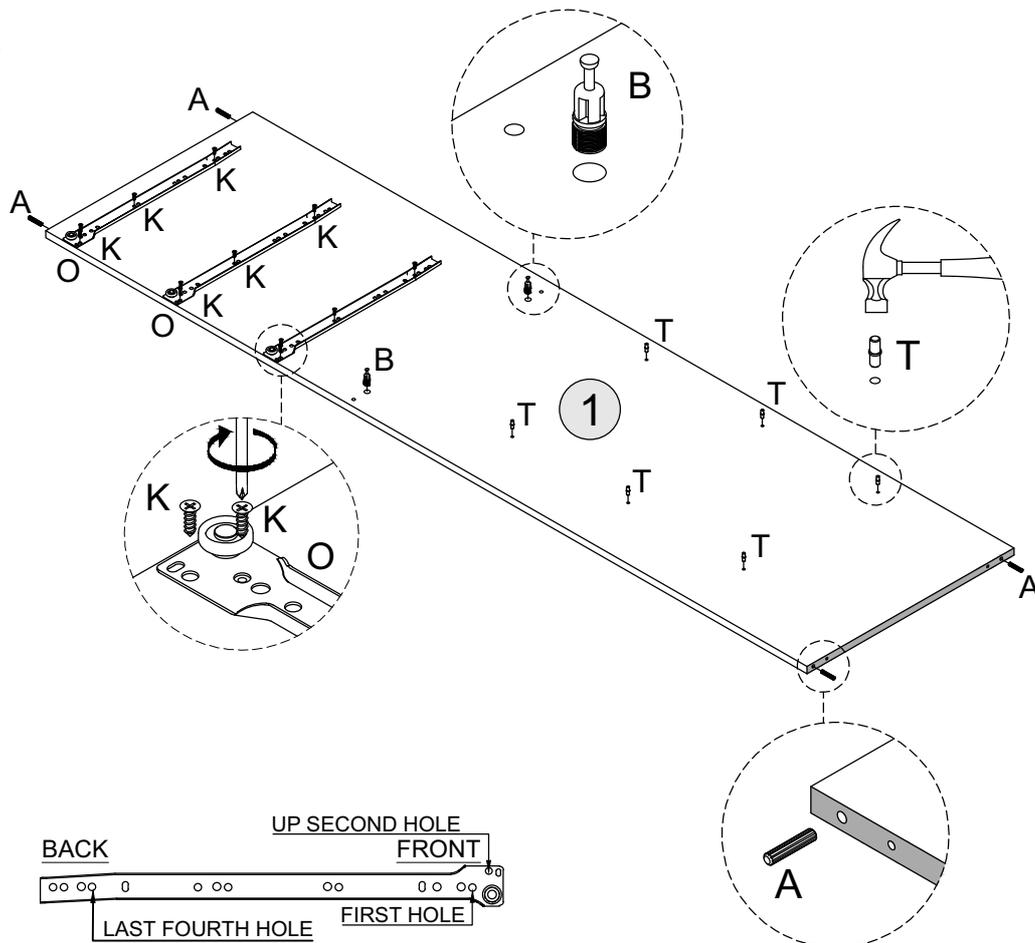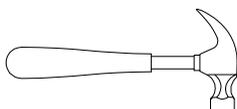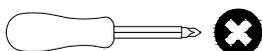

STEP 2

PARTS REQUIRED

1 - CENTRE PANEL x1



HARDWARE REQUIRED

B  02

K  02

S  01

TOOLS REQUIRED

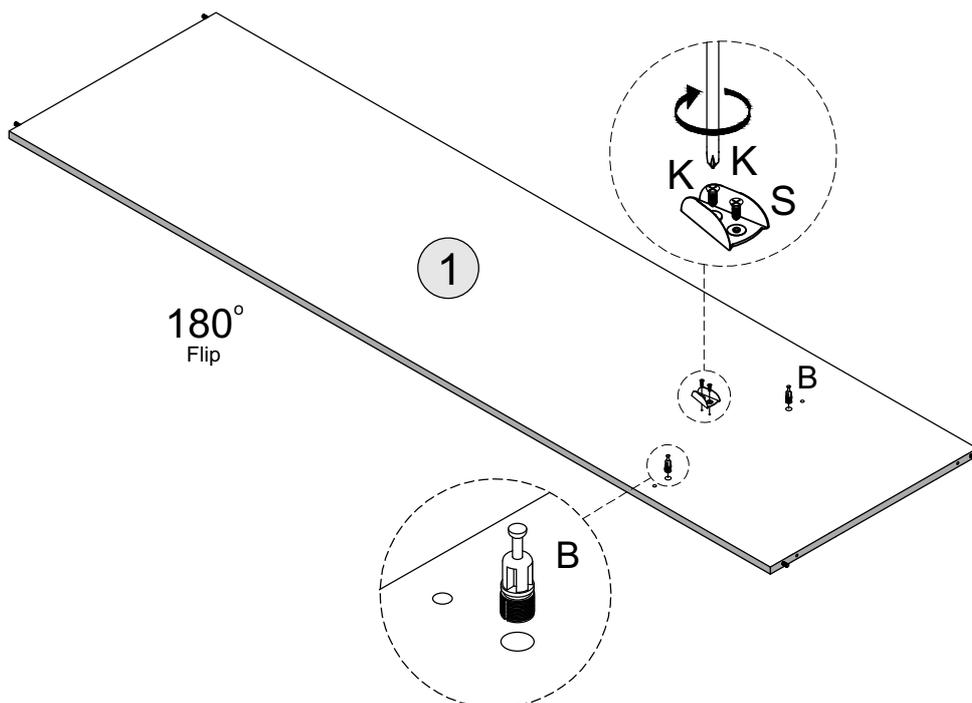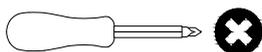

STEP 3



PARTS REQUIRED

4 - SIDE PANEL - LEFT x1

HARDWARE REQUIRED

- A  04
- B  02
- K  12
- O  03
- T  06

TOOLS REQUIRED

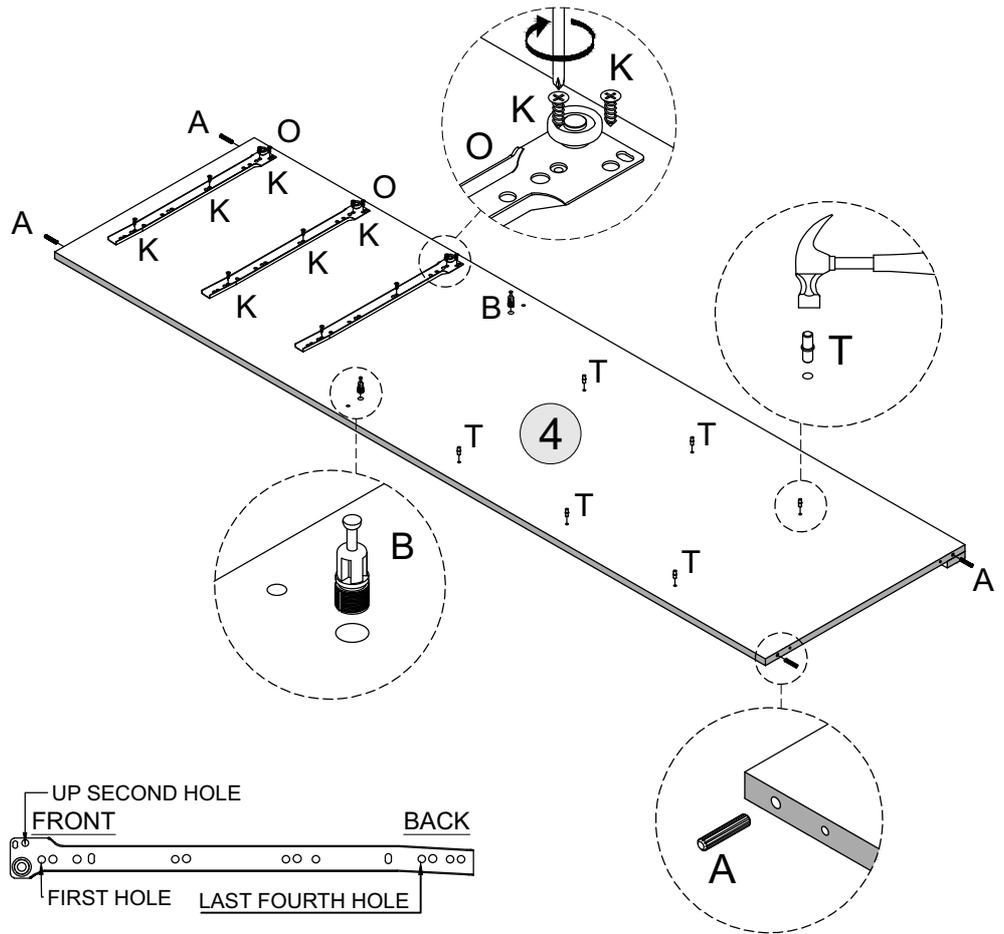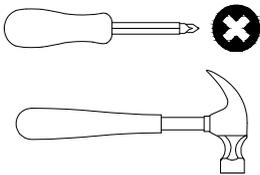

STEP 4

PARTS REQUIRED



2 - SHELF PANEL - LEFT x1

3 - SHELF PANEL - RIGHT x1

HARDWARE REQUIRED

- A  08
- B  08

TOOLS REQUIRED

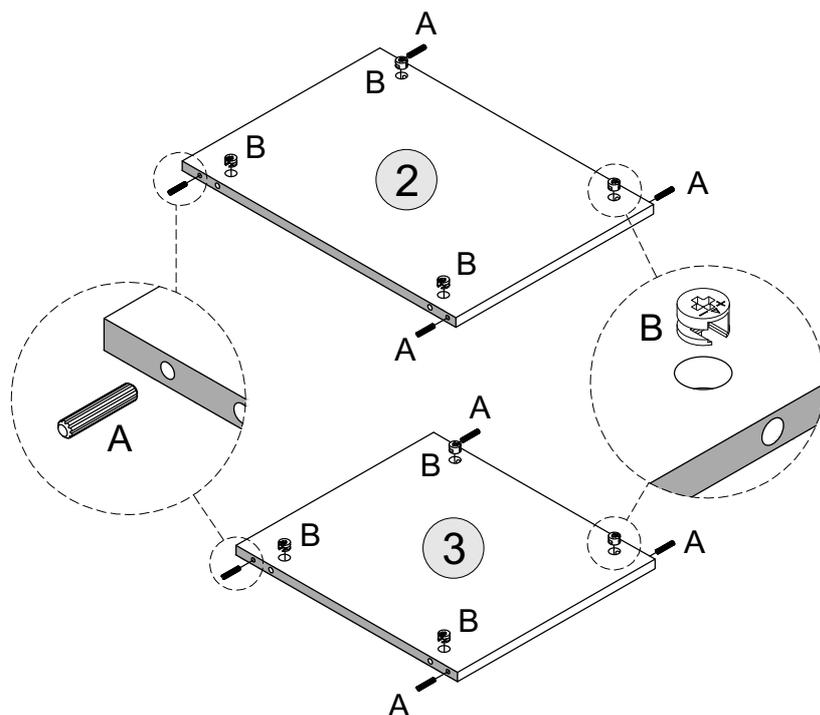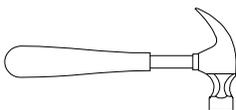

STEP 5



PARTS REQUIRED

5 - SIDE PANEL - RIGHT x1

HARDWARE REQUIRED

A		04
B		02
K		02
S		01

TOOLS REQUIRED

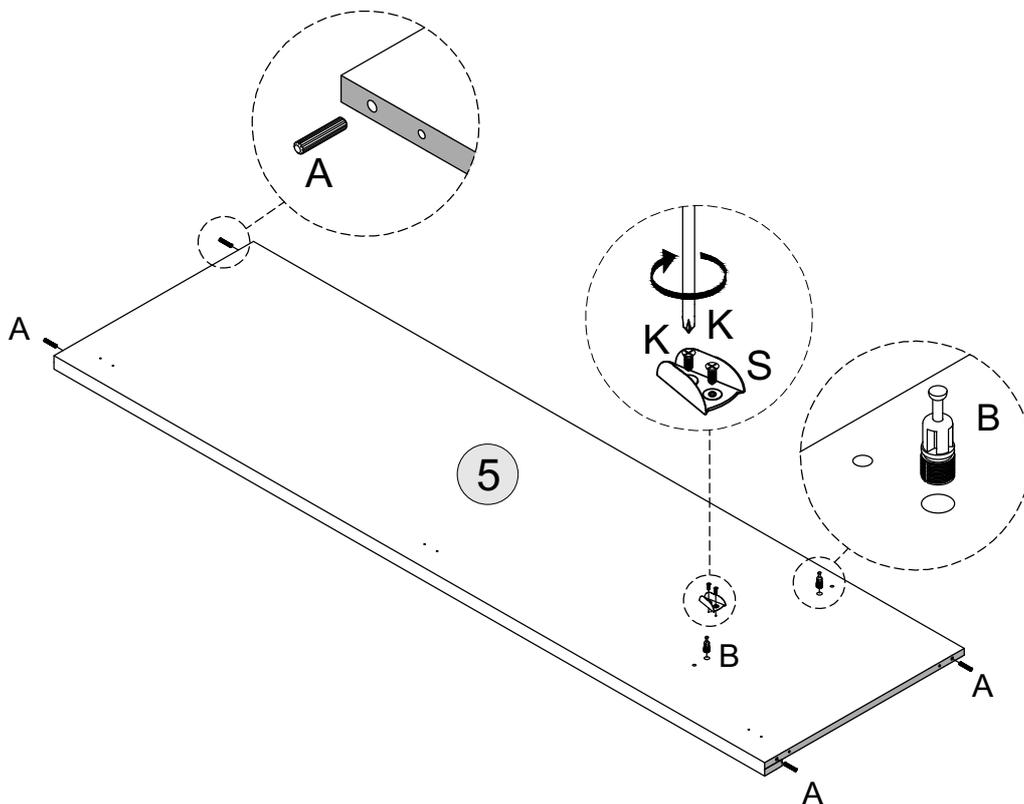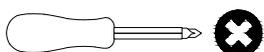


STEP 6

PARTS REQUIRED

1 - CENTRE PANEL	x1
2 - SHELF PANEL - LEFT	x1
3 - SHELF PANEL - RIGHT	x1

HARDWARE REQUIRED

TOOLS REQUIRED

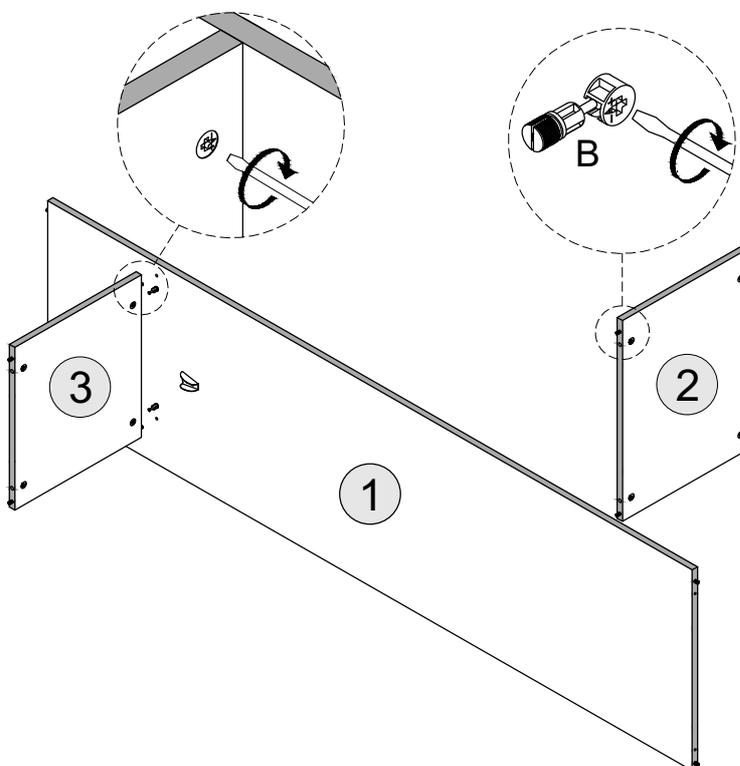


STEP 7

PARTS REQUIRED


4 - SIDE PANEL - LEFT x1

5 - SIDE PANEL - RIGHT x1

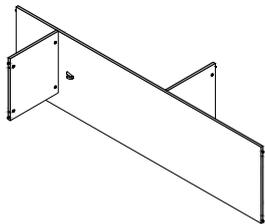

HARDWARE REQUIRED


TOOLS REQUIRED

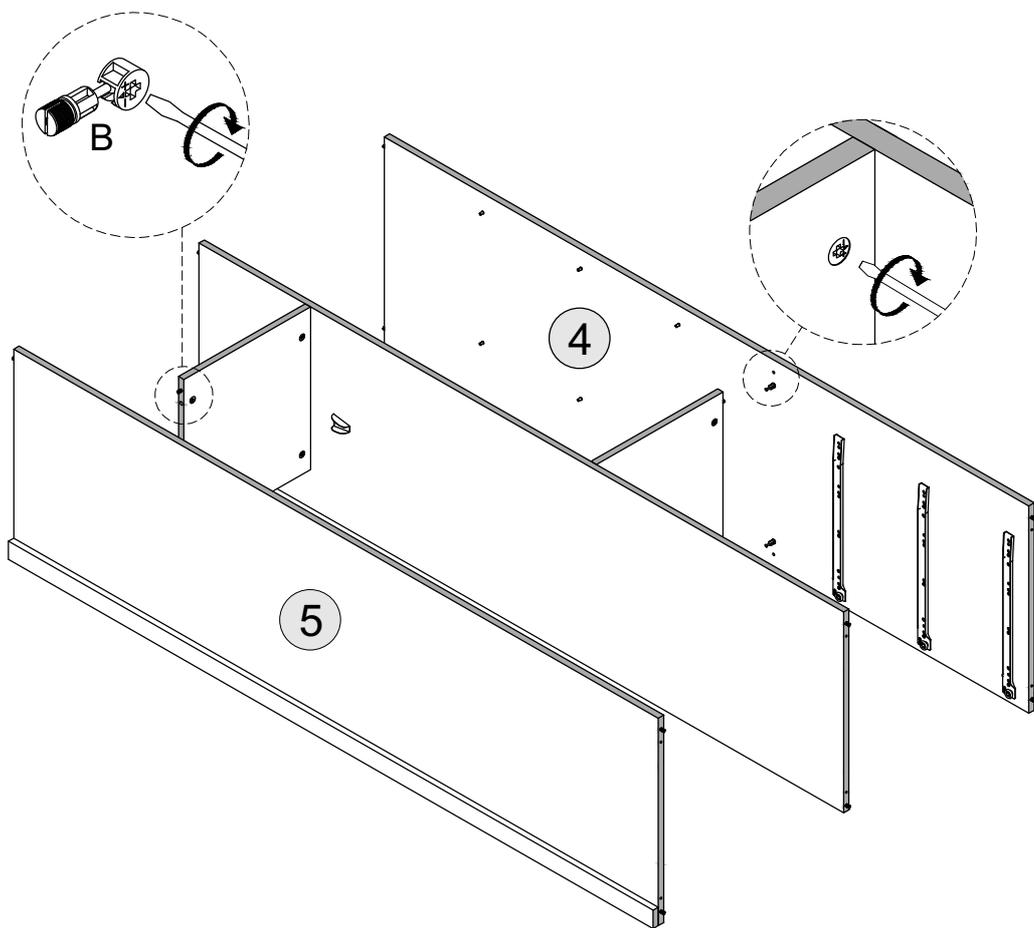


STEP 8

PARTS REQUIRED


6 - BOTTOM PANEL x1

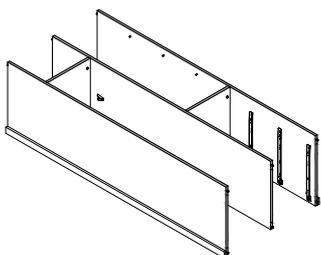

HARDWARE REQUIRED

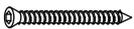C  06


TOOLS REQUIRED

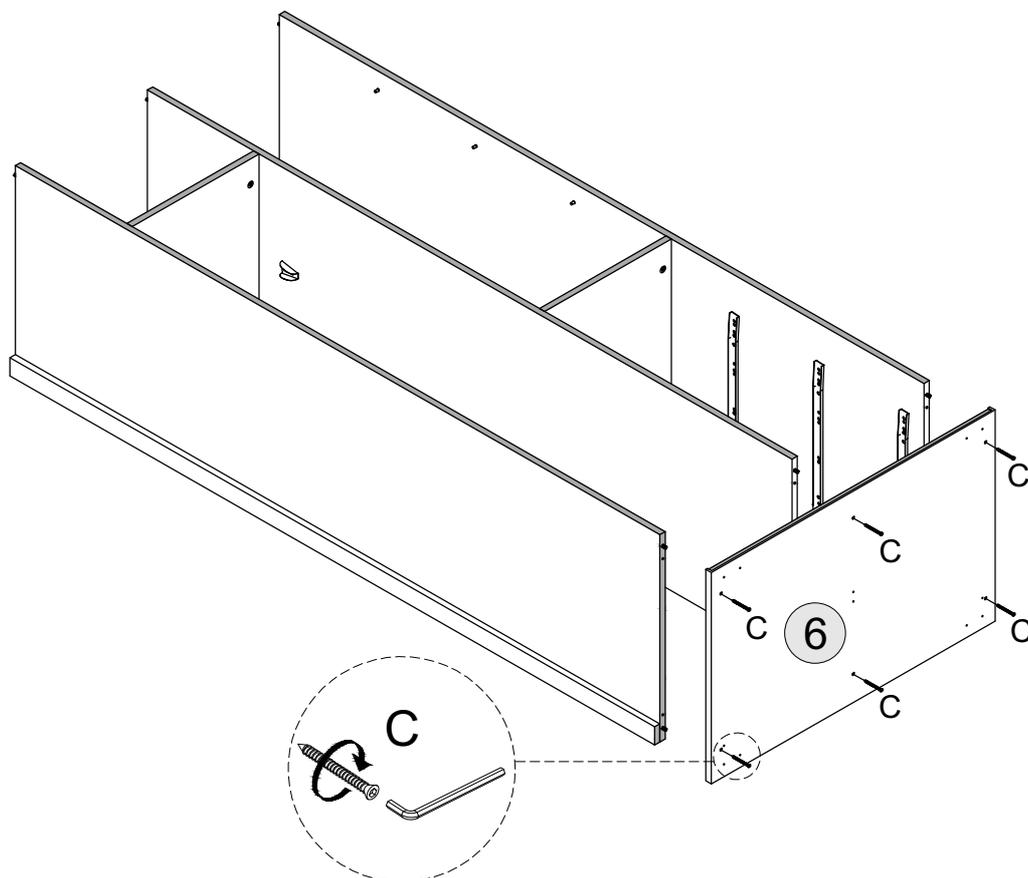

STEP 9

PARTS REQUIRED

7 - TOP PANEL x1

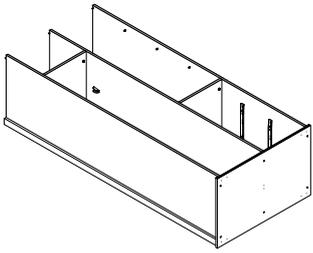

HARDWARE REQUIRED



C  06

F  12

L  02

M  03

TOOLS REQUIRED

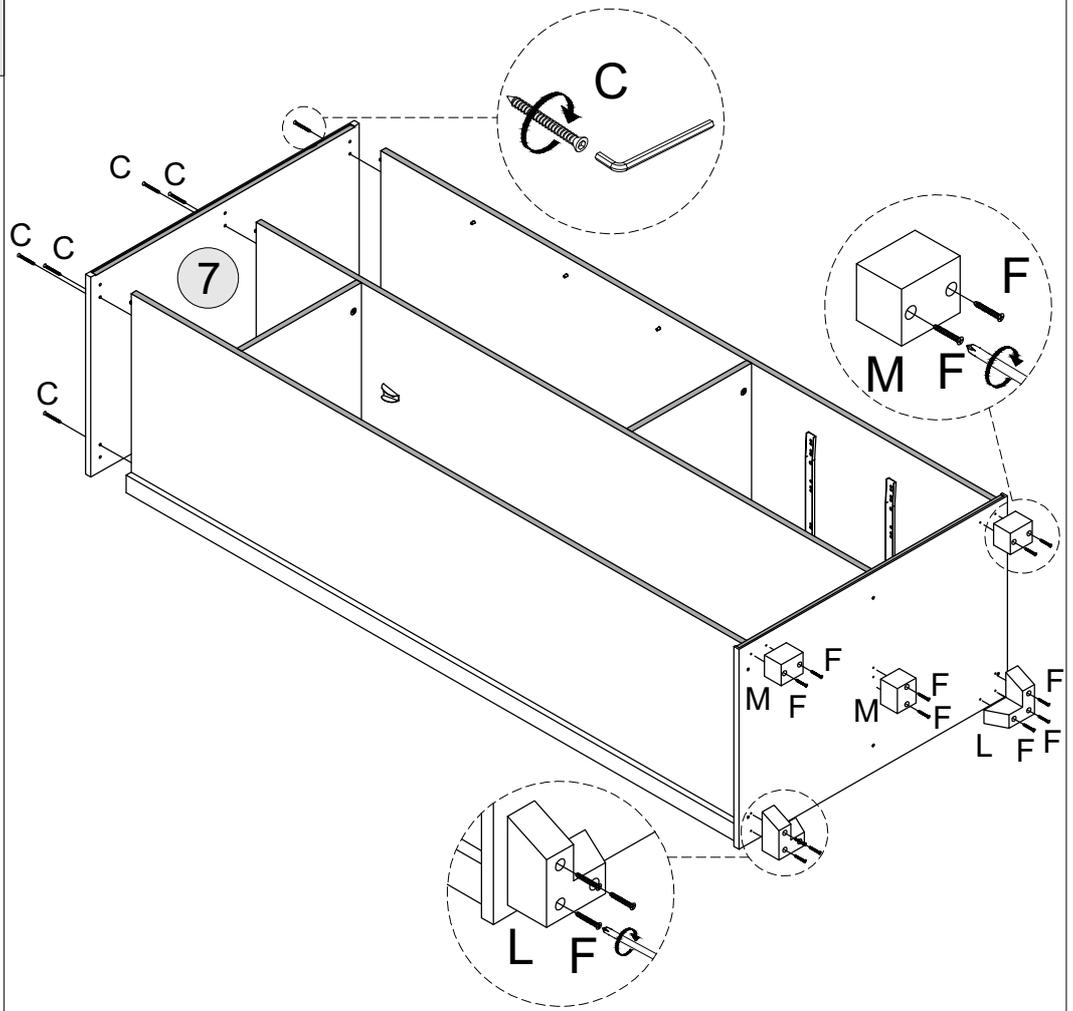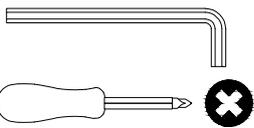


STEP 10

PARTS REQUIRED

8 - BACK PANEL I x2

9 - BACK PANEL II x2


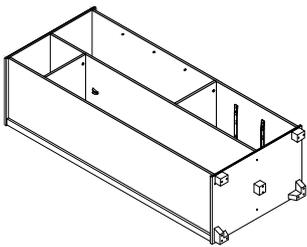


HARDWARE REQUIRED

E  46

R  03

TOOLS REQUIRED

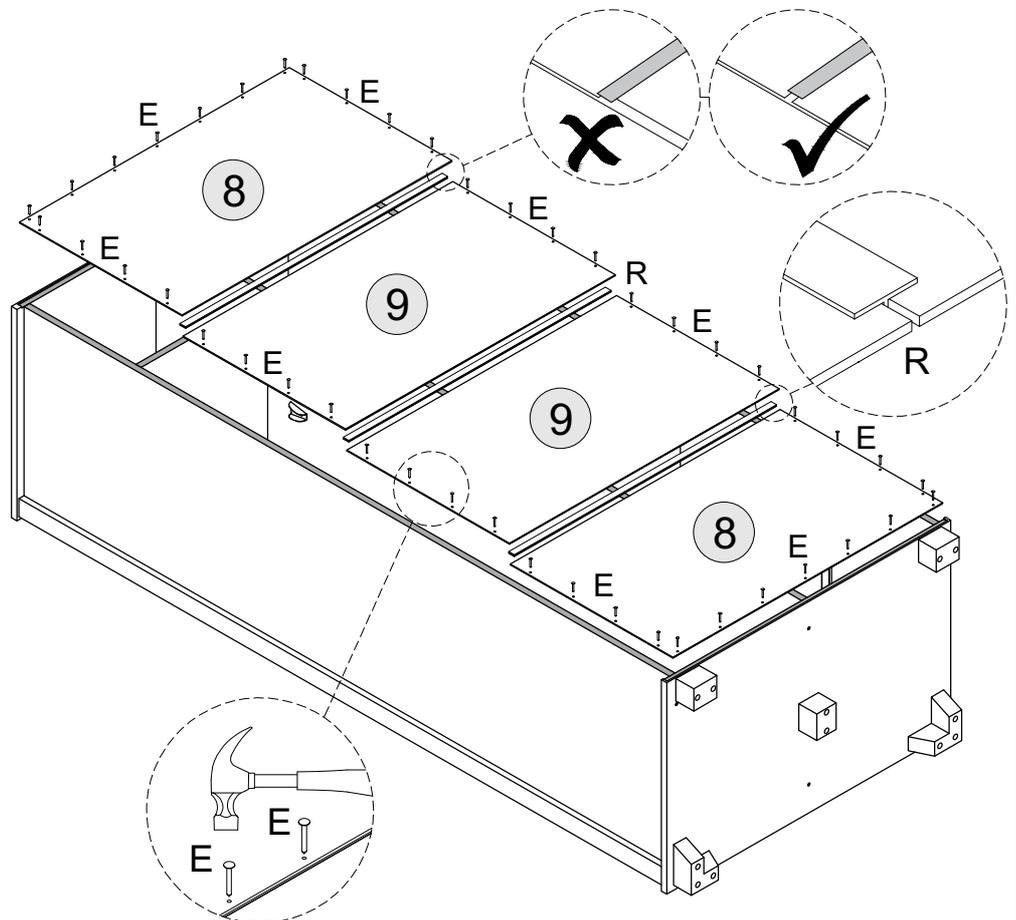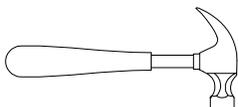

STEP 11



PARTS REQUIRED

10 - DOOR x1

HARDWARE REQUIRED

D		06
N		03

TOOLS REQUIRED

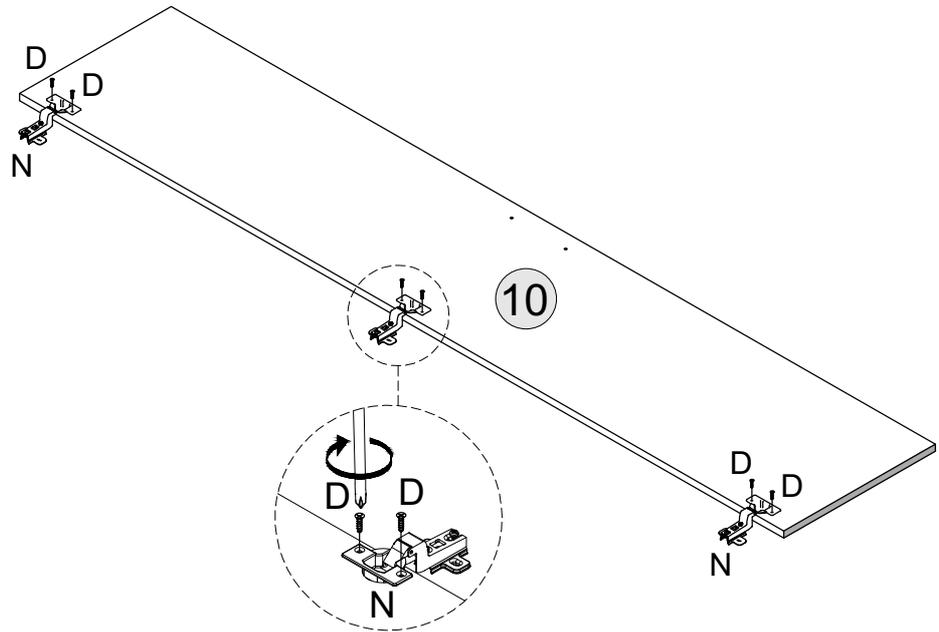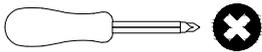


STEP 12

PARTS REQUIRED

10 - DOOR x1



16 - SHELF PANEL x3

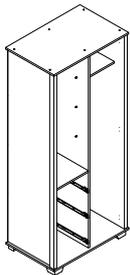

HARDWARE REQUIRED

G		01
H		06
J		02
Q		01

TOOLS REQUIRED

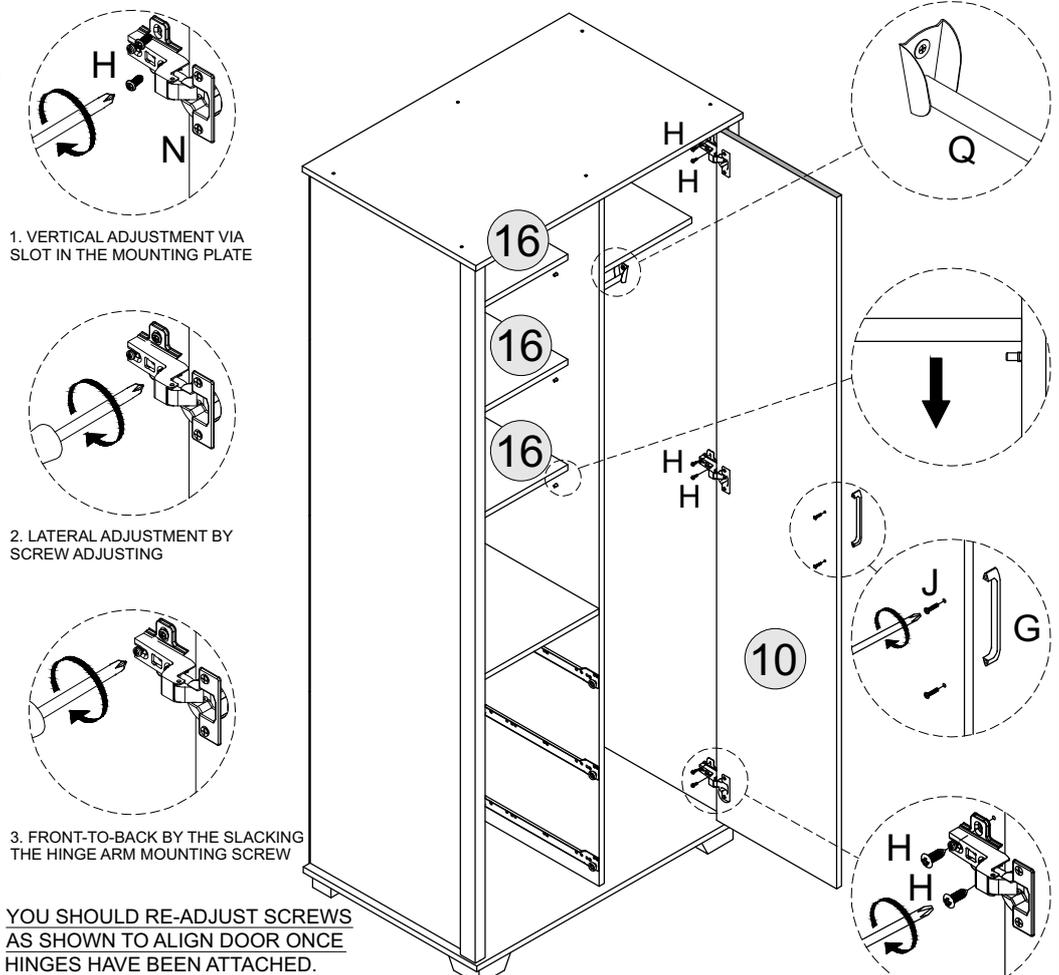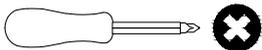


STEP 13



PARTS REQUIRED

11 - DRAWER BACK	x3
12 - DRAWER SIDE-LEFT	x3
13 - DRAWER SIDE-RIGHT	x3
14 - DRAWER FRONT	x3

HARDWARE REQUIRED

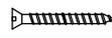A		24
B		06
U		06


TOOLS REQUIRED

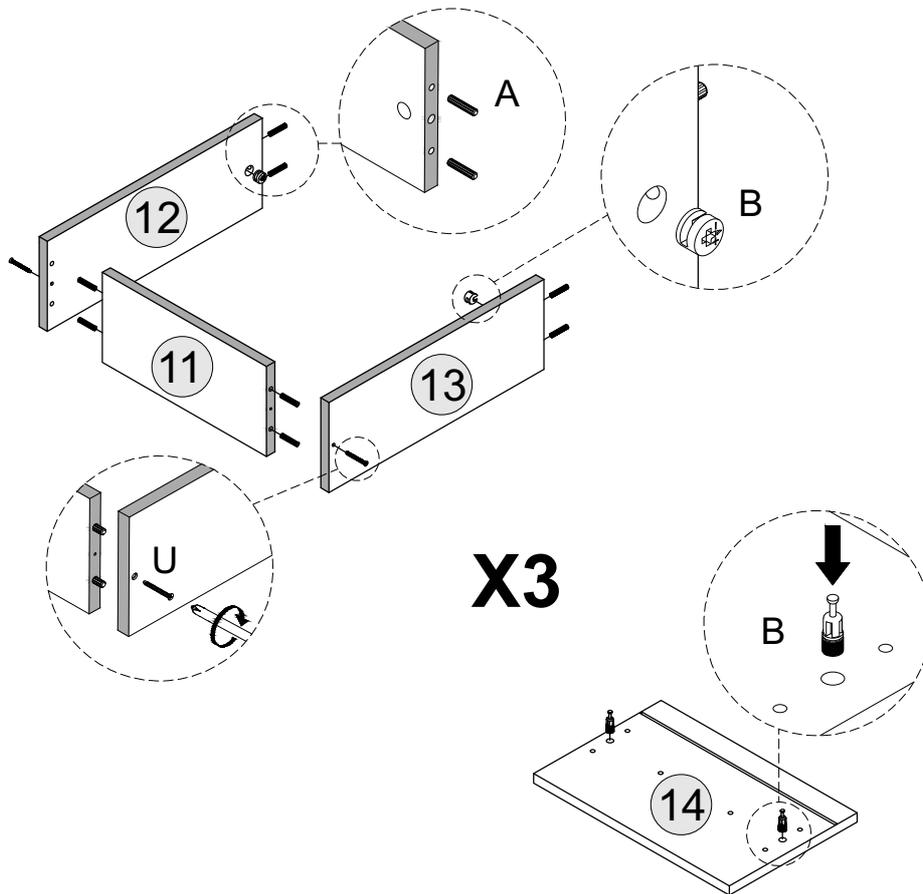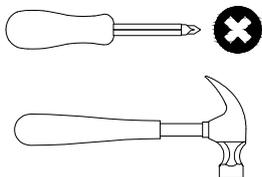

STEP 14

PARTS REQUIRED



15 - DRAWER BASE	x3
------------------	----

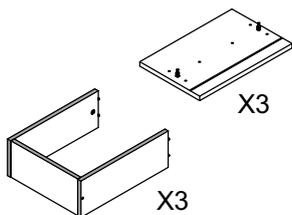

HARDWARE REQUIRED


G		03
J		06
K		12

TOOLS REQUIRED

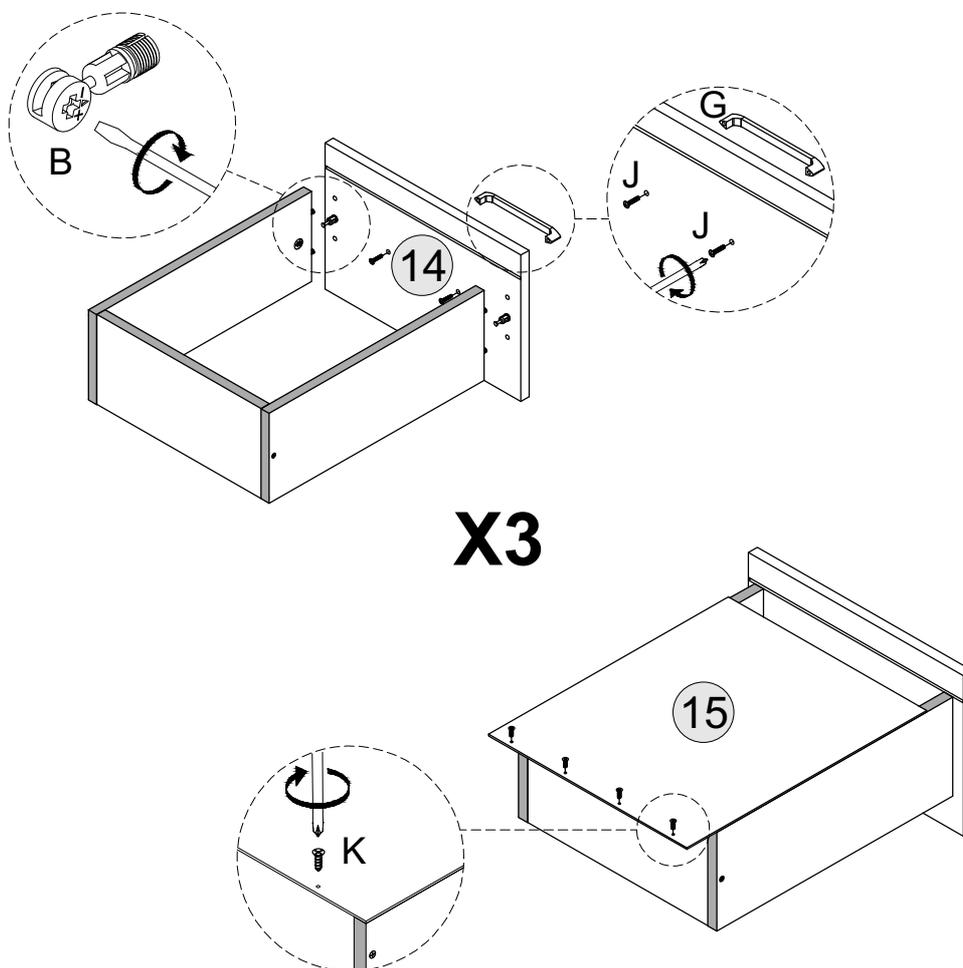
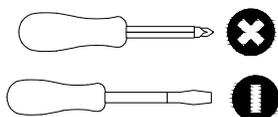


STEP 15



PARTS REQUIRED

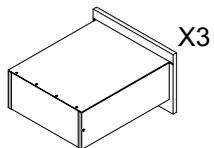

HARDWARE REQUIRED

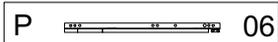
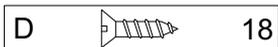


TOOLS REQUIRED

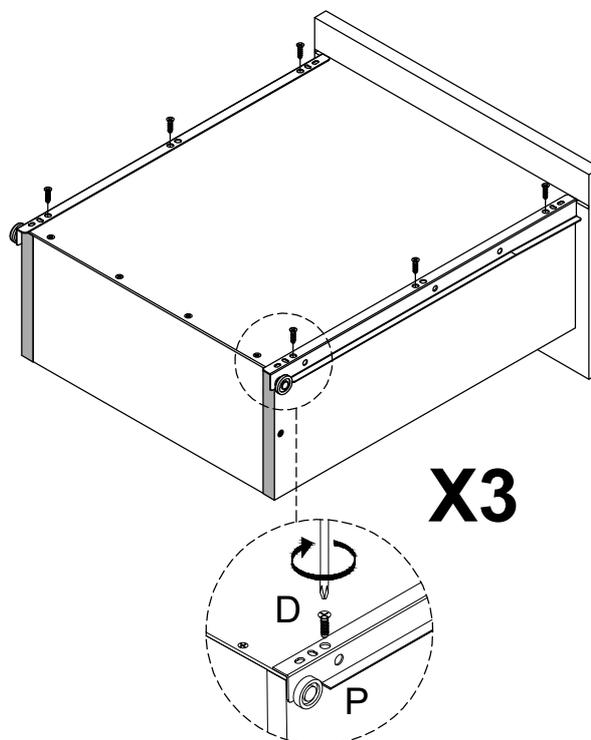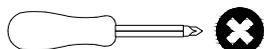


STEP 16



PARTS REQUIRED

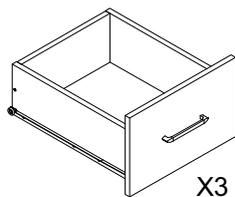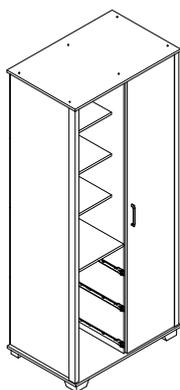

HARDWARE REQUIRED

TOOLS REQUIRED

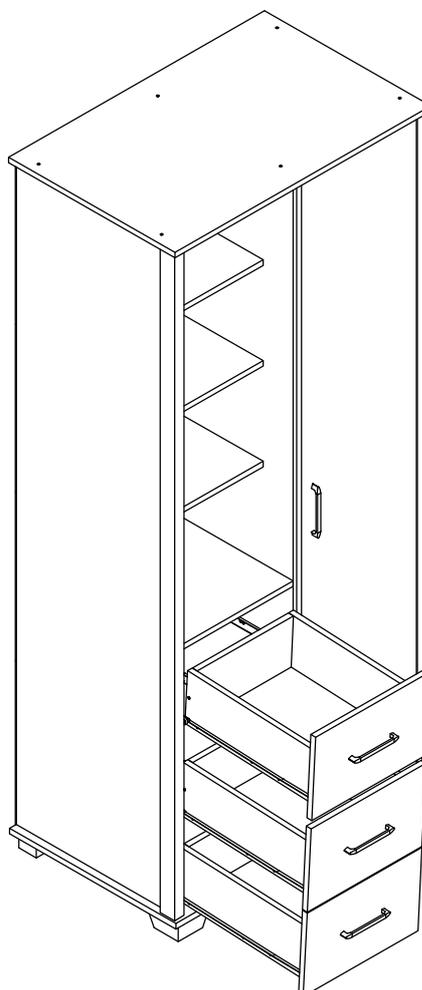

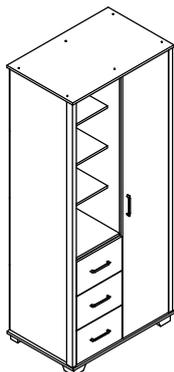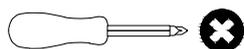STEP 17PART REQUIREDHARDWARE REQUIREDTOOLS REQUIRED**WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

