
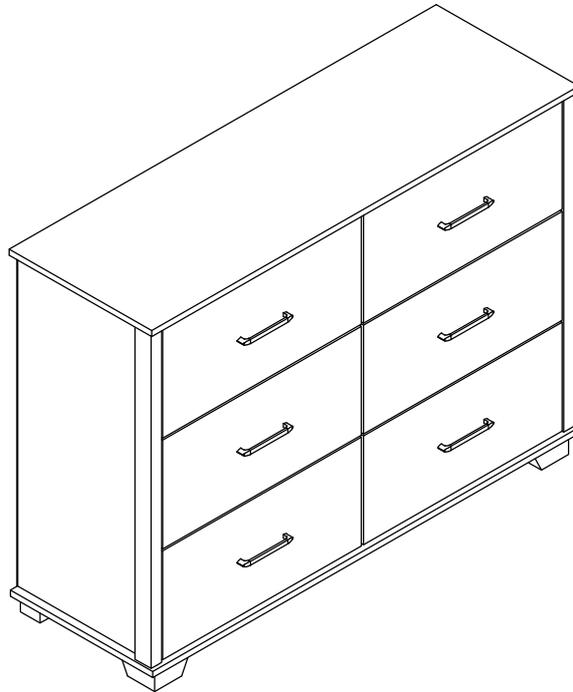


# OLIVER 6 DRAWER CHEST ASSEMBLY INSTRUCTIONS

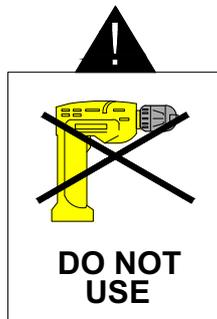

## **IMPORTANT FOR DOMESTIC USE ONLY PLEASE READ BEFORE YOU CONTINUE FURTHER**

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.


ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.

DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE. DO NOT OVERTIGHTEN FIXING.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.



THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

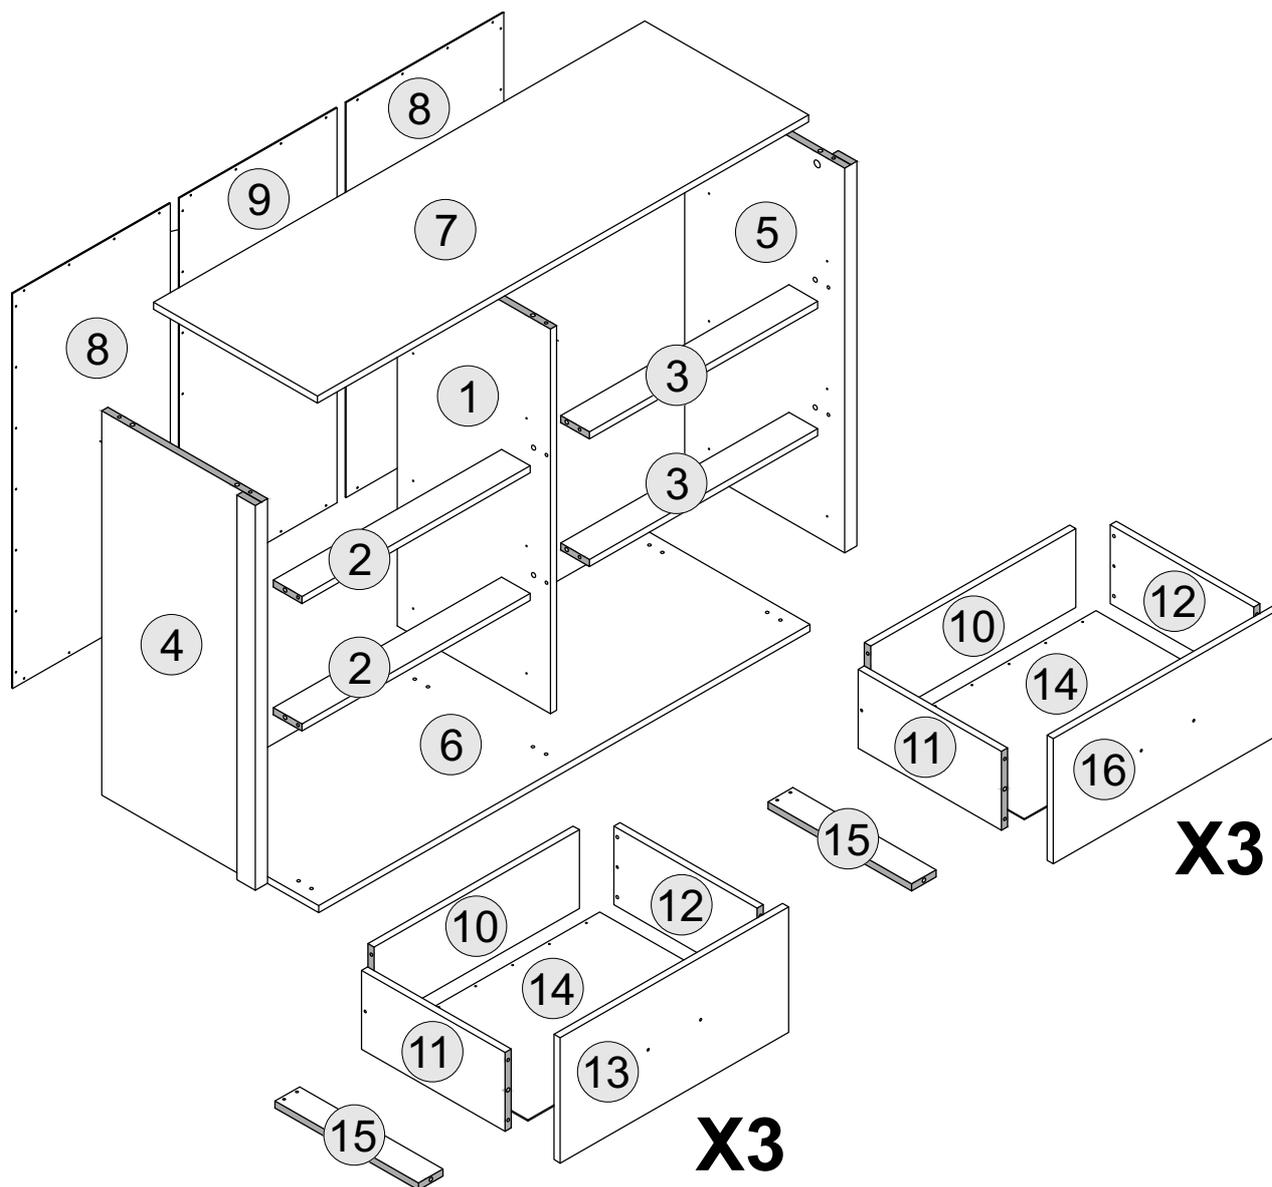


## PART LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S100-102-188-EU1-01	Centre Panel	1	2/2
2	S100-102-188-EU1-02	Front Crossbar - Left	2	2/2
3	S100-102-188-EU1-03	Front Crossbar - Right	2	2/2
4	S100-102-188-EU1-04	Side Panel - Left	1	2/2
5	S100-102-188-EU1-05	Side Panel - Right	1	2/2
6	S100-102-188-EU1-06	Bottom Panel	1	1/2
7	S100-102-188-EU1-07	Top Panel	1	1/2
8	S100-102-188-EU1-08	Back Panel I	2	1/2
9	S100-102-188-EU1-09	Back Panel II	1	1/2
10	S100-102-188-EU1-10	Drawer Back	6	1/2
11	S100-102-188-EU1-11	Drawer Side - Left	6	1/2
12	S100-102-188-EU1-12	Drawer Side - Right	6	1/2
13	S100-102-188-EU1-13	Drawer Front - Left	3	2/2
14	S100-102-188-EU1-14	Drawer Base	6	1/2
15	S100-102-188-EU1-15	Drawer Base Support Rail	6	2/2
16	S100-102-188-EU1-16	Drawer Front - Right	3	2/2


## HARDWARE LIST

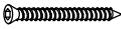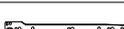A		DOWEL 6 X 30MM	68 PCS
B		CAM BOLT + CAM NUT	32 SETS
C		SCREW M6 X 50MM	6 PCS
D		SCREW M3.5 X 16MM	36 PCS
E		TACK	38 PCS
F		SCREW M4 X 32MM	12 PCS
G		HANDLE	6 PCS
H		SCREW M4 X 30MM	12 PCS
I		ALLEN KEY	1 PC
J		HANDLE SCREW 20MM	12 PCS
K		SCREW M3.5 X 12MM	84 PCS
L		L PVC FOOT	2 PCS
M		SQUARE PVC FOOT	3 PCS
N		SCREW M4 X 38MM	12 PCS
O		DRAWER RUNNER A - L/R	12 PCS
P		DRAWER RUNNER B - L/R	12 PCS
Q		PLASTIC H STRIP	2 PCS
R		ANTI - TIP STRAP	2 PCS
S		SCREW M4 X 16MM	2 PCS

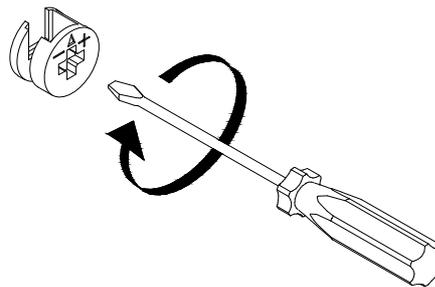

(SCREWDRIVER NOT PROVIDED)

USE A FLAT HEAD SCREWDRIVER TO TIGHTEN THE CAM NUTS. A QUARTER TURN CLOCKWISE IS ALL THAT IS NEEDED.

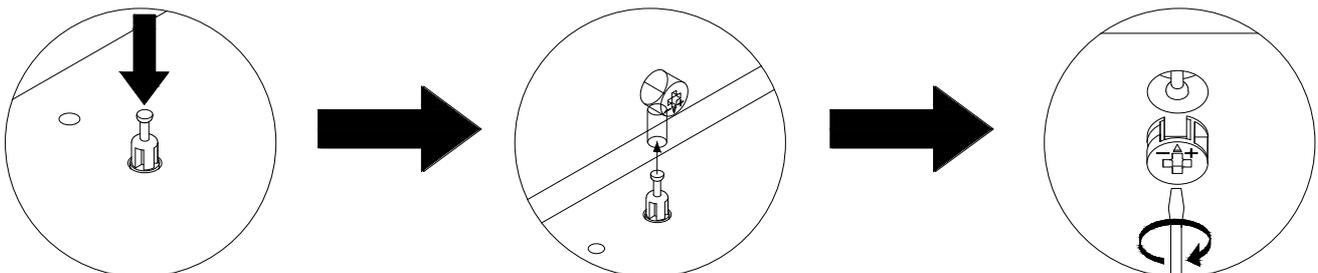

STEP 1 - PUSH CAM BOLT INTO INSERT

STEP 2 - ALIGN THE CAM BOLT WITH THE HOLE AND PUSH TOGETHER UNTIL FLUSH. ( MAKE SURE THE ARROW OF THE CAM LOCK IS POINTING TOWARD ON THE EDGE OF THE PANEL.)

STEP 3 - THE HEAD OF THE BOLT GOES INTO THE WIDE MOUTH OF THE CAM LOCK. YOU THEN TURN THE LOCK SO THE NARROW PART CLOSES OVER THE BOLT.



# STEP 3

**PARTS REQUIRED**

4 - SIDE PANEL - LEFT x1

**HARDWARE REQUIRED**



A  04

B  02

K  12

O  03

**TOOLS REQUIRED**

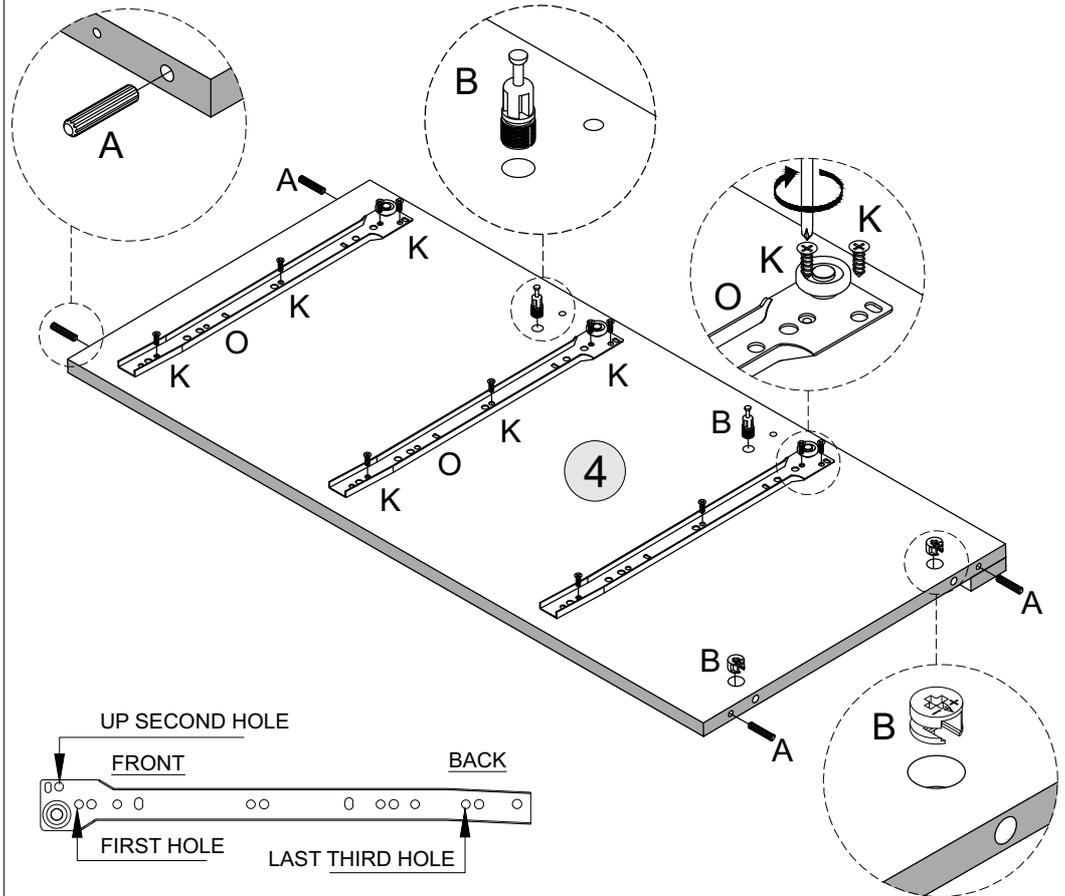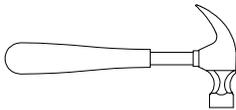

# STEP 4

**PARTS REQUIRED**


5 - SIDE PANEL - RIGHT x1

**HARDWARE REQUIRED**




A  04

B  02

K  12

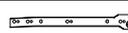O  03

**TOOLS REQUIRED**

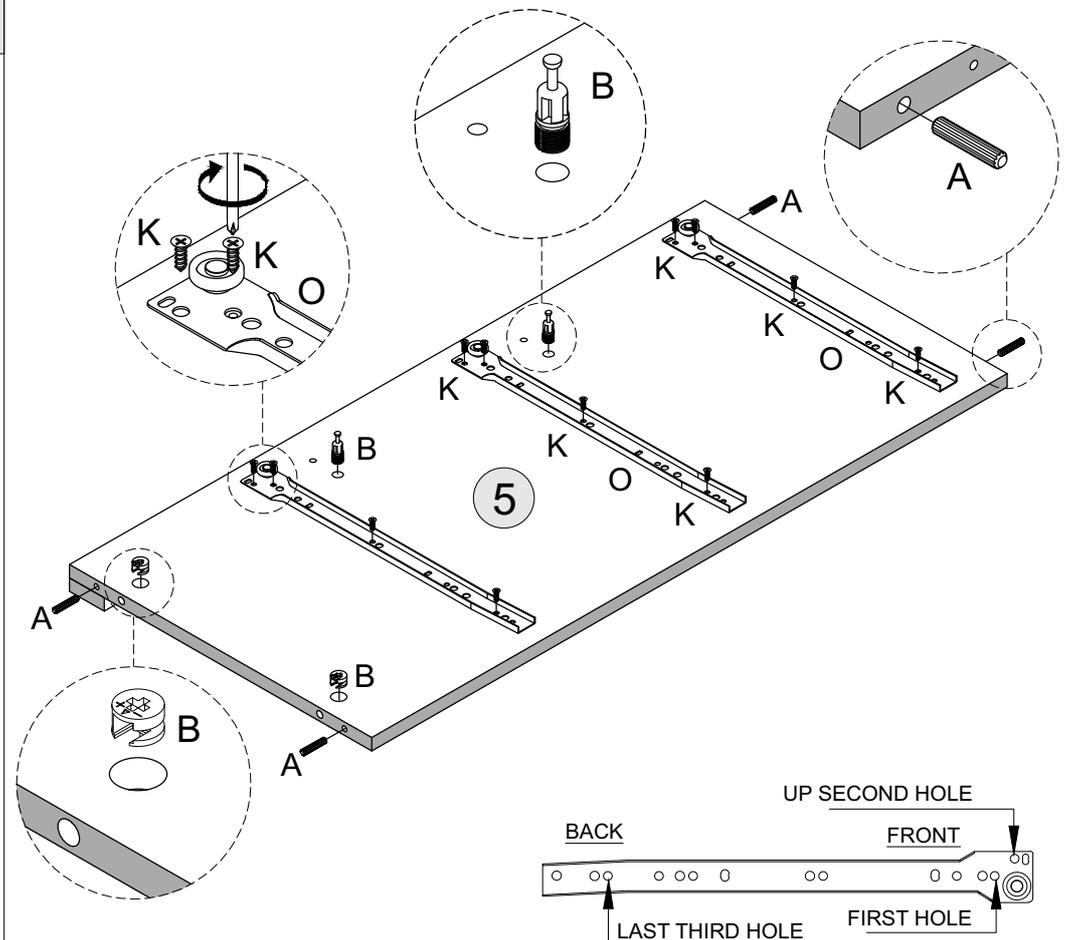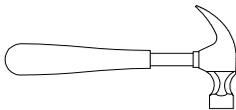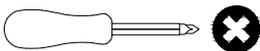

# STEP 5

PARTS REQUIRED

2 - FRONT CROSSBAR - LEFT x2

3 - FRONT CROSSBAR - RIGHT x2

7 - TOP PANEL x1



HARDWARE REQUIRED

A  08

B  08

B  06

TOOLS REQUIRED

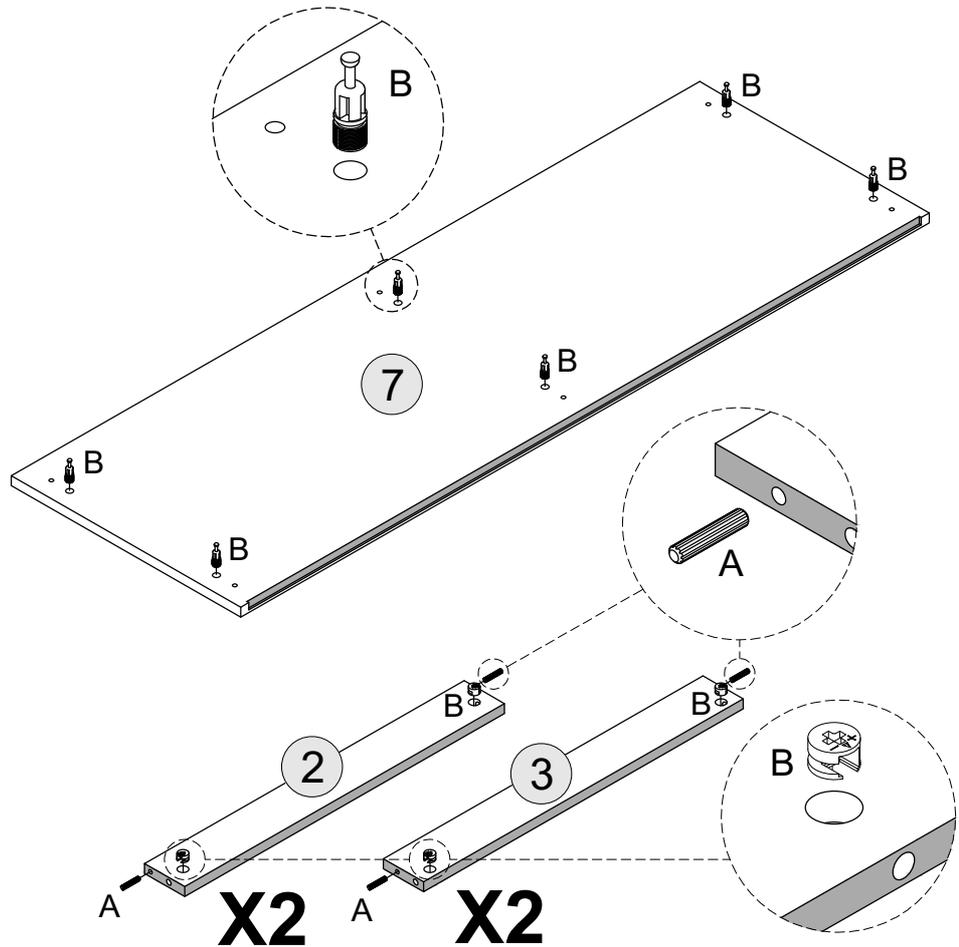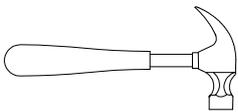

# STEP 6

PARTS REQUIRED


1 - CENTRE PANEL x1

2 - FRONT CROSSBAR - LEFT x2

3 - FRONT CROSSBAR - RIGHT x2

HARDWARE REQUIRED

TOOLS REQUIRED

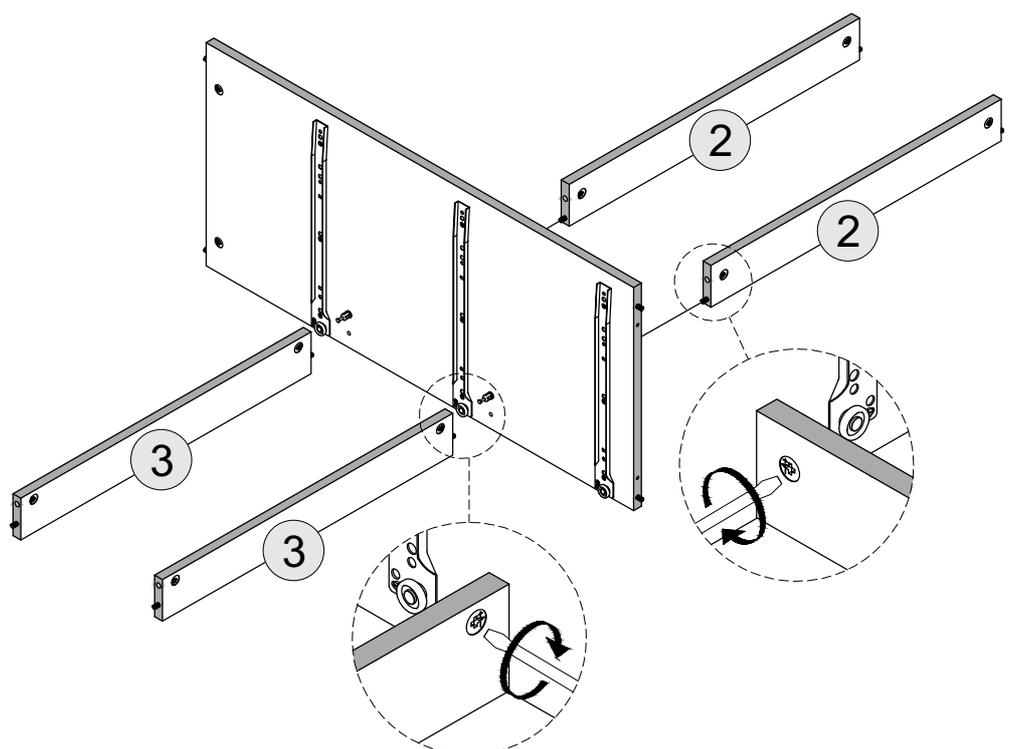


# STEP 7

PARTS REQUIRED



4 - SIDE PANEL - LEFT x1

5 - SIDE PANEL - RIGHT x1

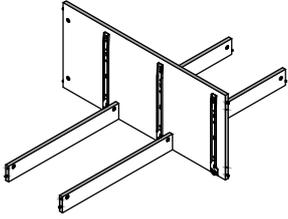

HARDWARE REQUIRED


TOOLS REQUIRED

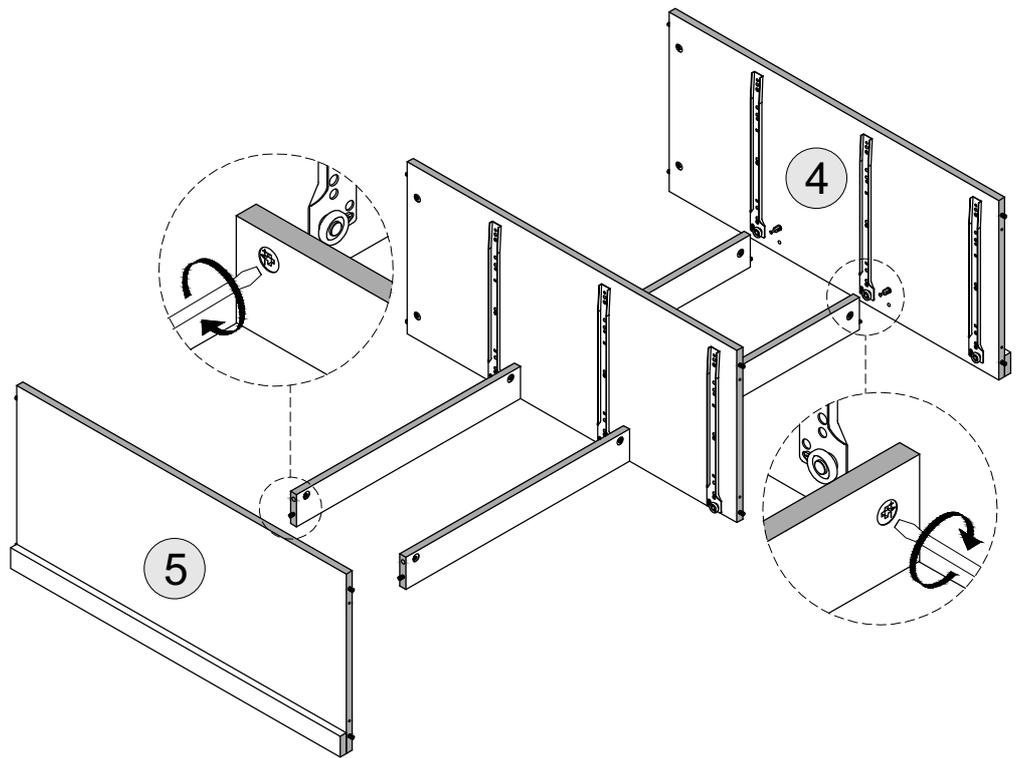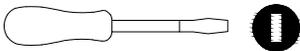


# STEP 8

PARTS REQUIRED


6 - BOTTOM PANEL x1

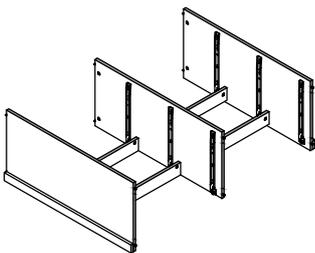

HARDWARE REQUIRED

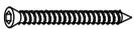C  06


TOOLS REQUIRED

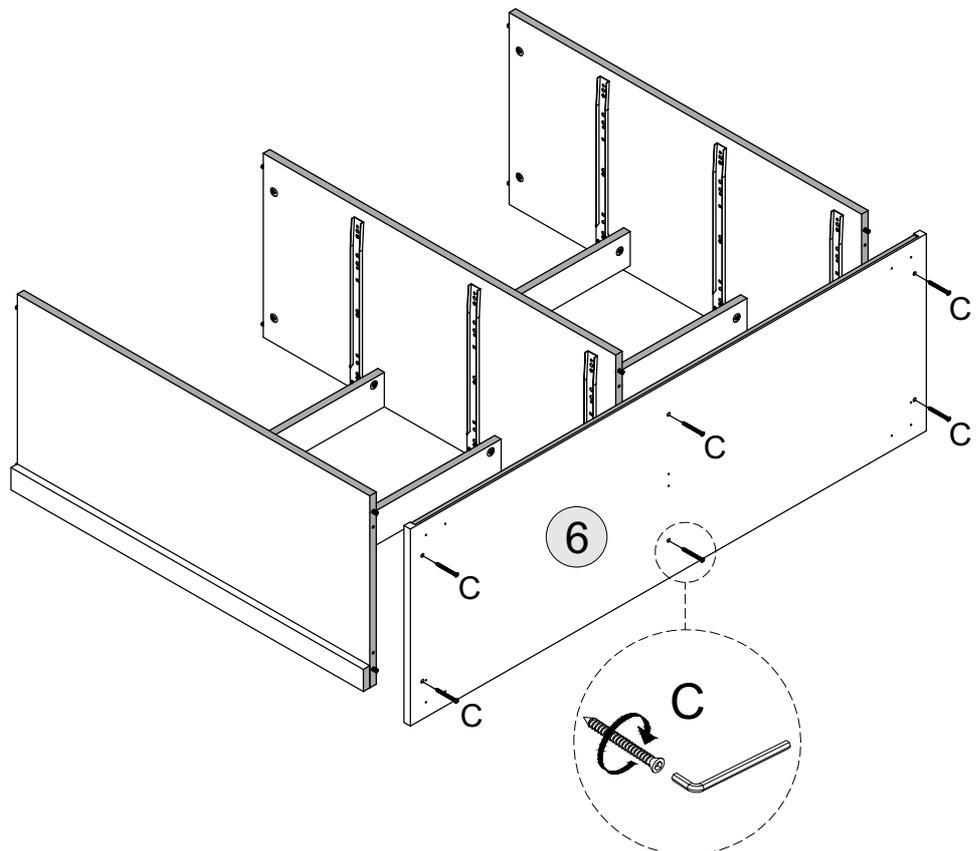

# STEP 9

**PARTS REQUIRED**

7 - TOP PANEL x1

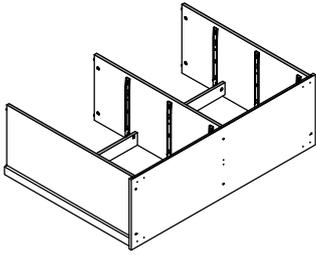



**HARDWARE REQUIRED**

F  12

L  02

M  03

**TOOLS REQUIRED**

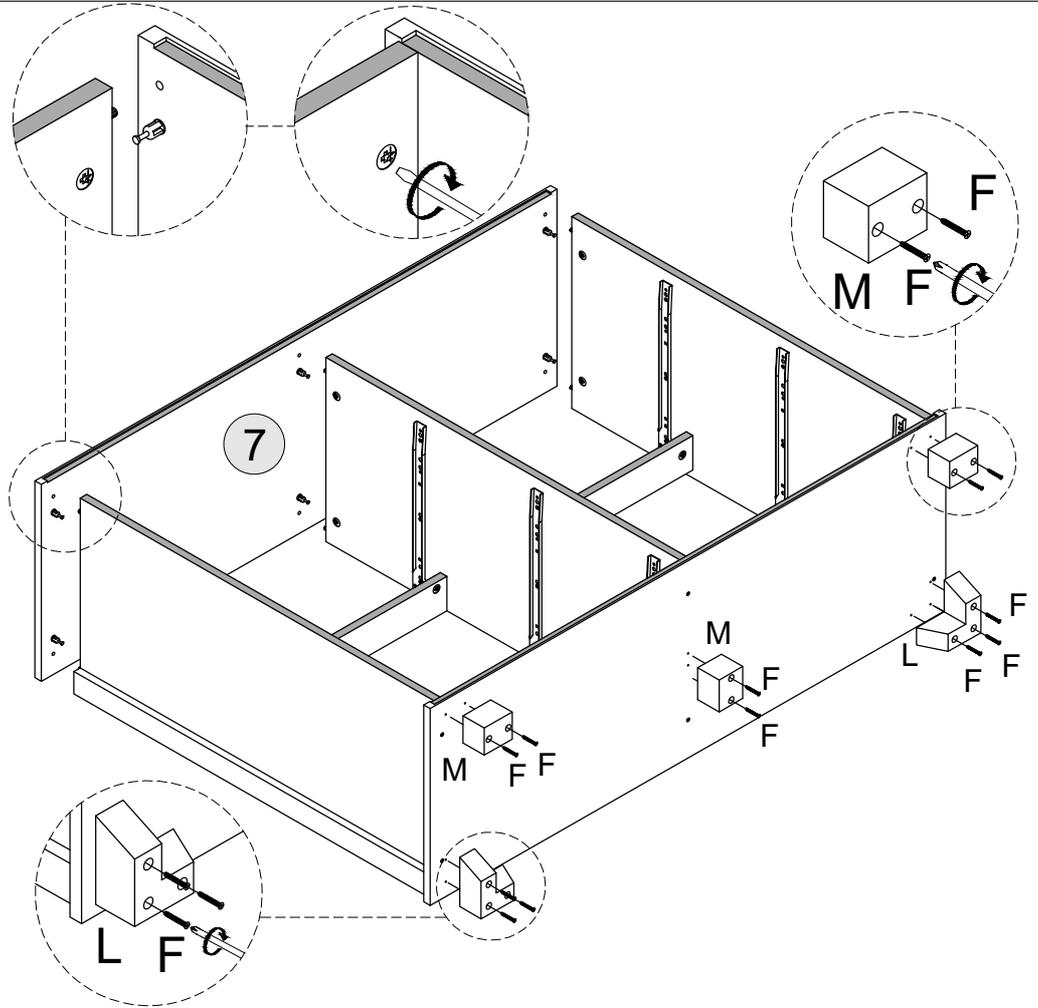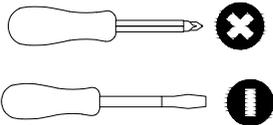


# STEP 10

**PARTS REQUIRED**

8 - BACK PANEL I x2

9 - BACK PANEL II x1


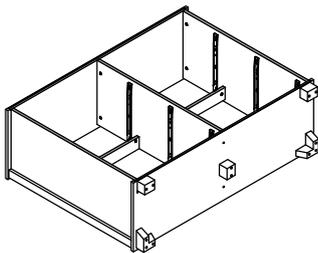


**HARDWARE REQUIRED**

E  38

Q  02

**TOOLS REQUIRED**

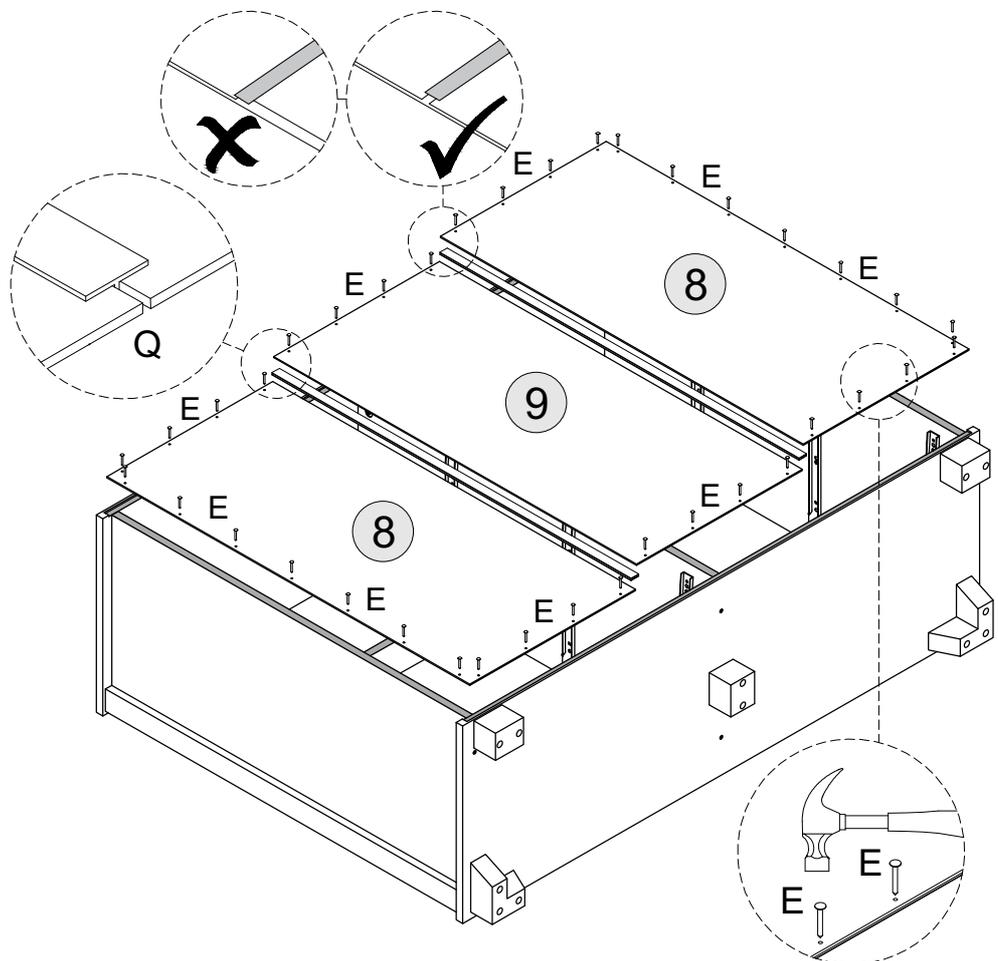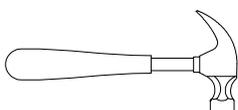

# STEP 11



**PARTS REQUIRED**

10 - DRAWER BACK	x6
11 - DRAWER SIDE-LEFT	x6
12 - DRAWER SIDE-RIGHT	x6
13 - DRAWER FRONT - LEFT	x3
16 - DRAWER FRONT - RIGHT	x3

**HARDWARE REQUIRED**

A		48
B		18
B		12
N		12


**TOOLS REQUIRED**

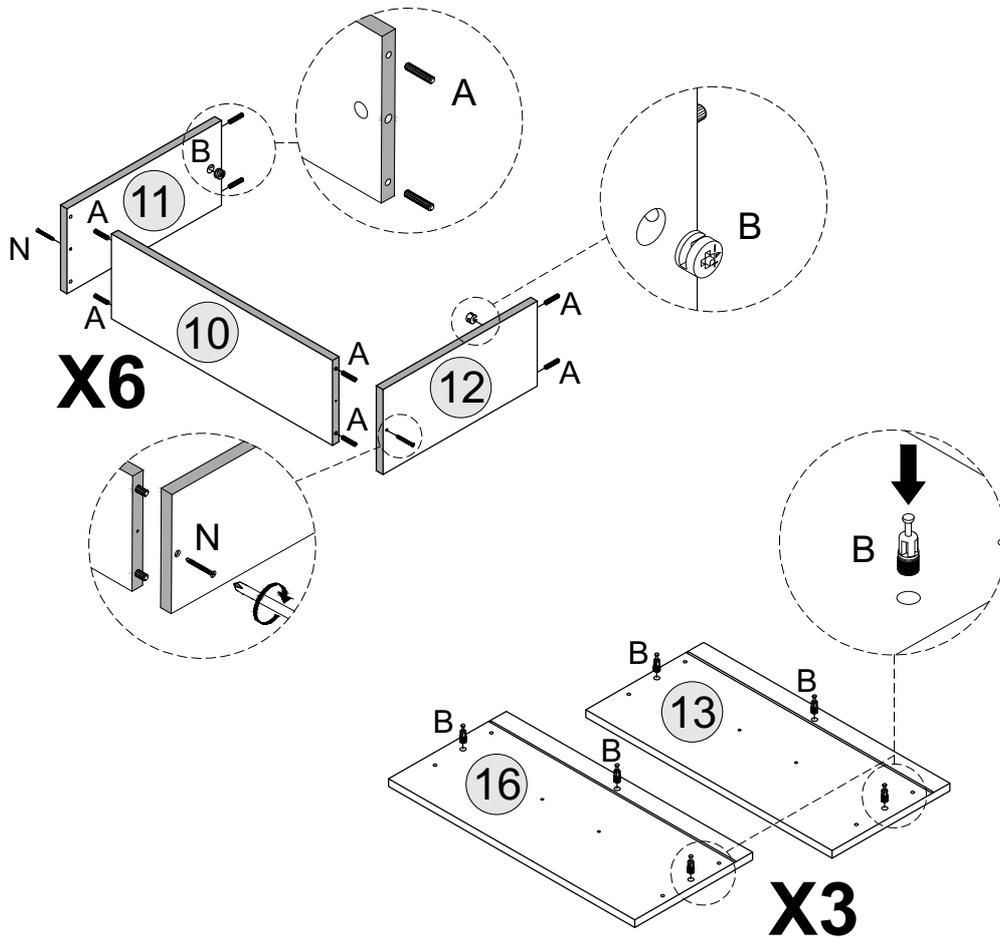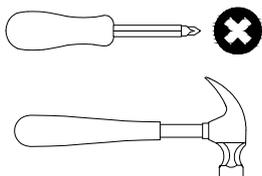

# STEP 12

**PARTS REQUIRED**



14 - DRAWER BASE	x6
------------------	----

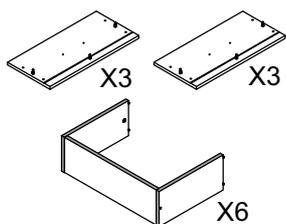

**HARDWARE REQUIRED**

G		06
J		12
K		36


**TOOLS REQUIRED**

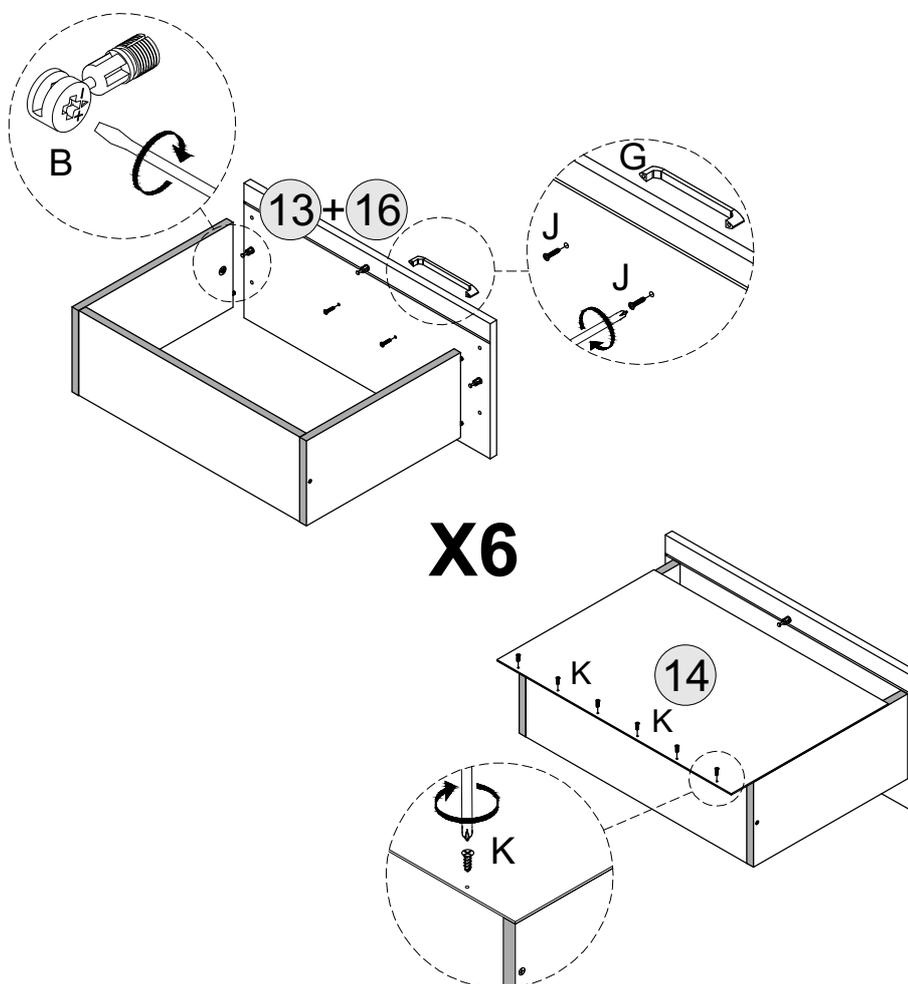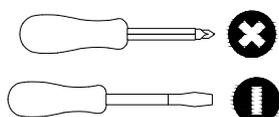

# STEP 13

PARTS REQUIRED


15 -DRAWER BASE SUPPORT RAIL x6

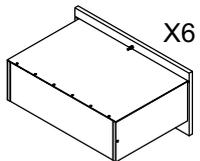

HARDWARE REQUIRED



B  06

D  36

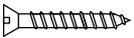H  12




P  12

TOOLS REQUIRED

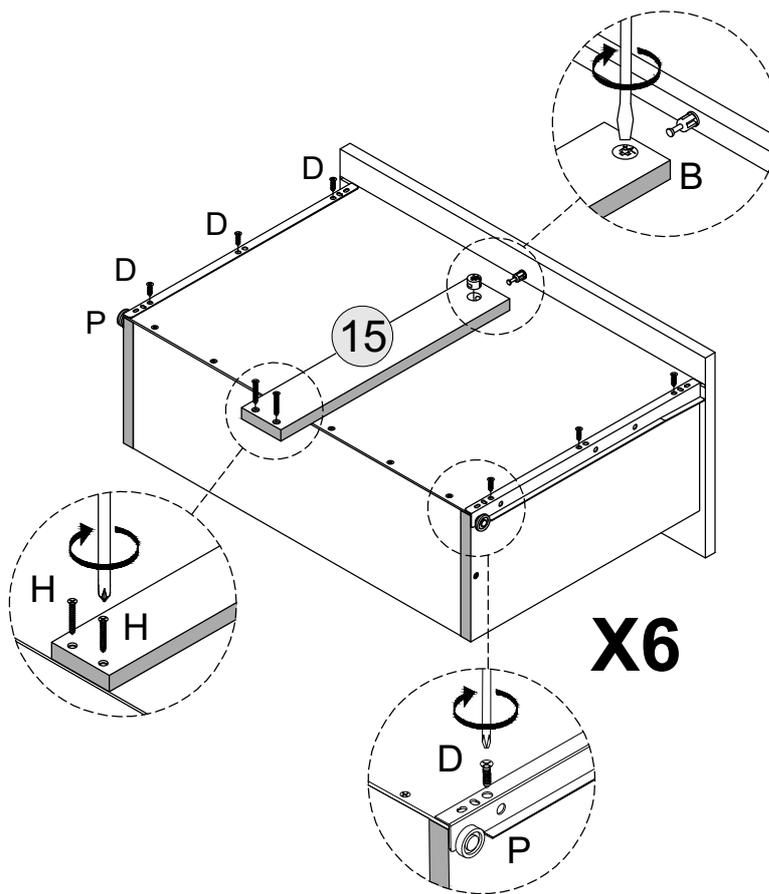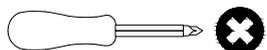


# STEP 14



PARTS REQUIRED

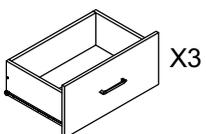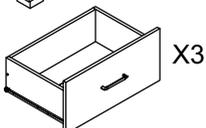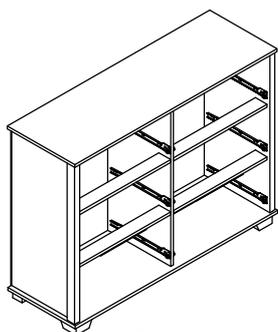

HARDWARE REQUIRED

TOOLS REQUIRED

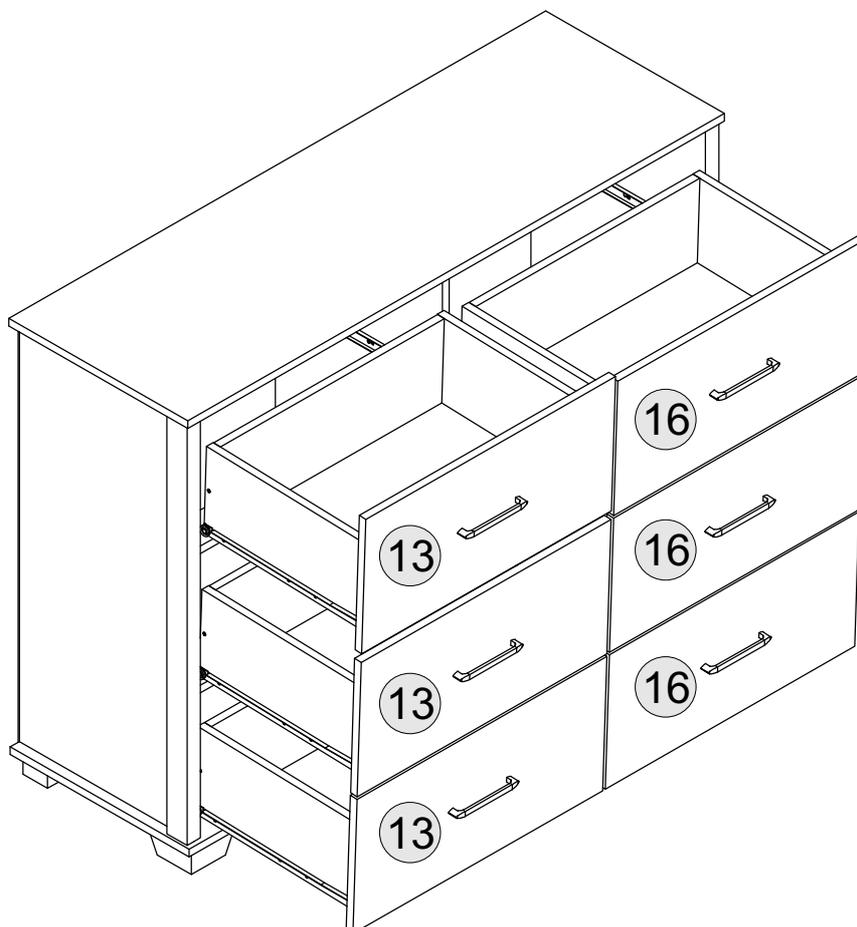

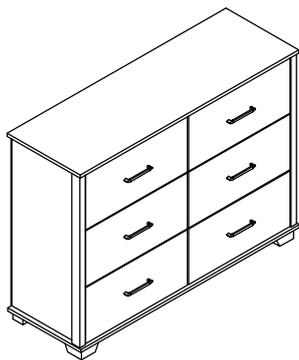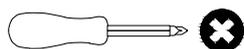**STEP 15**PART REQUIREDHARDWARE REQUIREDR  02S  02TOOLS REQUIRED**WARNING**

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices. Please make sure you use fixings suitable for the walls in your home.

