

Assembly Instructions

for 3ft6, 4ft and 4ft6 Adjustable Beds

Fitting pack includes

8 x Silver Glides



4 x Headboard Bolts



4 x Plastic Spacers





2 x U-Clips



1 Once unwrapped, turn the adjustable base on it's side and un-clip the mains cable and handset from below the slatted base.

2 Insert the silver glide feet into each corner on the underside of the base. You may have to tap them in with a rubber mallet.

3 Push both halves together and place the u-clips over the 2 wooden straps at the bottom of the base

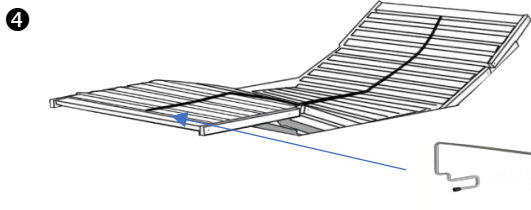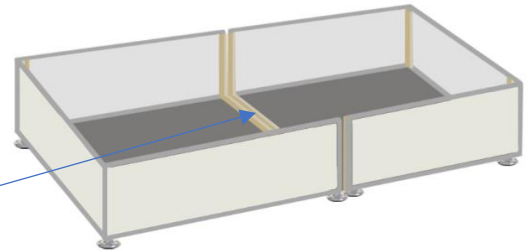



Place the slatted frame into the divan base and fit the silver metal mattress retaining bar to the first wooden slat at the end of the bed. This stops the mattress from sliding down when the headend is raised.

5 If you have purchased a massage unit, this will be required to be bolted to under side of the slatted frame in the lower back and thigh area.



The massage unit requires to be plugged into a mains socket.

6 If you are using a headboard, place the plastic spacers over the threaded bolts. Insert the bolts into the holes provided in the base and turn clockwise, leaving enough space for the heaboard strut to slide in between the spacer and the bolt head. The bolts can now be tightened by hand.

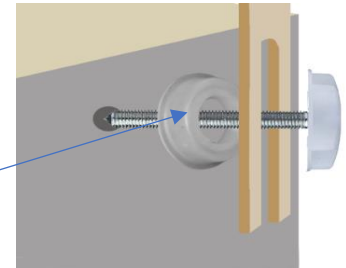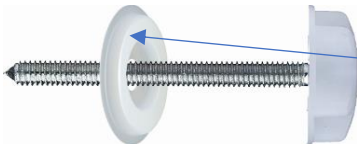

7 Once plugged in, you can raise or lower the bed ends separately or together to a point of comfort or a sitting position that will aid you when getting in and out of bed.

