


RILEY DINING CHAIR ASSEMBLY INSTRUCTIONS

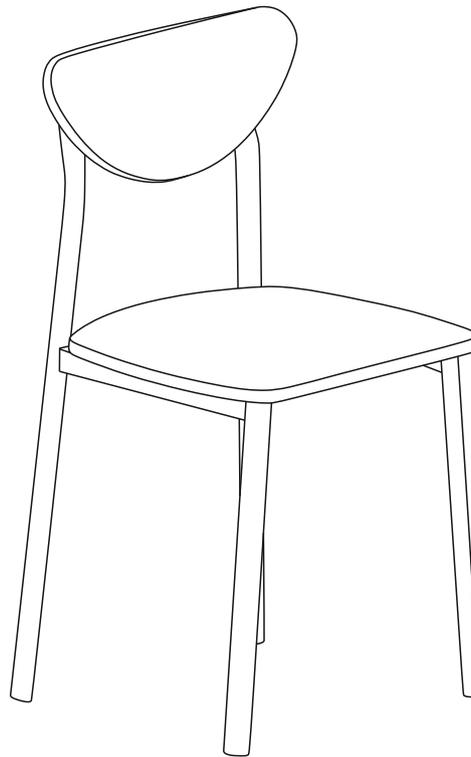

MAX CHAIR
WEIGHT



IMPORTANT

FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.


DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME.

THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.

DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET). DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.


THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

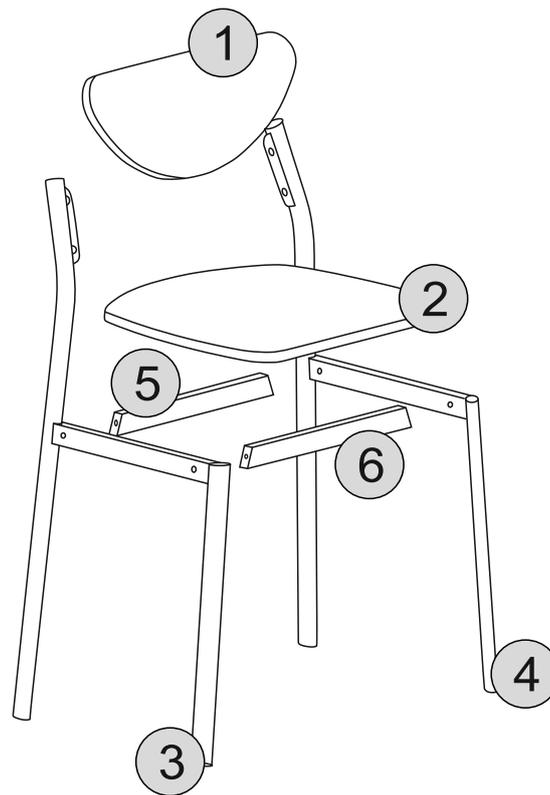

PARTS LIST

Part Number	Part Code	Part Description	Quantity	Carton
1	S400-402-115-BT1-01	Backrest	1	1/1
2	S400-402-115-BT1-02	Seat Pad	1	1/1
3	S400-402-115-BT1-03	Chair Leg (Left)	1	1/1
4	S400-402-115-BT1-04	Chair Leg (Right)	1	1/1
5	S400-402-115-BT1-05	Chair Crossbar Short	1	1/1
6	S400-402-115-BT1-06	Chair Crossbar Long	1	1/1

HARDWARE LIST

REF		HARDWARE NAME	QTY
A		6 x 12MM ALLEN BOLT	4PCS
B		6 x 35MM ALLEN BOLT	4PCS
C		6 x 40MM ALLEN BOLT	4PCS
D		ALLEN KEY	1PC

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

STEP 1

PARTS REQUIRED

3 - CHAIR LEG (LEFT) x1

5 - CHAIR CROSSBAR SHORT x1

6 - CHAIR CROSSBAR LONG x1



HARDWARE REQUIRED

B  02

TOOLS REQUIRED




Do not fully tighten the bolts (B) before you have attached the backrest and seat pad

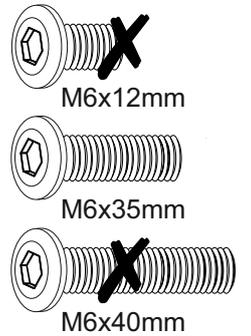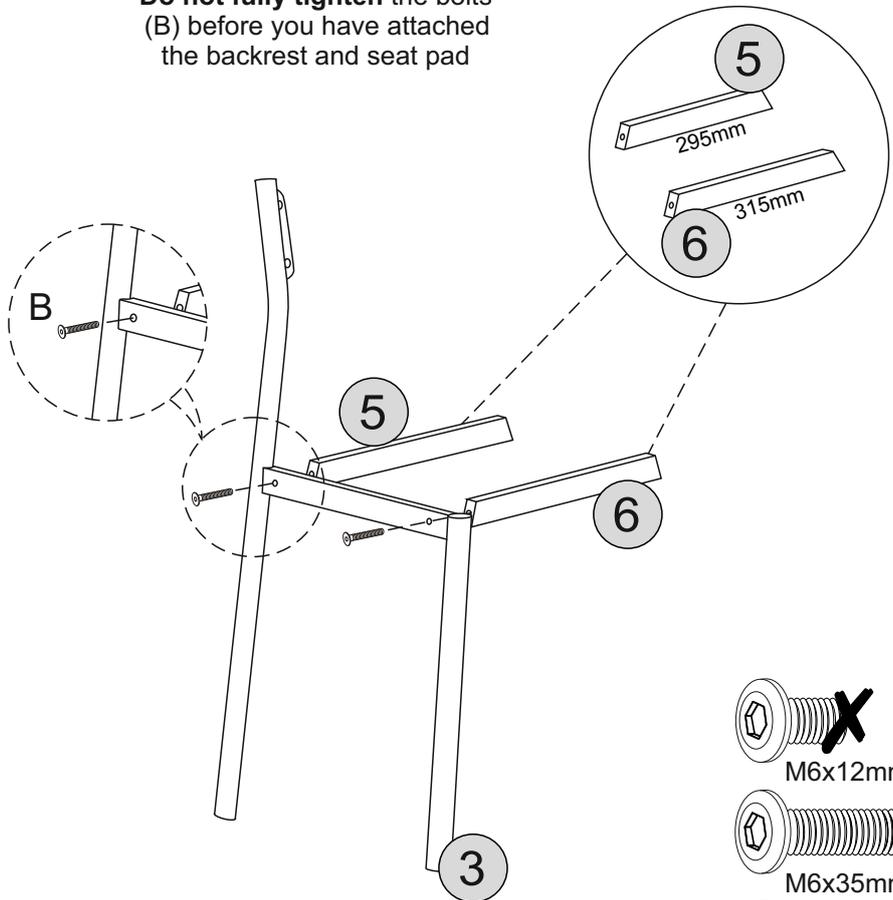

STEP 2

PARTS REQUIRED

4 - CHAIR LEG (RIGHT) x1

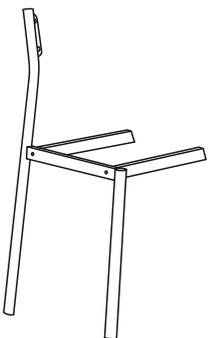



HARDWARE REQUIRED

B  02

TOOLS REQUIRED




Do not fully tighten the bolts (B) before you have attached the backrest and seat pad

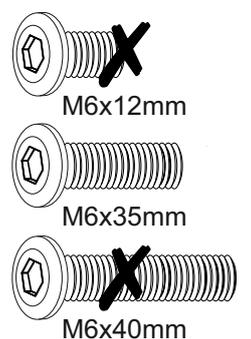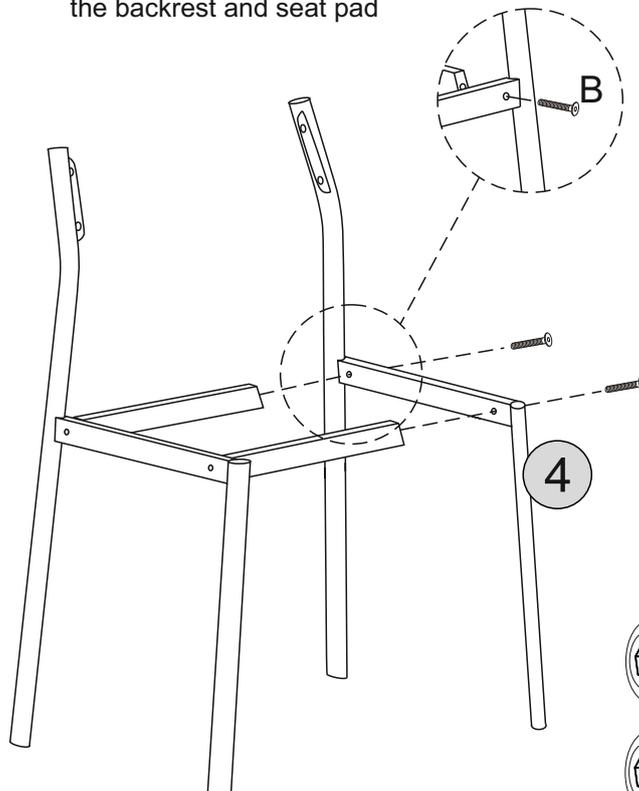

STEP 3

PARTS REQUIRED



1 - BACKREST x1

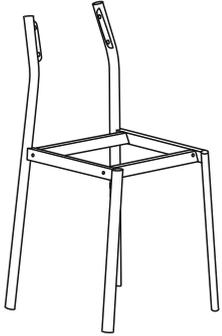

HARDWARE REQUIRED

A  04

TOOLS REQUIRED

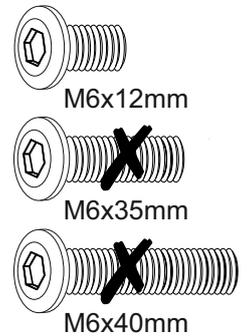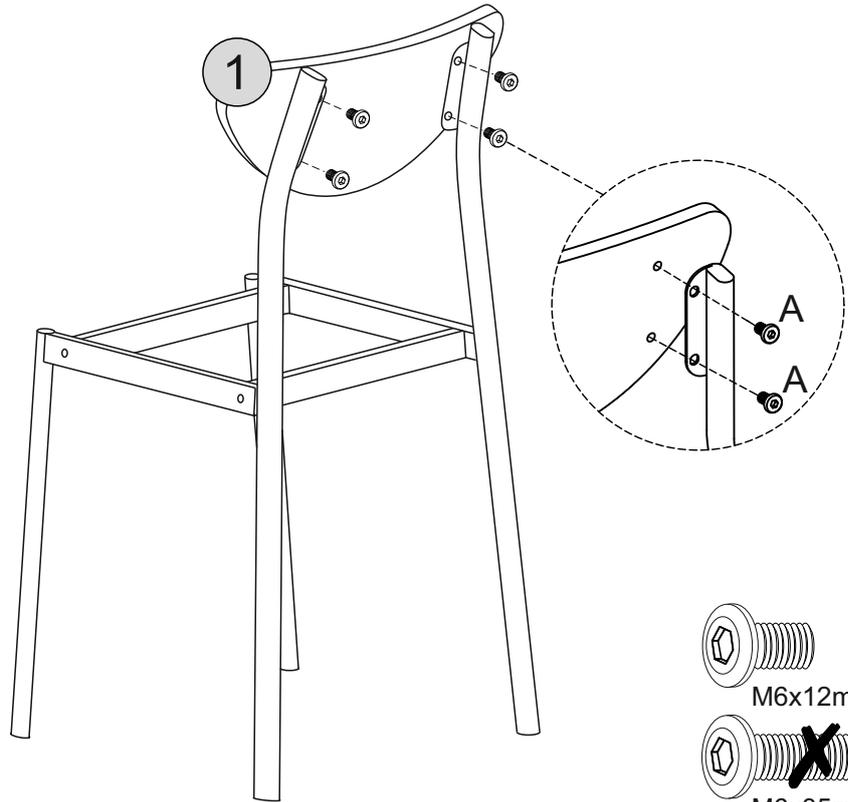


STEP 4

PLEASE NOW FULLY TIGHTEN ALL BOLTS !!!

PARTS REQUIRED

2 - SEAT PAD x1

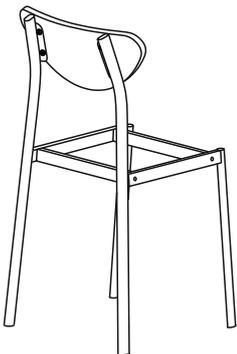

HARDWARE REQUIRED

C  04

TOOLS REQUIRED

