

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

Thank you for purchasing the OTTOMAN BED. Please read the instructions carefully to ensure safe operation of the product.



2180mm×1470mm×1150/320mm 4ft6 DOUBLE

2280mm×1620mm×1150/320mm 5ft KING


PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list.

Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



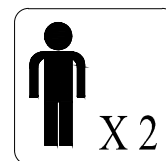
Screwdriver × 1
(not included)



Allen key × 2
(Included)



Spanner × 1
(Included)



MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is intended for a maximum person 's weight of 110kg per side. Do not exceed this weight.
- Due to the size of this product we recommend that it is assembled in the room intended for use .
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly .
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching .
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled and secured as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly.
- This product should only be used on firm, level ground .
- Please dismantle for transportation.
- Tools are included.

WARNINGS

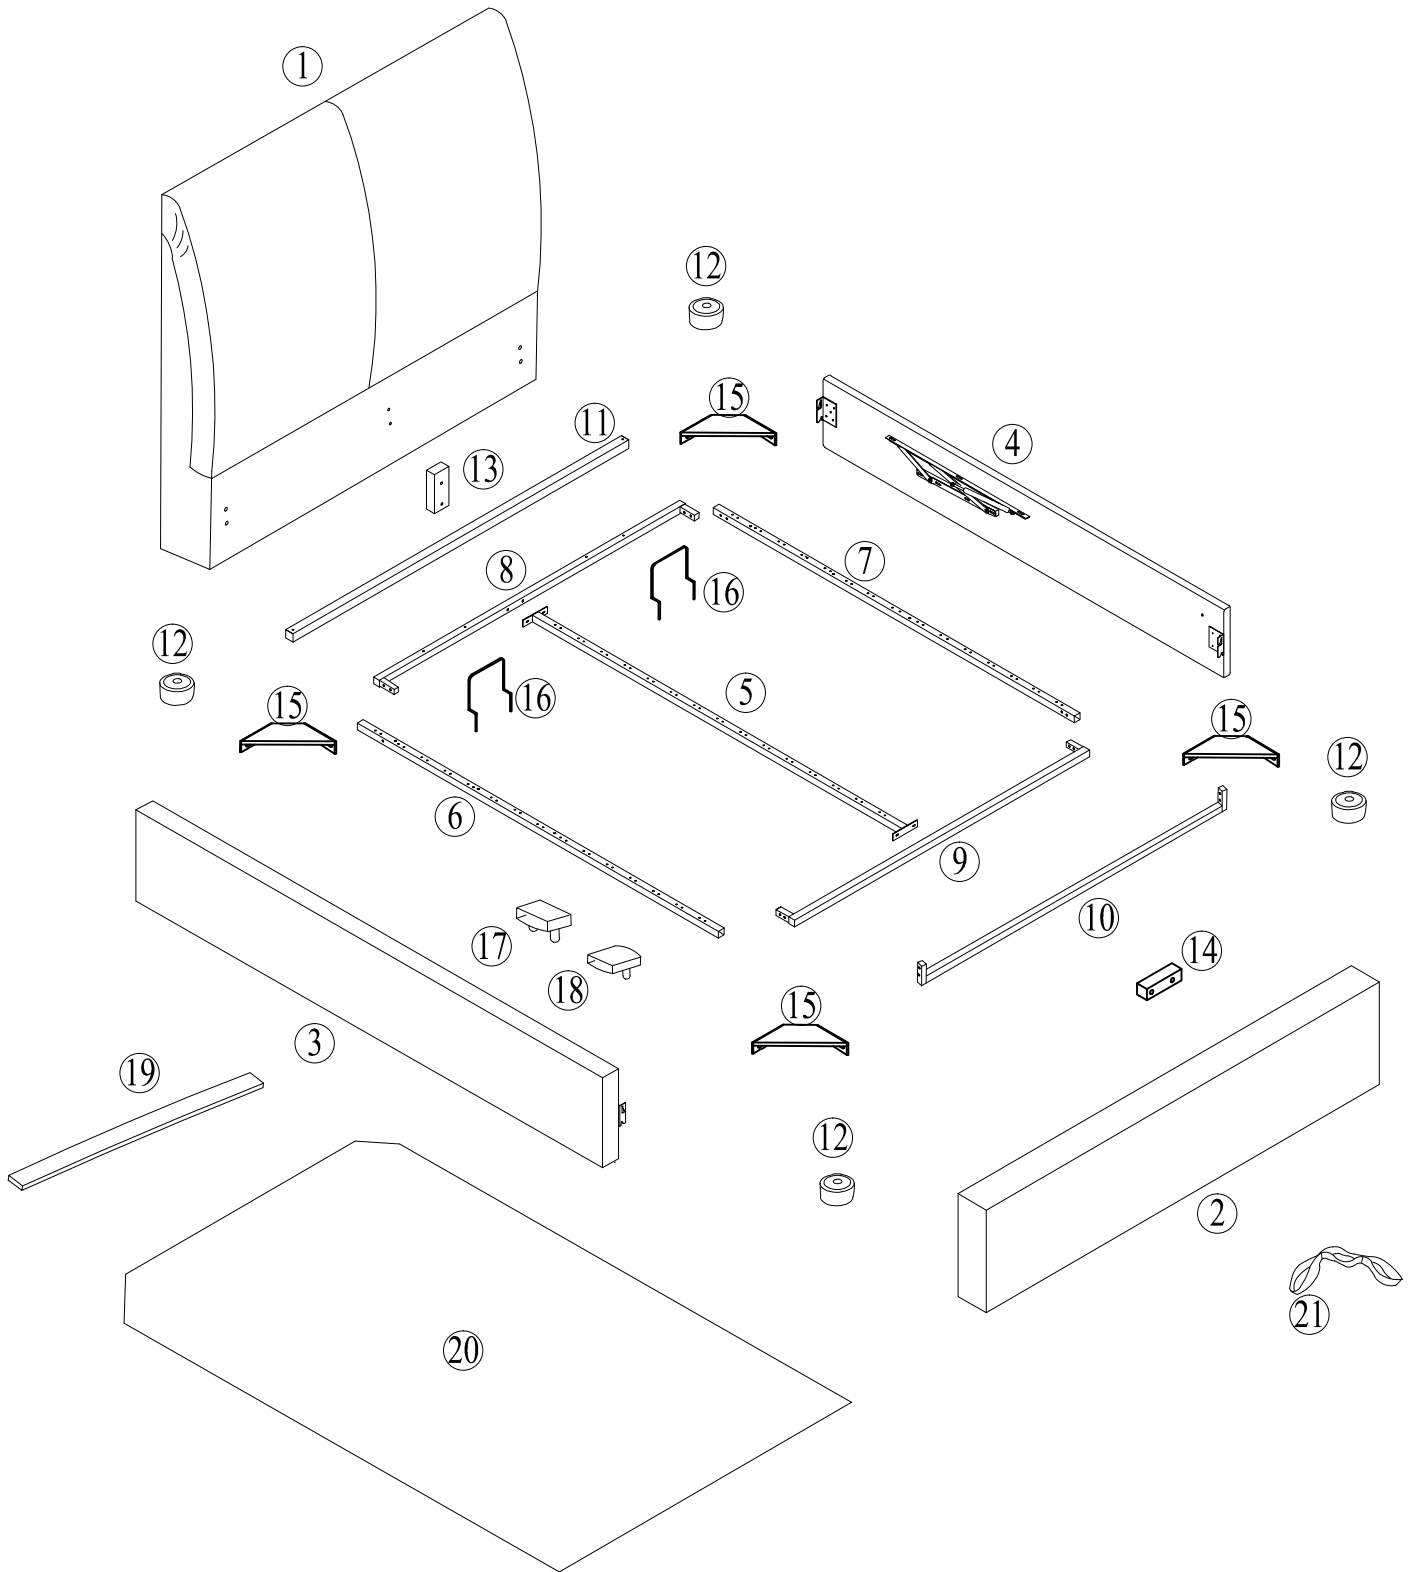
- Only use the storage compartment when the frame is fully raised in the up position .
- DO make sure the legs remain in contact with the ground.
- DO keep small parts out of reach of children.
- DO use caution when operating, this bed uses a pressured mechanism.
- DO keep hands and fingers clear of the mechanism when opening and closing the bed for use.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until fully assembled.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT stand on the product.
- DO NOT remain on the bed whilst the lifting mechanism is in use.
- DO NOT expose this product to dripping or splashing, rain or areas with heavy moisture.
- DO NOT place any objects filled with liquids, such as vases, on the product.
- DO NOT insert foreign objects into the product or attempt to repair this unit by yourself.
- DO NOT place the product in direct sunlight, open flames such as candles or heat, such as radiators.Keep away from temperatures over 35 C.

CARE INFORMATION

- Never use scourers, abrasives or chemical cleaners.
- To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

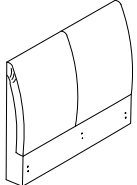
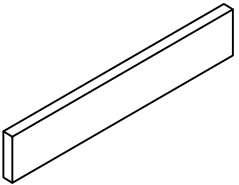
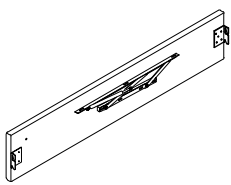
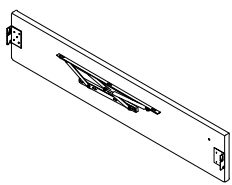
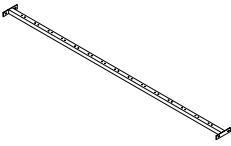
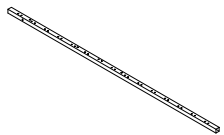
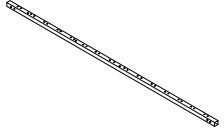
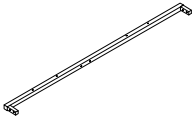
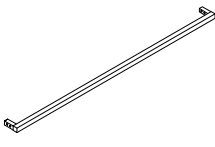
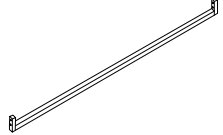
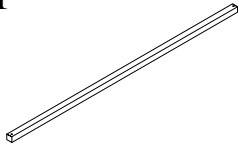







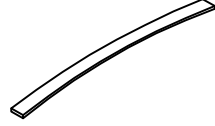
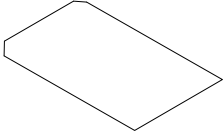

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.



MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

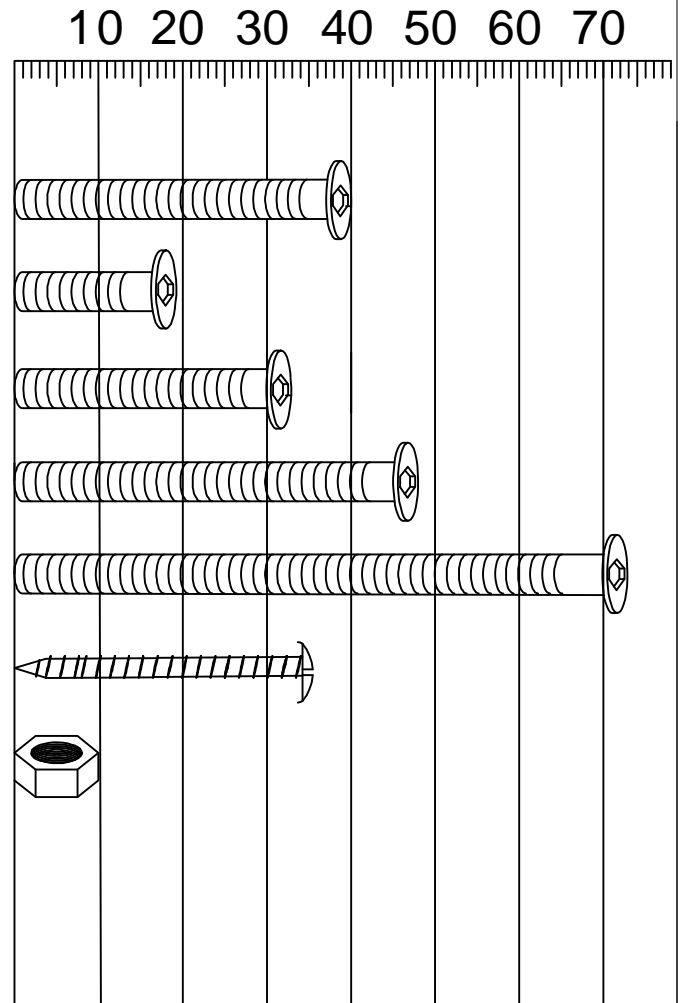
Parts

<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 
<p>Description: HEADBOARD Qty: 1pc Dimension: 4'6" 1470x1130x220mm Dimension: 5' 1620x1130x220mm</p>	<p>Description: FOOTBOARD Qty: 1pc Dimension: 4'6" 1470x300x55mm Dimension: 5' 1620x300x55mm</p>	<p>Description: SIDE RAILS (Left) Qty: 1pc Dimension: 4'6" 1930x300x45mm Dimension: 5' 2030x300x45mm</p>	<p>Description: SIDE RAILS (Right) Qty: 1pc Dimension: 4'6" 1930x300x45mm Dimension: 5' 2030x300x45mm</p>
<p>5</p> 	<p>6</p> 	<p>7</p> 	<p>8</p> 
<p>Description: SUPPORT BAR Qty: 1pc Dimension: 4'6" 1837x50x25mm Dimension: 5' 1930x50x25mm</p>	<p>Description: METAL LEFT FRAME (L) Qty: 1pc Dimension: 4'6" 1837x30x30mm Dimension: 5' 1933x30x30mm</p>	<p>Description: METAL RIGHT FRAME (R) Qty: 1pc Dimension: 4'6" 1837x30x30mm Dimension: 5' 1933x30x30mm</p>	<p>Description: METAL FRAME (HB) Qty: 1pc Dimension: 4'6" 1358x30x30mm Dimension: 5' 1500x30x30mm</p>
<p>9</p> 	<p>10</p> 	<p>11</p> 	<p>12</p> 
<p>Description: METAL FRAME (FB) Qty: 1pc Dimension: 4'6" 1358x30x30mm Dimension: 5' 1500x30x30mm</p>	<p>Description: CENTER SUPPORT BAR Qty: 1pc Dimension: 4'6" 1388x20x20mm Dimension: 5' 1528x20x20mm</p>	<p>Description: CROSS RAIL Qty: 1pc Dimension: 4'6" 1345x30x30mm Dimension: 5' 1485x30x30mm</p>	<p>Description: FEET Qty: 4pcs Dimension: $\phi 34 \times 13 \text{mm}$</p>
<p>13</p> 	<p>14</p> 	<p>15</p> 	<p>16</p> 
<p>Description: HEADBOARD SUPPORT WOOD Qty: 1pc Dimension: 95x40x45mm</p>	<p>Description: FOOTBOARD SUPPORT WOOD Qty: 1pc Dimension: 138x40x30mm</p>	<p>Description: CORNER BRACKETS Qty: 4pcs Dimension: 247x80x32mm</p>	<p>Description: MATTRESS STOPPER Qty: 2pcs Dimension: 210x125x$\phi 8 \text{mm}$</p>
<p>17</p> 	<p>18</p> 	<p>19</p> 	<p>20</p> 
<p>Description: SINGLE PLASTIC CAP SIDE Qty: 4'6": 28pcs / 5' : 32pcs Dimension: 55x30x25mm</p>	<p>Description: DOUBLE PLASTIC CAP SIDE Qty: 4'6": 14pcs / 5' : 16pcs Dimension: 55x50x25mm</p>	<p>Description: BENT SLATS Qty: 4'6": 28pcs / 5' : 32pcs Dimension: 4'6" 675x54x9mm Dimension: 5' 744x53x9mm</p>	<p>Description: NON WOVEN FABRIC Qty: 1pc Dimension: 4'6" 2000x1450mm Dimension: 5' 2100x1585mm</p>
<p>21</p> 			
<p>Description: BELT Qty: 1pc Dimension: 330x30mm</p>			

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

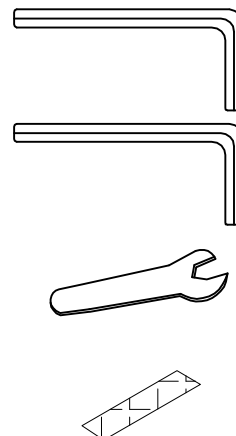
Fixings (to scale)

Ref	Dimensions	Qty
A	Bolt-M6x40	4
B	Bolt-M8x16	12
C	Bolt-M8x30	24
D	Bolt-M8x45	8
E	Bolt-M8x70	2
F	Screw (M4x35mm)	4
G	Nut	6



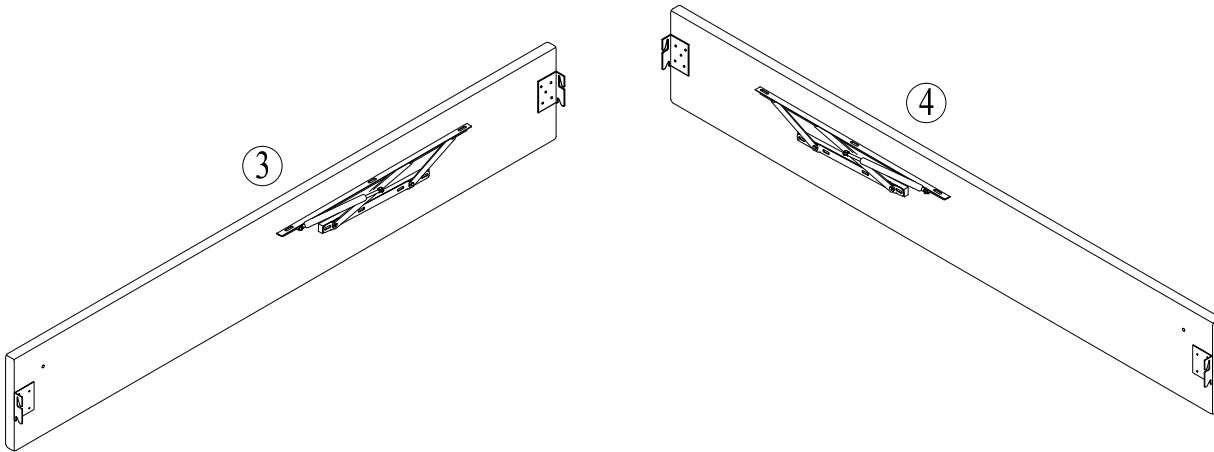
(Not to scale)

H	4mm Allen Key	1
I	5mm Allen Key	1
J	Spanner	1
K	Non-slip pad	1



CAUTION: There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product. If you keep the fittings in a bowl during assembly you will be less likely to lose them!

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

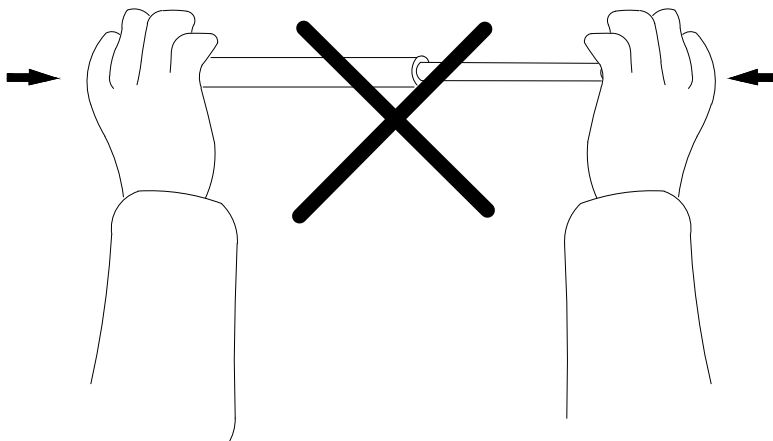


IMPORTANT PISTON INFORMATION

The pistons used in the construction of this product are extremely strong and cannot be operated by hand when not fitted to the ottoman hinges. All pistons are tested in the factory for correct pressure and operation before use.

Initially it might appear that the pistons are very stiff when opening and closing the ottoman frame. THIS IS NORMAL.

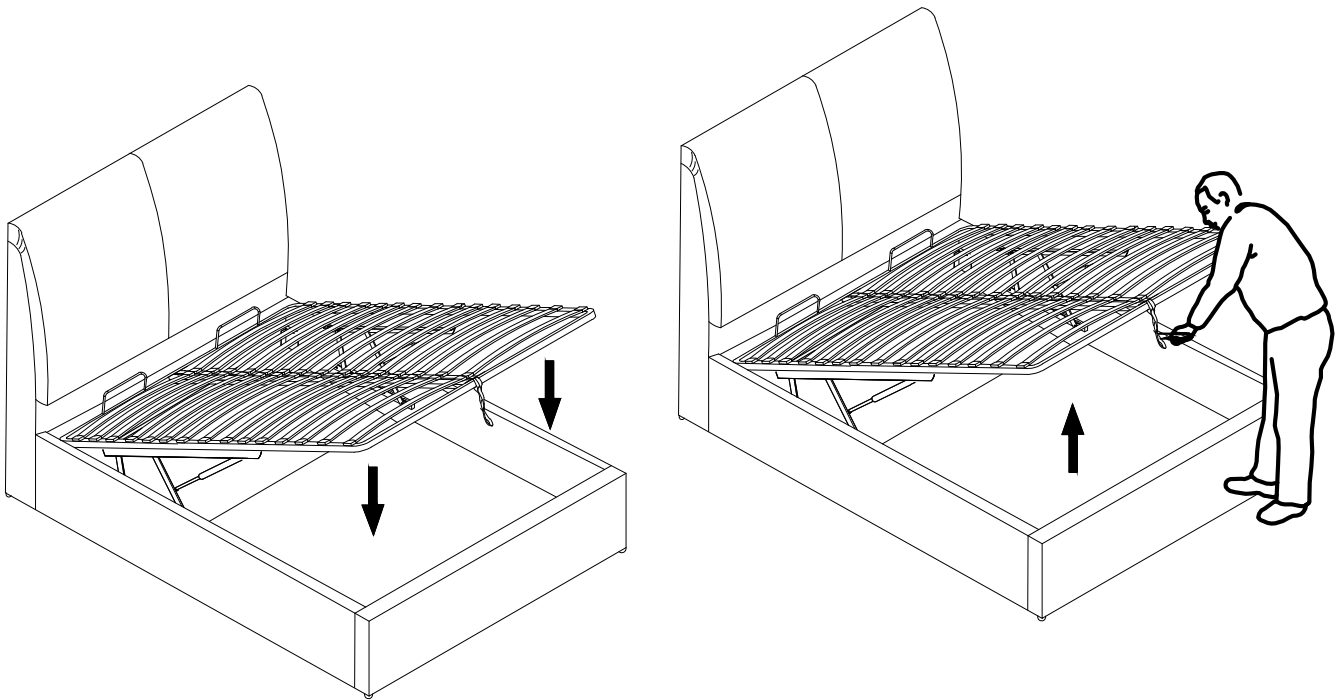
After operating the ottoman a few times, the movement of the pistons and the opening and closing of the ottoman will become easier.



MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

Hints and Tips

To Close the ottoman, always use 2 hands at arm's length and only where illustrated on this product. You must ensure the mattress is on the bed frame before lifting the mechanism **Failure to do so may result in injury.** There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product. Use the lifting strap to open the ottoman.



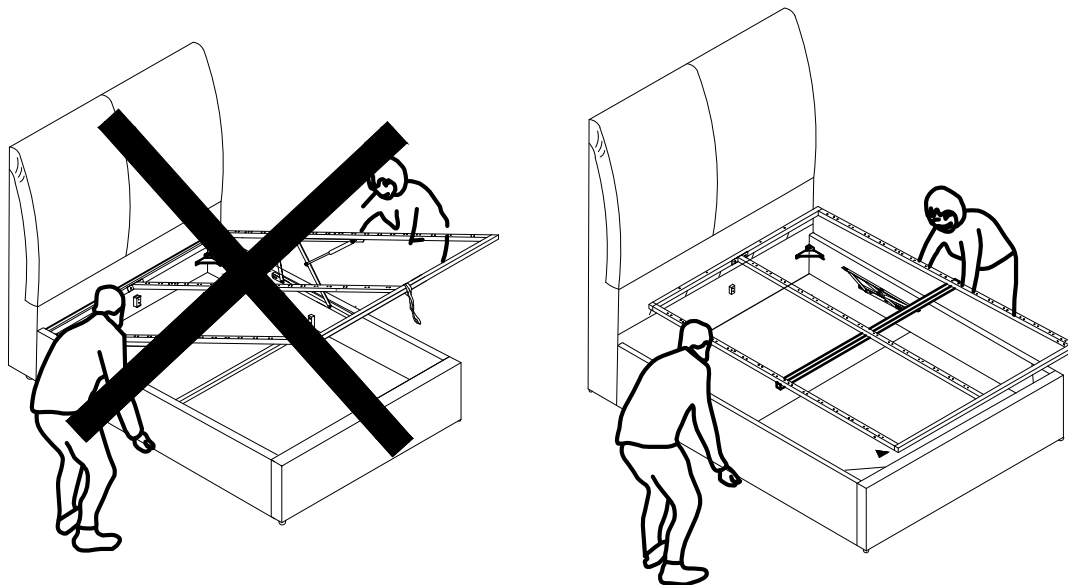
If removing the mattress, make sure the frame is secured so it does not flip open. When lifting the bed frame, remove pillows and covers .So that they do not impede the operation.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman - THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT - and the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut,keep fingers & hands clear and it will close completely under its own weight.

When lowering the slat unit for the first time, take care to make sure it does not rub unevenly on the inside face of the Side Rail. If it does, the bed has been assembled slightly out of square. This can be rectified by moving the Footboard of the bed slightly to the left or right whilst leaving the headboard of the bed frame stationary.

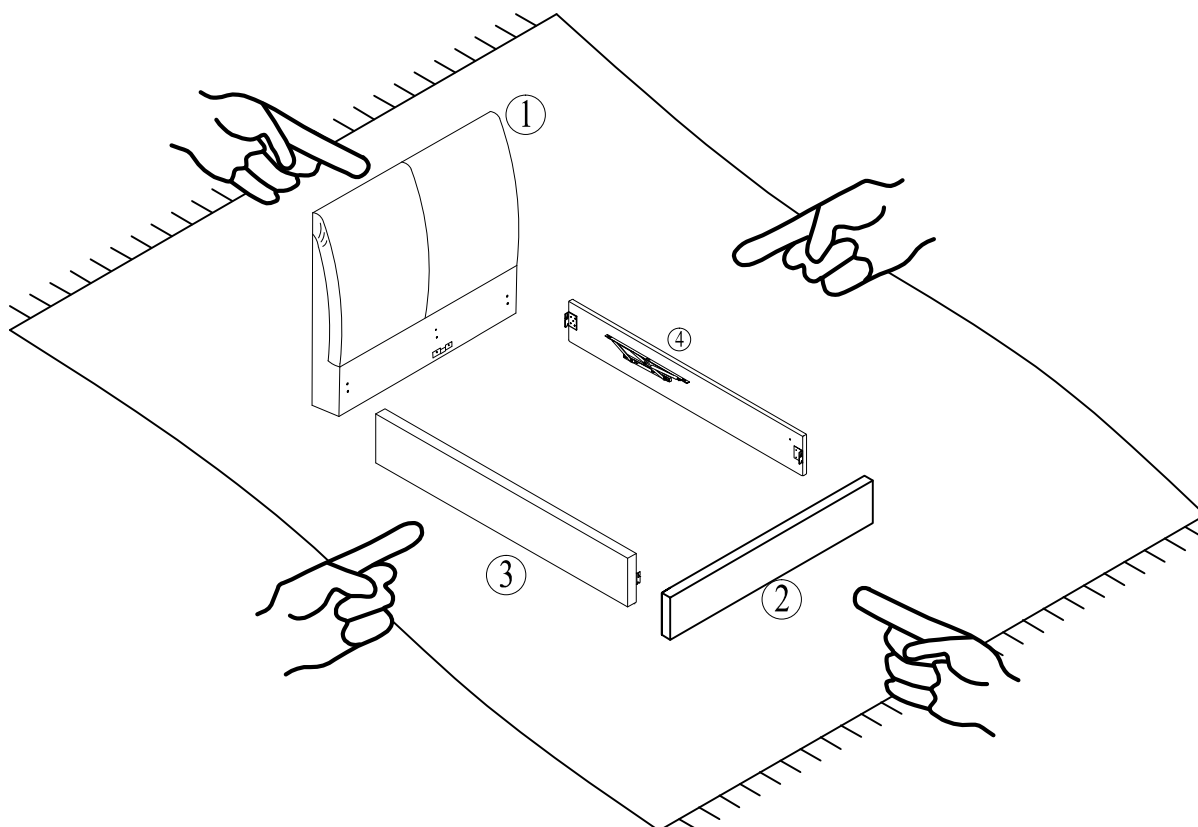
MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

Do not attempt to move the bed whilst the frame is in the upright position.

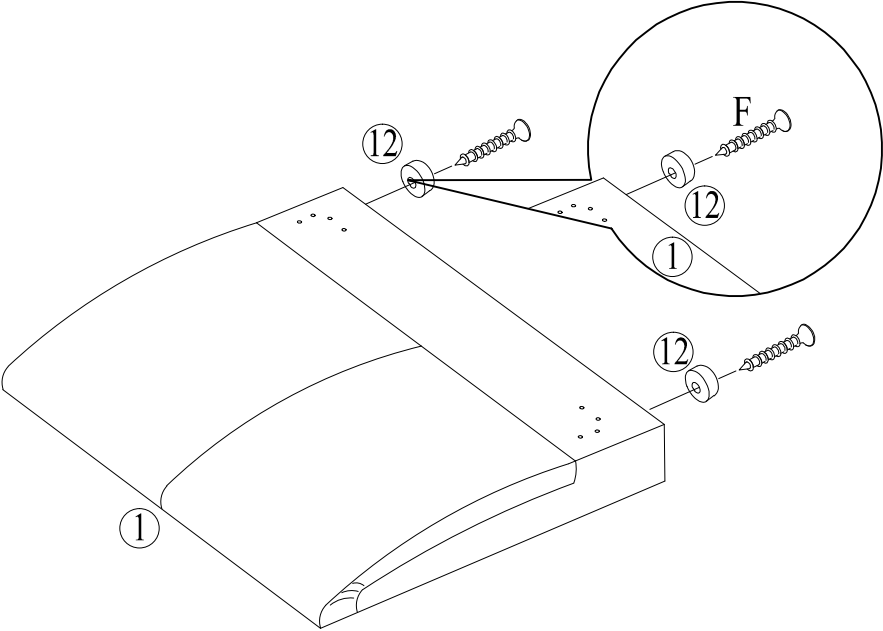


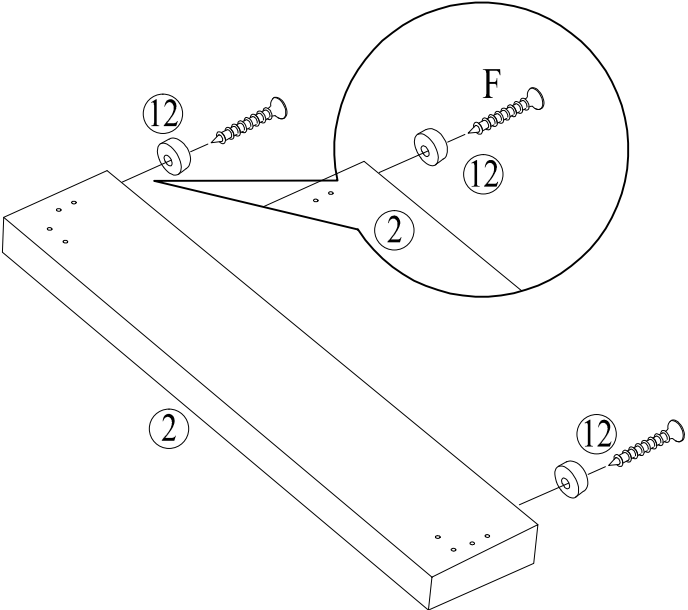
Layout Parts on Soft Surface

Layout all Part on a soft surface i.e. Rug, Carpet or Packaging Carton.

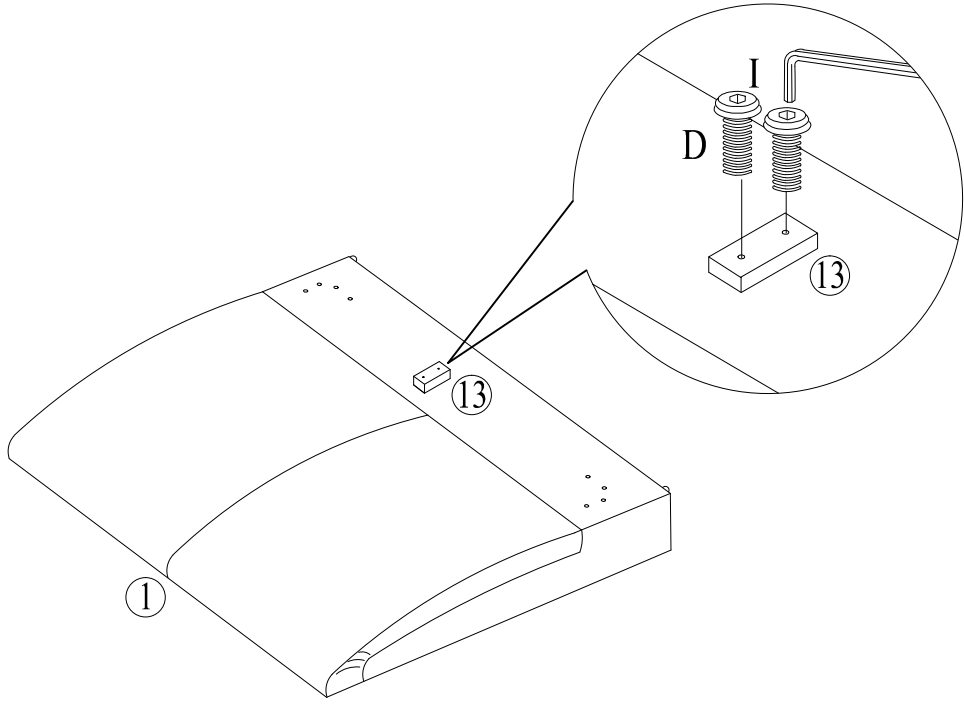


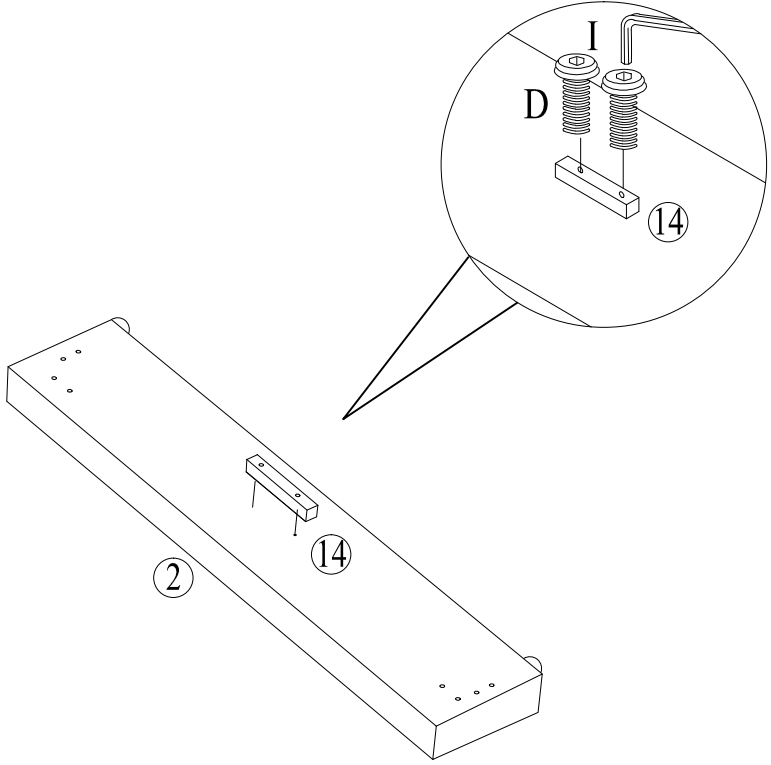
MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

STEP 1	PARTS REQUIRED
	<p>1. Headboard x 1 12. Feet x 2 F. Screw x 2</p>

STEP 2	PARTS REQUIRED
	<p>2. Headboard x 1 12. Feet x 2 F. Screw x 2</p>

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

STEP 3	PARTS REQUIRED
 <p>The diagram illustrates the installation of the headboard support wood (13) onto the headboard (1). A circular inset provides a detailed view of the hardware: two 45mm M8 bolts (D) are inserted through the support wood (13) into the headboard (1), and each is secured with a 5mm Allen key (I).</p>	<p>1. Headboard x 1 13. Headboard Support Wood x 1 D. 45mm M8 Bolt x 2 I. 5mm Allen Key x 1</p>

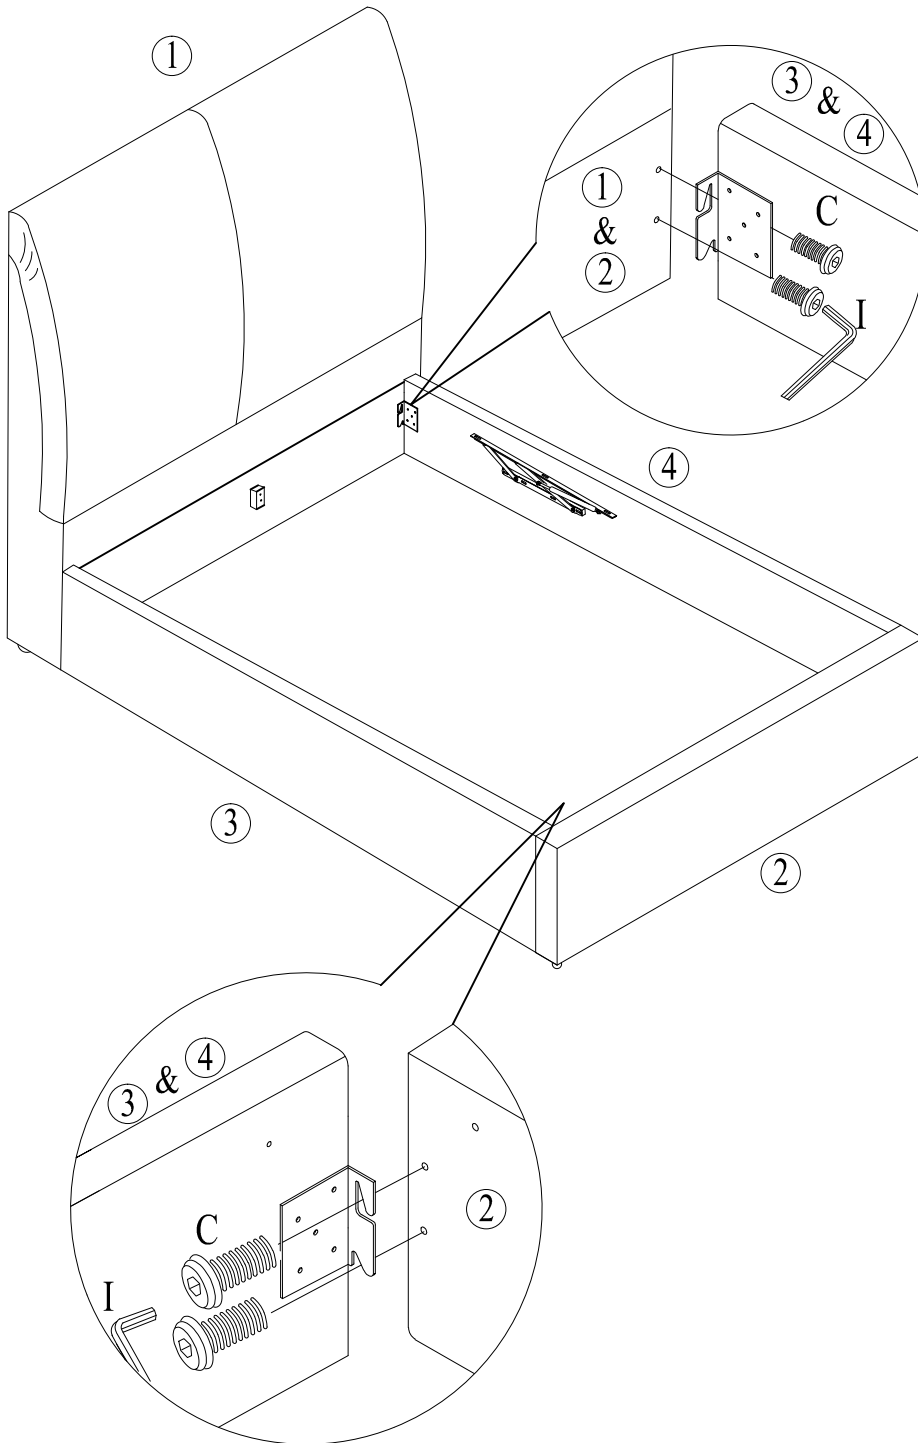
STEP 4	PARTS REQUIRED
 <p>The diagram illustrates the installation of the footboard support (14) onto the footboard (2). A circular inset provides a detailed view of the hardware: two 45mm M8 bolts (D) are inserted through the support (14) into the footboard (2), and each is secured with a 5mm Allen key (I).</p>	<p>2. Headboard x 1 14. Footboard Support x 1 D. 45mm M8 Bolt x 2 I. 5mm Allen Key x 1</p>

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

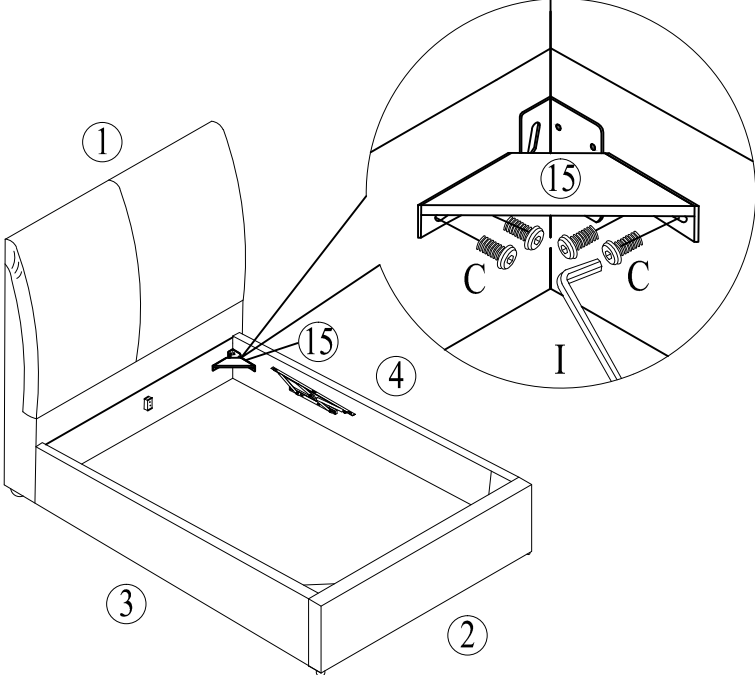
STEP 5

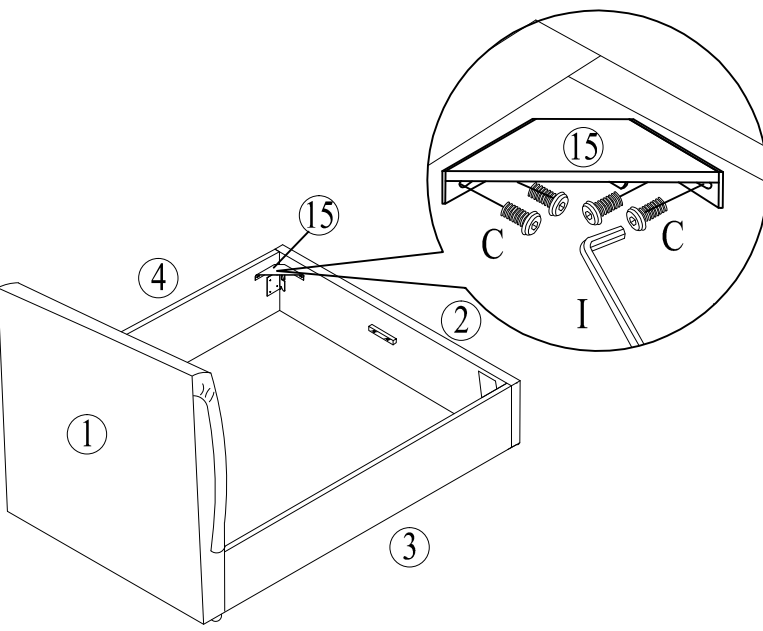
PARTS REQUIRED

- 3. Side Rails (Left) x 1
- 4. Side Rails (Right) x 1
- C. 30mm M8 Bolt x 8
- I. 5mm Allen Key x 1

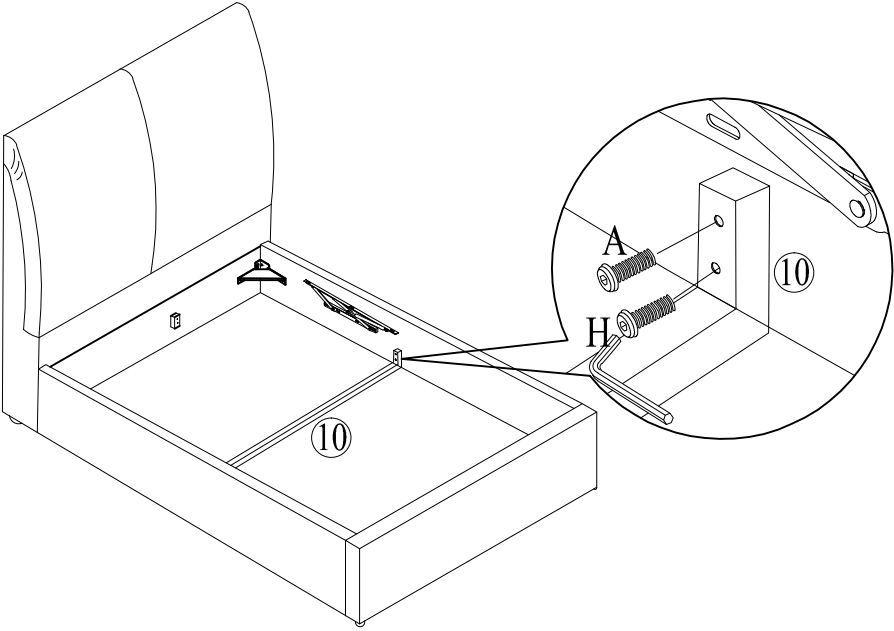


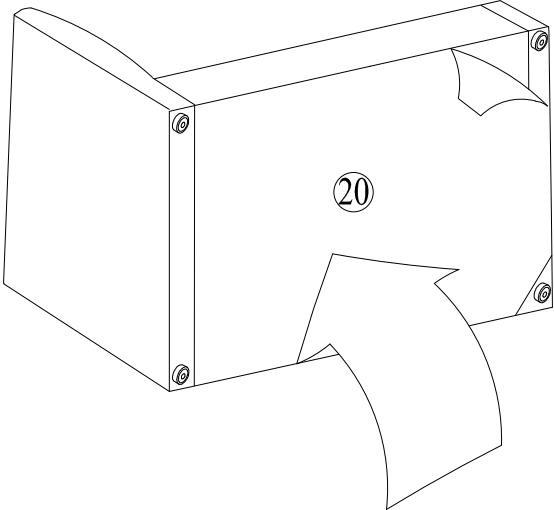
MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

STEP 6	PARTS REQUIRED
	<p>15. Corner Brackets x 2 C. 30mm M8 Bolt x 8 I. 5mm Allen Key x 1</p>

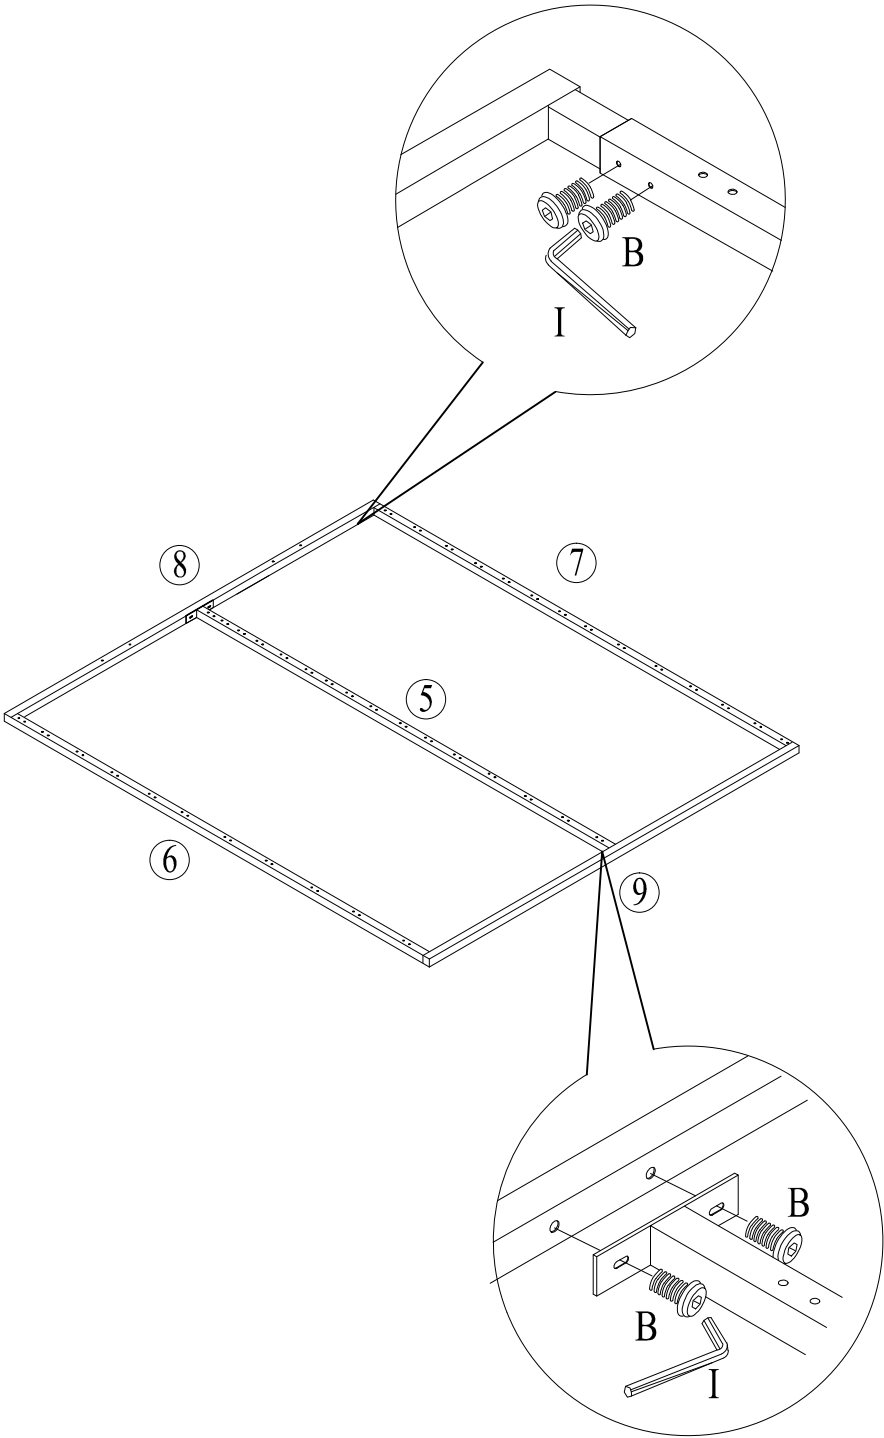
STEP 7	PARTS REQUIRED
	<p>15. Corner Brackets x 2 C. 30mm M8 Bolt x 8 I. 5mm Allen Key x 1</p>

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

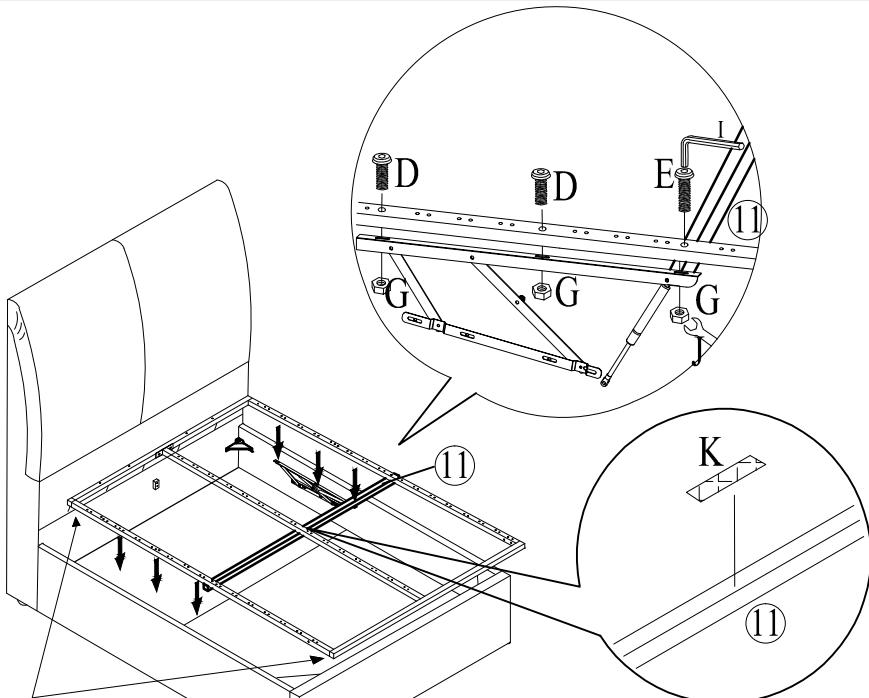
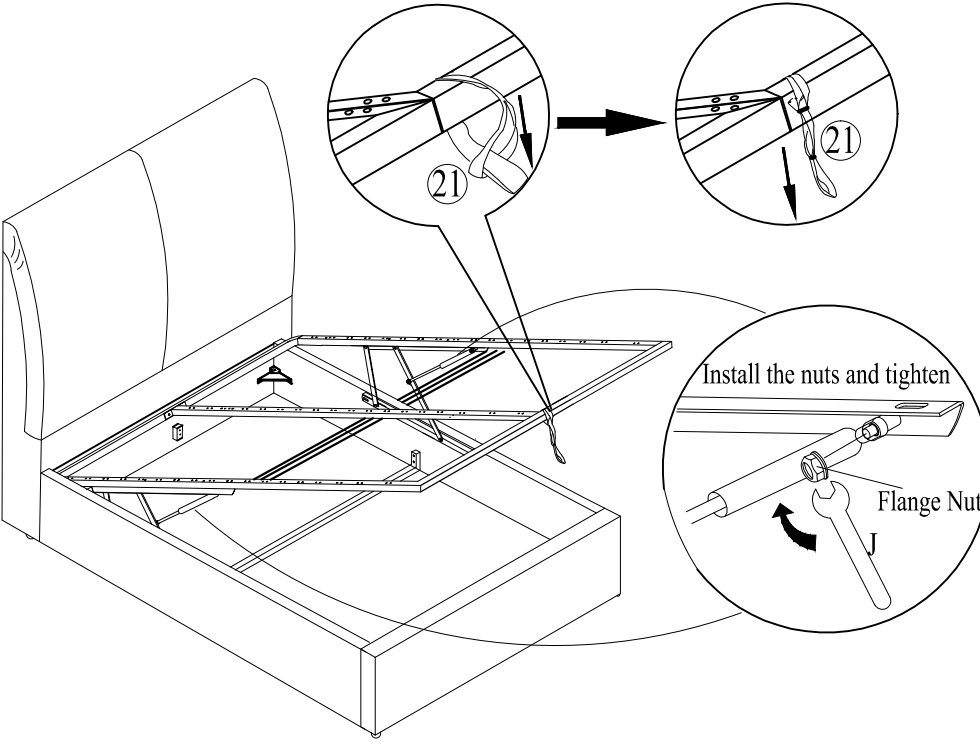
STEP 8	PARTS REQUIRED
 <p>The diagram illustrates the assembly of the center support bar. A perspective view shows the bed frame with a curved headboard and a center support bar (labeled 10) being inserted into the middle of the bed. A circular inset provides a close-up of the bar's connection to the bed's side rails. In this inset, a 40mm M6 bolt (labeled A) is shown passing through the side rail and the support bar. A 4mm Allen key (labeled H) is used to tighten the bolt from the underside of the bed.</p>	<p>10. Center Support Bar x 1 A. 40mm M6 Bolt x 4 H. 4mm Allen Key x 1</p>

STEP 9	PARTS REQUIRED
 <p>The diagram shows the non-woven fabric (labeled 20) being attached to the bed frame. The fabric is shown as a large sheet with a curved arrow indicating it is being pulled over the side of the bed. Small circles with a registered trademark symbol (®) are shown at the corners of the bed frame, indicating where the fabric is secured.</p>	<p>20. Non Woven Fabric x 1</p>

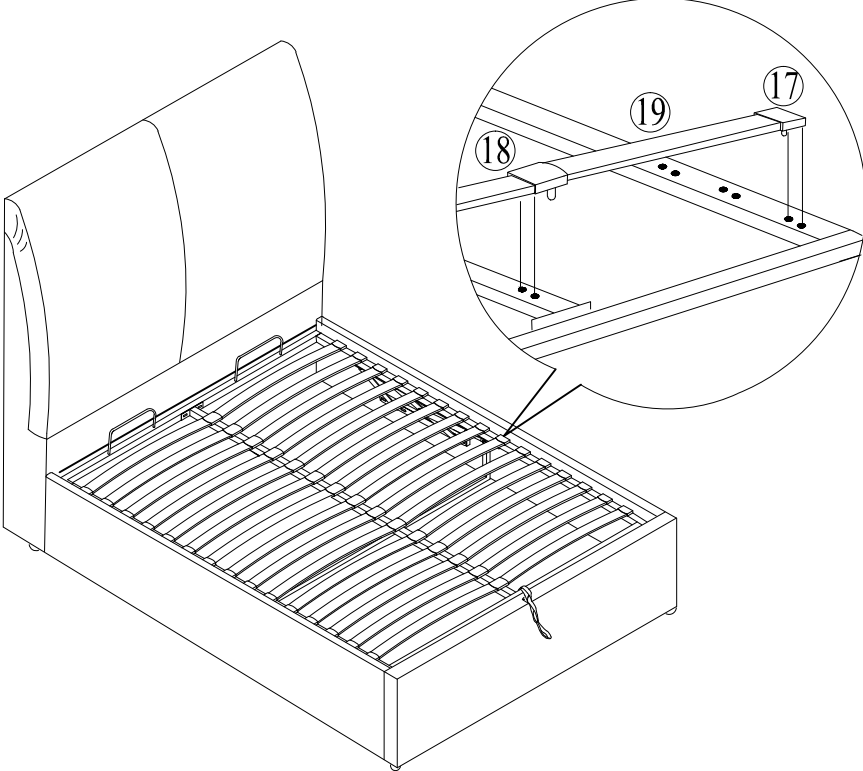
MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

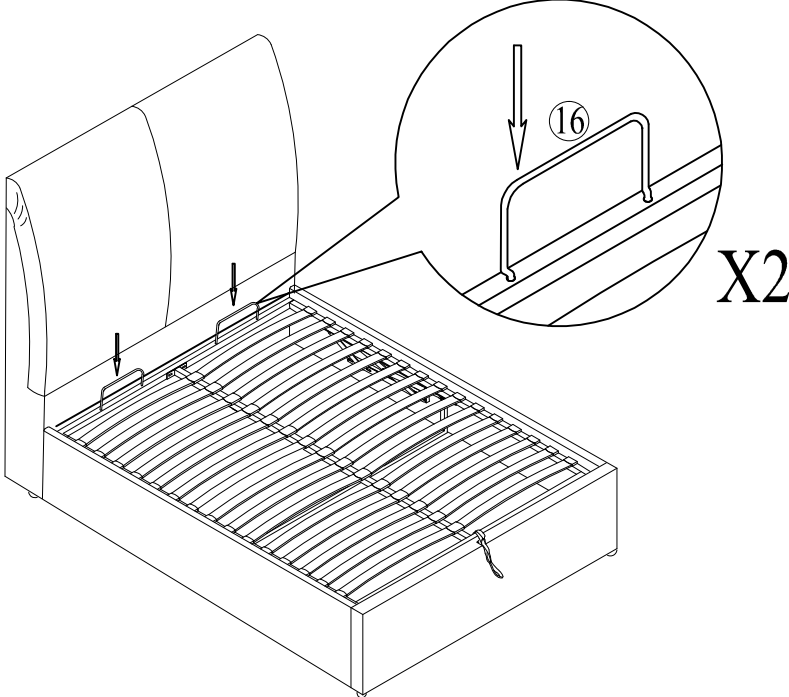
STEP 10	PARTS REQUIRED
 <p>The diagram illustrates the assembly of the metal frame for the bed. It shows a rectangular frame with four main sections: a support bar (5), a metal left frame (6), a metal right frame (7), and a metal frame (headboard) (8). A metal frame (footboard) (9) is also shown. Two circular callouts provide detailed views of the corner joints. The top callout shows a support bar (5) being attached to a metal left frame (6) and a metal right frame (7) using a 16mm M8 bolt (B) and a 5mm Allen key (I). The bottom callout shows a metal frame (headboard) (8) being attached to a metal frame (footboard) (9) using a 16mm M8 bolt (B) and a 5mm Allen key (I).</p>	<p>5. Support Bar x 1</p> <p>6. Metal Left Frame (L) x 1</p> <p>7. Metal Right Frame (R) x 1</p> <p>8. Metal Frame (Headboard) x 1</p> <p>9. Metal Frame (Footboard) x 1</p> <p>B. 16mm M8 Bolt x 12</p> <p>I. 5mm Allen Key x 1</p>

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

STEP 11	PARTS REQUIRED
 <p data-bbox="140 1003 526 1131">Please ensure that the gap between the headboard, footboard and the metal frame are evenly spaced before tightening the bolts.</p> <p data-bbox="722 965 1129 1097">Please take note, the non-slip pad (Part K) should stick in the center of the horizontal support bar (Part 5) which overlaps with support bar (Part 11)</p>	<ul style="list-style-type: none"> 11. Cross Railx 1 D. 45mm M8 Bolt x 4 E. 70mm M8 Bolt x 2 G. Nut (Hinge) x 6 I. 5mm Allen Key x 1 J. Spanner x 1
STEP 12	PARTS REQUIRED
 <p data-bbox="842 1624 1093 1653">Install the nuts and tighten</p> <p data-bbox="1018 1758 1125 1787">Flange Nut</p> <p data-bbox="1018 1803 1029 1825">J</p>	<ul style="list-style-type: none"> 21. Belt x 1

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

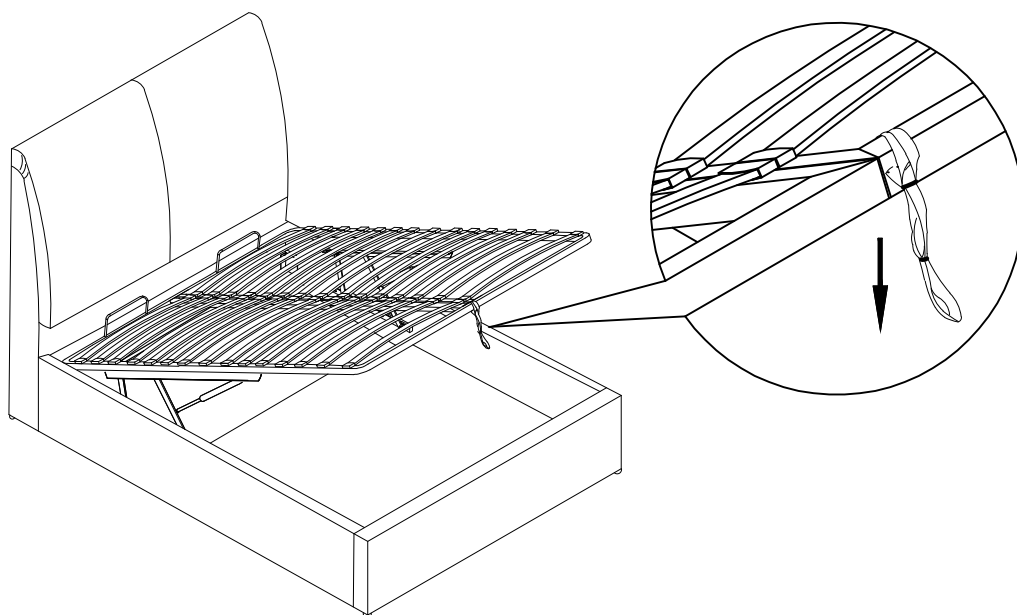
STEP 13	PARTS REQUIRED
	<ul style="list-style-type: none">17. Single plastic cap side 4'6": 28pcs / 5' : 32pcs18. Double plastic cap side 4'6": 14pcs / 5' : 16pcs19. Bent slats 4'6": 28pcs / 5' : 32pcs

STEP 14	PARTS REQUIRED
	<ul style="list-style-type: none">16. Mattress Stopper x 2

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS

Complete Assembly

Your bed frame is now completely assembled but the ottoman will not operate correctly unless a mattress is placed on the slat frame and will not stay shut unless the mattress remains in position. To position the mattress on the slat frame, simply place the mattress on top of the slat frame whilst it is in the up (open) position.



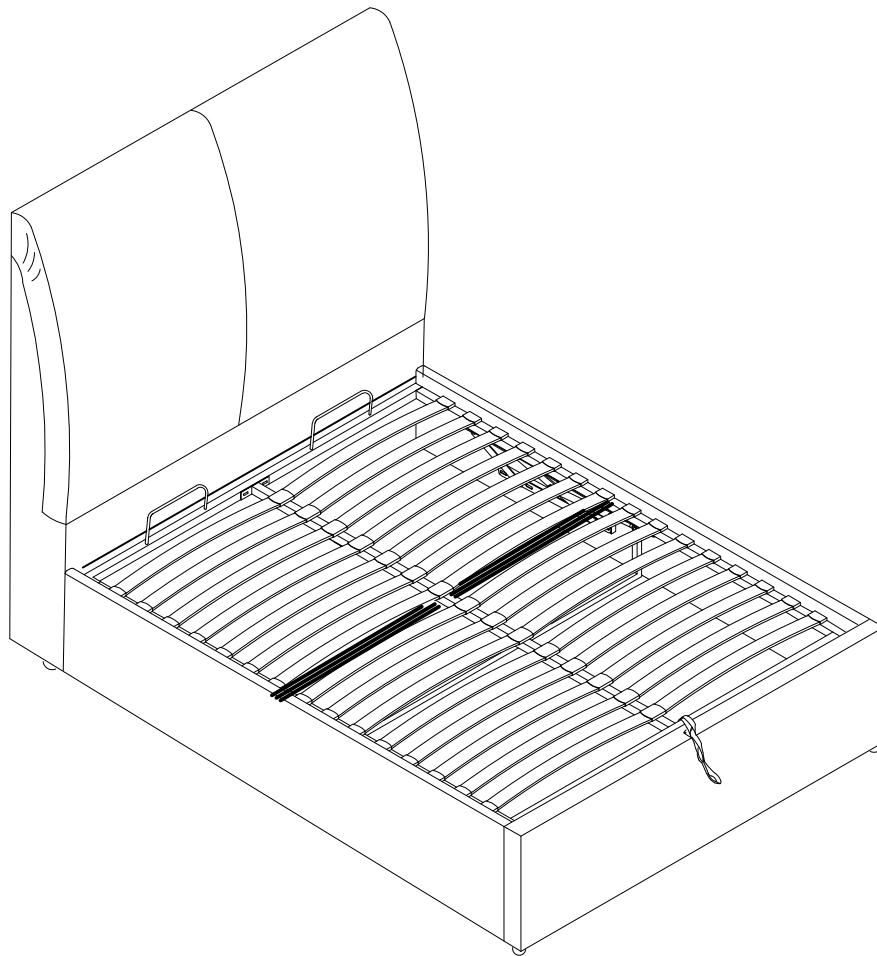
Lift with the strap (16) and close as per guidance on page 7. The strap should always be accessible. Take care not to lean over the bed when lifting, if the mattress is thin and light, the frame may rise quickly. The speed of closing will also depend on the weight of the mattress so always keep fingers well clear of the metal frame.

PLEASE NOTE - It takes a lot of force to make the initial movement of the ottoman- THIS IS A DESIGN FEATURE OF THE PRODUCT SO THAT IT DOES NOT FALL SHUT- and the nearer to being closed the ottoman is, the easier it is to move. When the ottoman is almost shut, keep finger and hand clear and it will close completely under its own weight.

Tip for difficulty with compression:

If you are experiencing difficulty with the initial compression try fitting one piston at a time (following the Assembly Instructions) then press down on the side of the frame with the piston fitted - this acts like a big lever (The weight of the mattress can be used to supplement the load exerted). Effectively you are doubling the amount of force applied, because you have halved the resistance offered by the pistons. It can take slightly more effort than you might feel comfortable applying to the bed frame at first.

MONTREL OTTOMAN BED ASSEMBLY INSTRUCTIONS



Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.

Keep instructions for future reference

Supplied By

GFW The Furniture Warehouse

Waterside Distribution Centre

Waterside Business Park

Johnson Road

Eccleshill

Lancashire

BB3 3RT